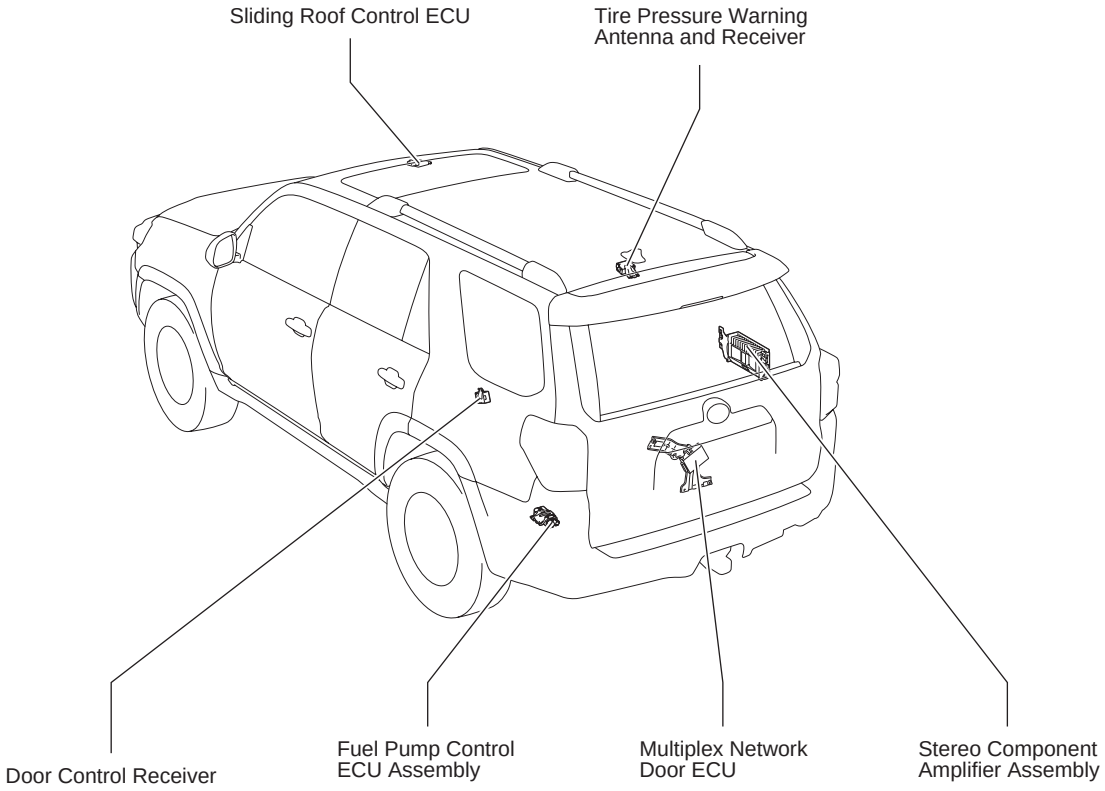
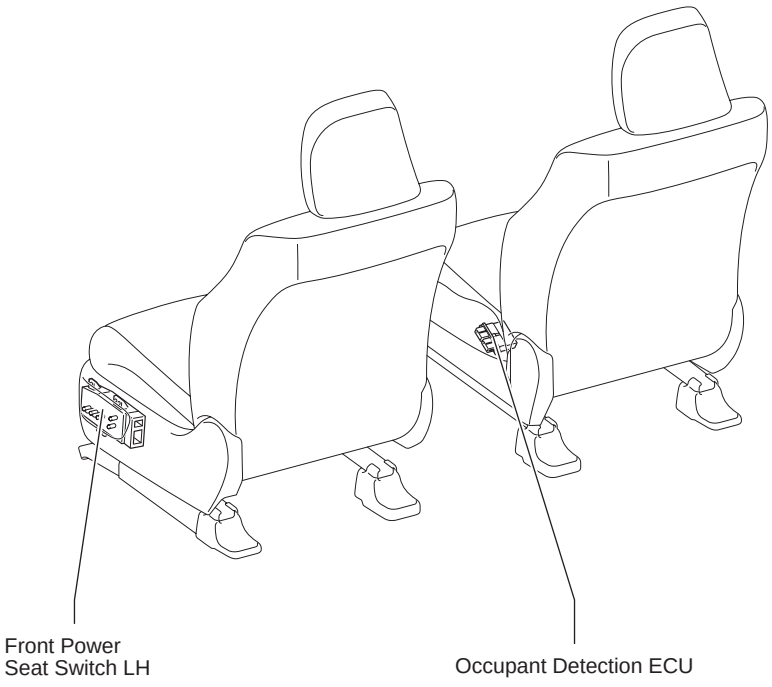
## [Body]


Sliding Roof Control ECU
Tire Pressure Warning Antenna and Receiver
Door Control Receiver
Fuel Pump Control ECU Assembly
Multiplex Network Door ECU
Stereo Component Amplifier Assembly

## [Seat]


Front Power Seat Switch LH
Occupant Detection ECU