



B11
B5
B6
B12
B15
B9
B10
B3
B8
B7
B20
B17
B16
B1
B21
B4
B13
B2
B19
B14

B	1	Fuel Injector Assembly No. 1
B	2	Fuel Injector Assembly No. 2
B	3	Fuel Injector Assembly No. 3
B	4	Fuel Injector Assembly No. 4
B	5	Fuel Injector Assembly No. 5
B	6	Fuel Injector Assembly No. 6
B	7	Ignition Coil Assembly No. 1
B	8	Ignition Coil Assembly No. 2
B	9	Ignition Coil Assembly No. 3
B	10	Ignition Coil Assembly No. 4
B	11	Ignition Coil Assembly No. 5
B	12	Ignition Coil Assembly No. 6
B	13	Throttle with Motor Body Assembly
B	14	Crank Position Sensor
B	15	Purge VSV
B	16	Cam Timing Oil Control Valve (Bank 1 Intake Side)
B	17	Cam Timing Oil Control Valve (Bank 1 Exhaust Side)
B	19	Cam Timing Oil Control Valve (Bank 2 Intake Side)
B	20	Cam Timing Oil Control Valve (Bank 2 Exhaust Side)
B	21	VVT Sensor (Bank 1 Intake Side)


B 1
Gray

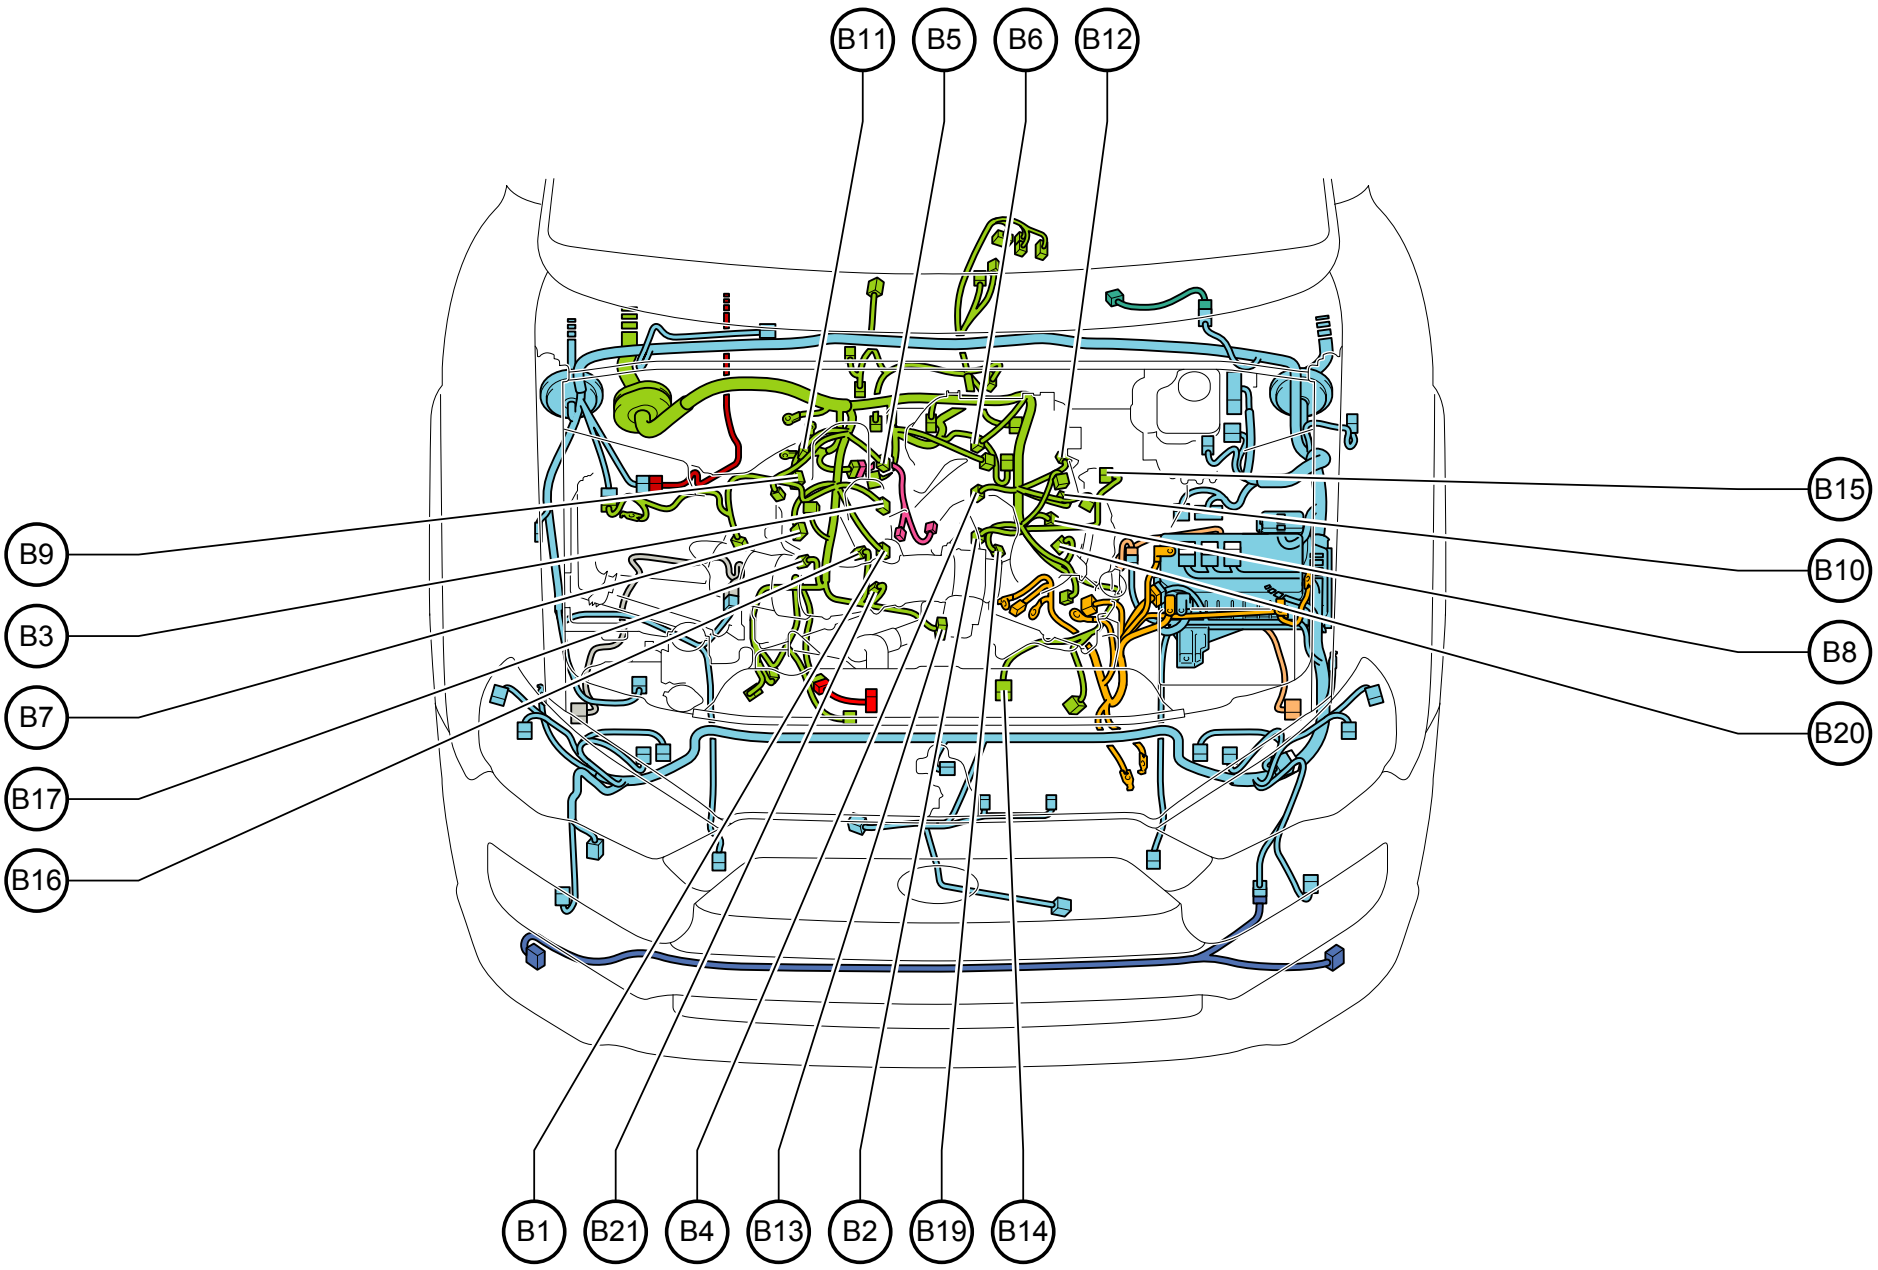


B 2
Gray




B 3
Gray




B 4
Gray




B 5
Gray




B 6
Gray

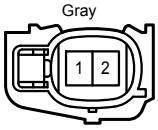


B 7
Black




B 8
Black




B 9
Black




B 10
Black




B 11
Black




B 12
Black




B 13
Black

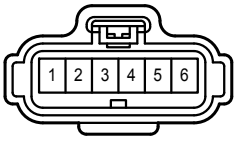

B 14
Black

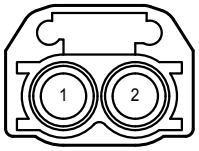

B 15
Black

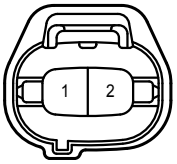

B 16
Black



B 17
Black



B 19
Black



B 20
Black



B 21
Black

