


F9
F8
F6
F1
F2
F5
F3
G18
E5
E9
E7
E6
E8
E4
G11
G10
G12
G14
G15
G16
G9
E1
E2
E3
G7
G4
G3
G6
F4
G17
G8

E 1 Front Door Outside Handle Assembly LH
E 2 Front Courtesy Light Assembly LH
E 3 Front Door Lock Assembly LH
E 4 Side Airbag Sensor Assembly LH
E 5 Power Window Regulator Motor Assembly LH
E 6 Front No. 1 Speaker Assembly LH
E 7 Outer Rear View Mirror Sub-Assembly LH
E 8 Power Window Regulator Master Switch Assembly
E 9 Outer Mirror Switch Assembly

F 1 Power Window Regulator Motor Assembly RH
F 2 Side Airbag Sensor Assembly RH
F 3 Front Door Lock Assembly RH
F 4 Front Courtesy Light Assembly RH
F 5 Front Door Outside Handle Assembly RH
F 6 Power Window Regulator Switch Assembly
F 8 Outer Rear View Mirror Sub-Assembly RH
F 9 Front No. 1 Speaker Assembly RH

G 3 Front Seat Inner Belt Assembly RH
G 4 Seat Heater RH
G 6 No. 2 Fuel Sender Gage Assembly
G 7 Fuel Suction Tube with Pump & Gage Assembly
G 8 Canister Pump Module
G 9 Rear Speed Sensor RH
G 10 Rear Window Defogger (Back Window Glass)
G 11 Curtain Shield Airbag Assembly RH
G 12 Fuel Pump Control ECU Assembly
G 14 Rear Airbag Sensor RH
G 15 Rear Speaker Assembly RH
G 16 No. 2 Side Airbag Sensor Assembly RH
G 17 Front Seat Outer Belt Assembly RH
G 18 Front Door Courtesy Light Switch Assembly RH


E 1
White

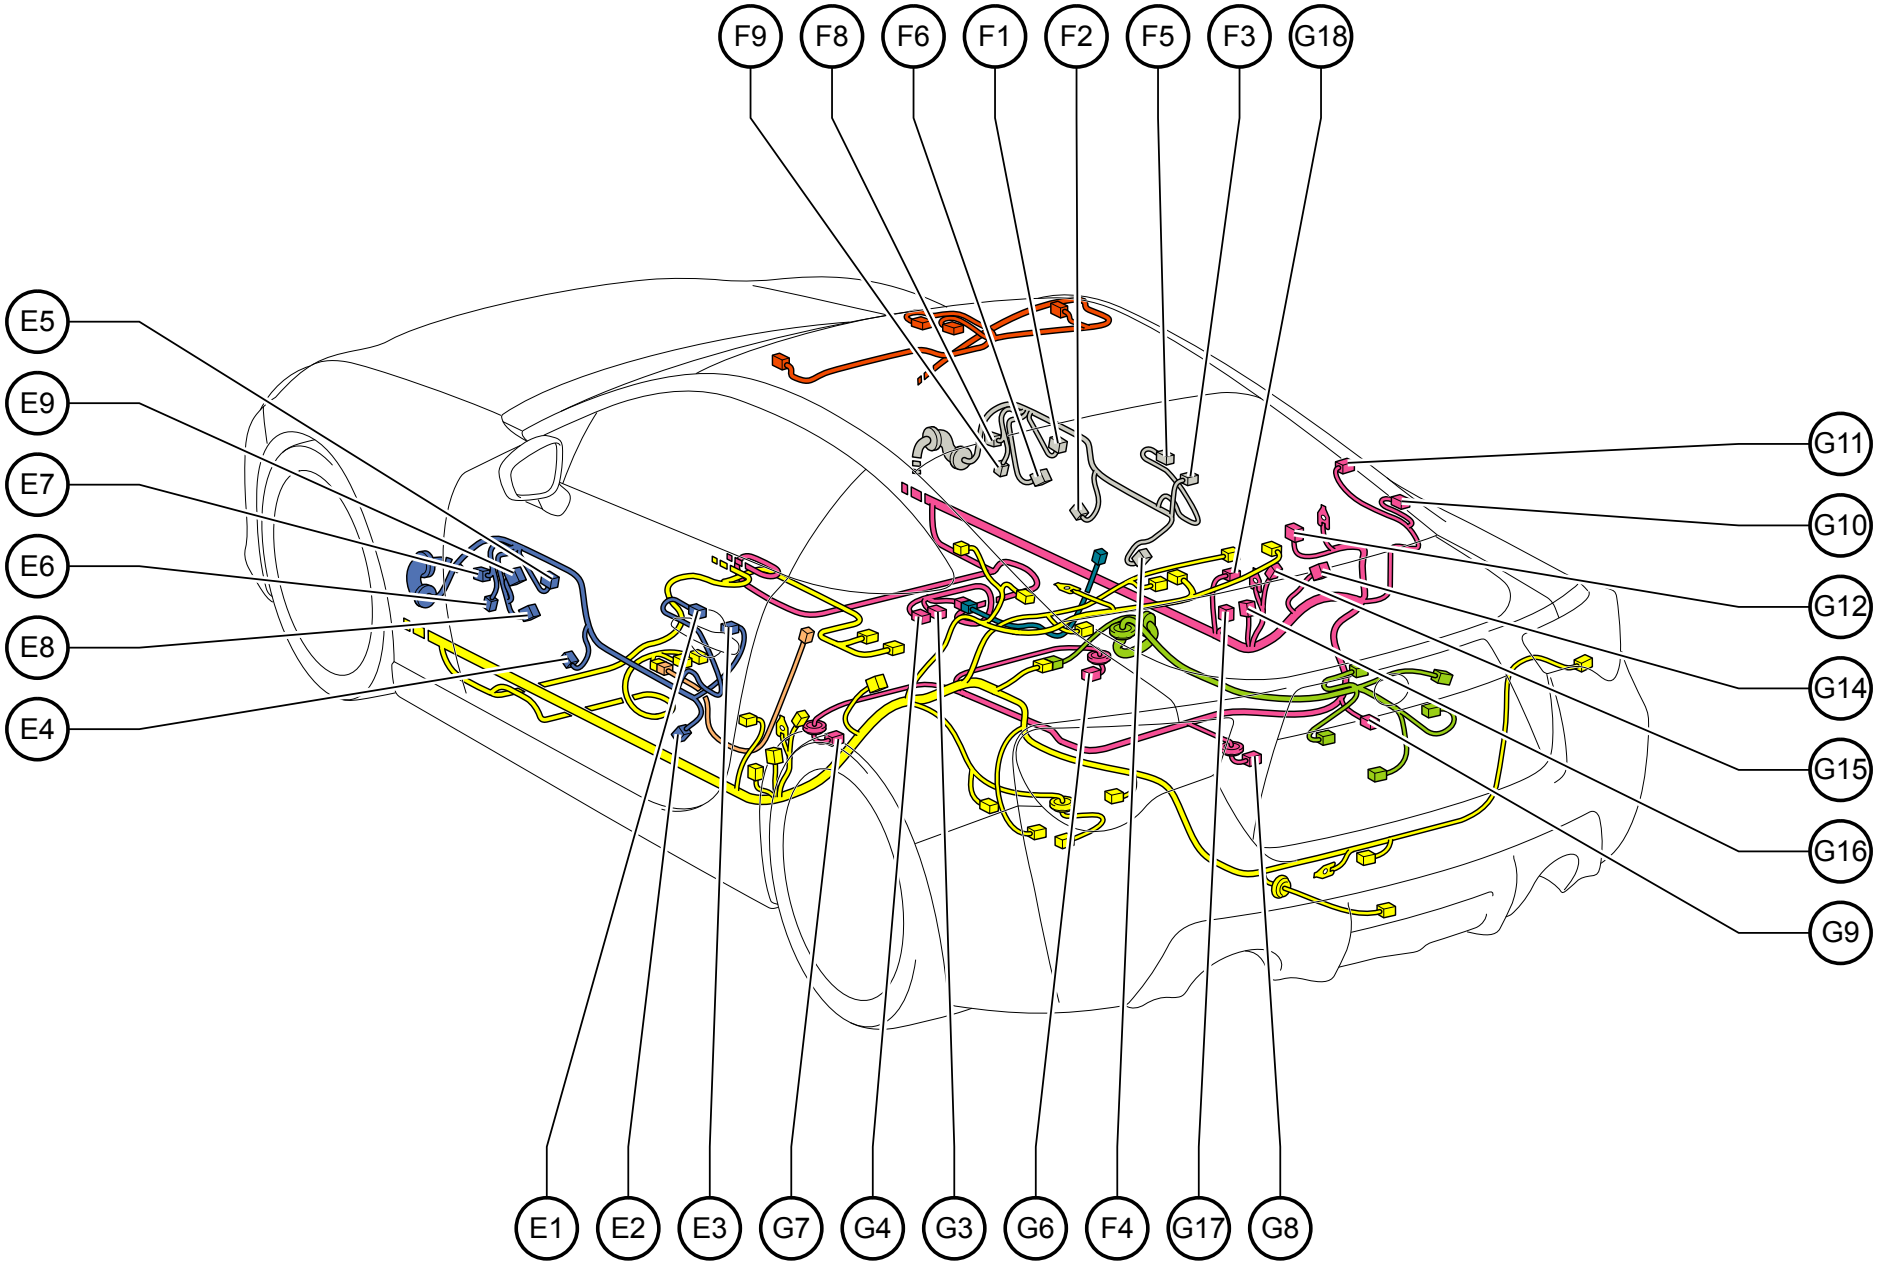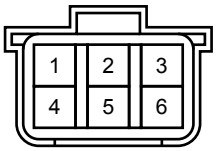

E 2
White




E 3
White



E 4
White




E 5
White

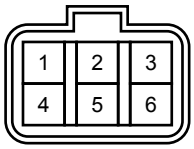


E 6
White




E 7
White




E 8
White

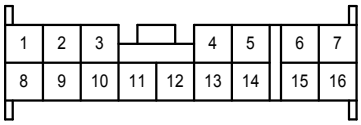

E 9
White




F 1
White

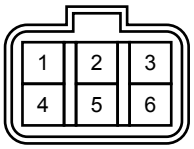

F 2
White




F 3
White




F 4
White




F 5
White

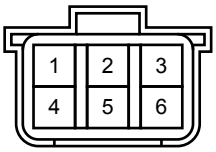

F 6
White

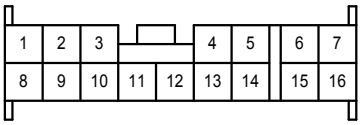


F 8
White




F 9
White




G 3
White




G 4
White




G 6
White

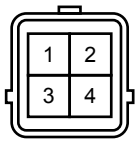


G 7
White

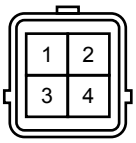

G 8
White

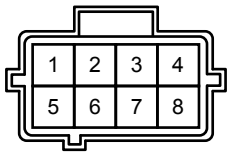


G 9
White




G 10
White




G 11
White




G 12
White




G 14
White




G 15
White



G 16
White



G 17
White



G 18
White

