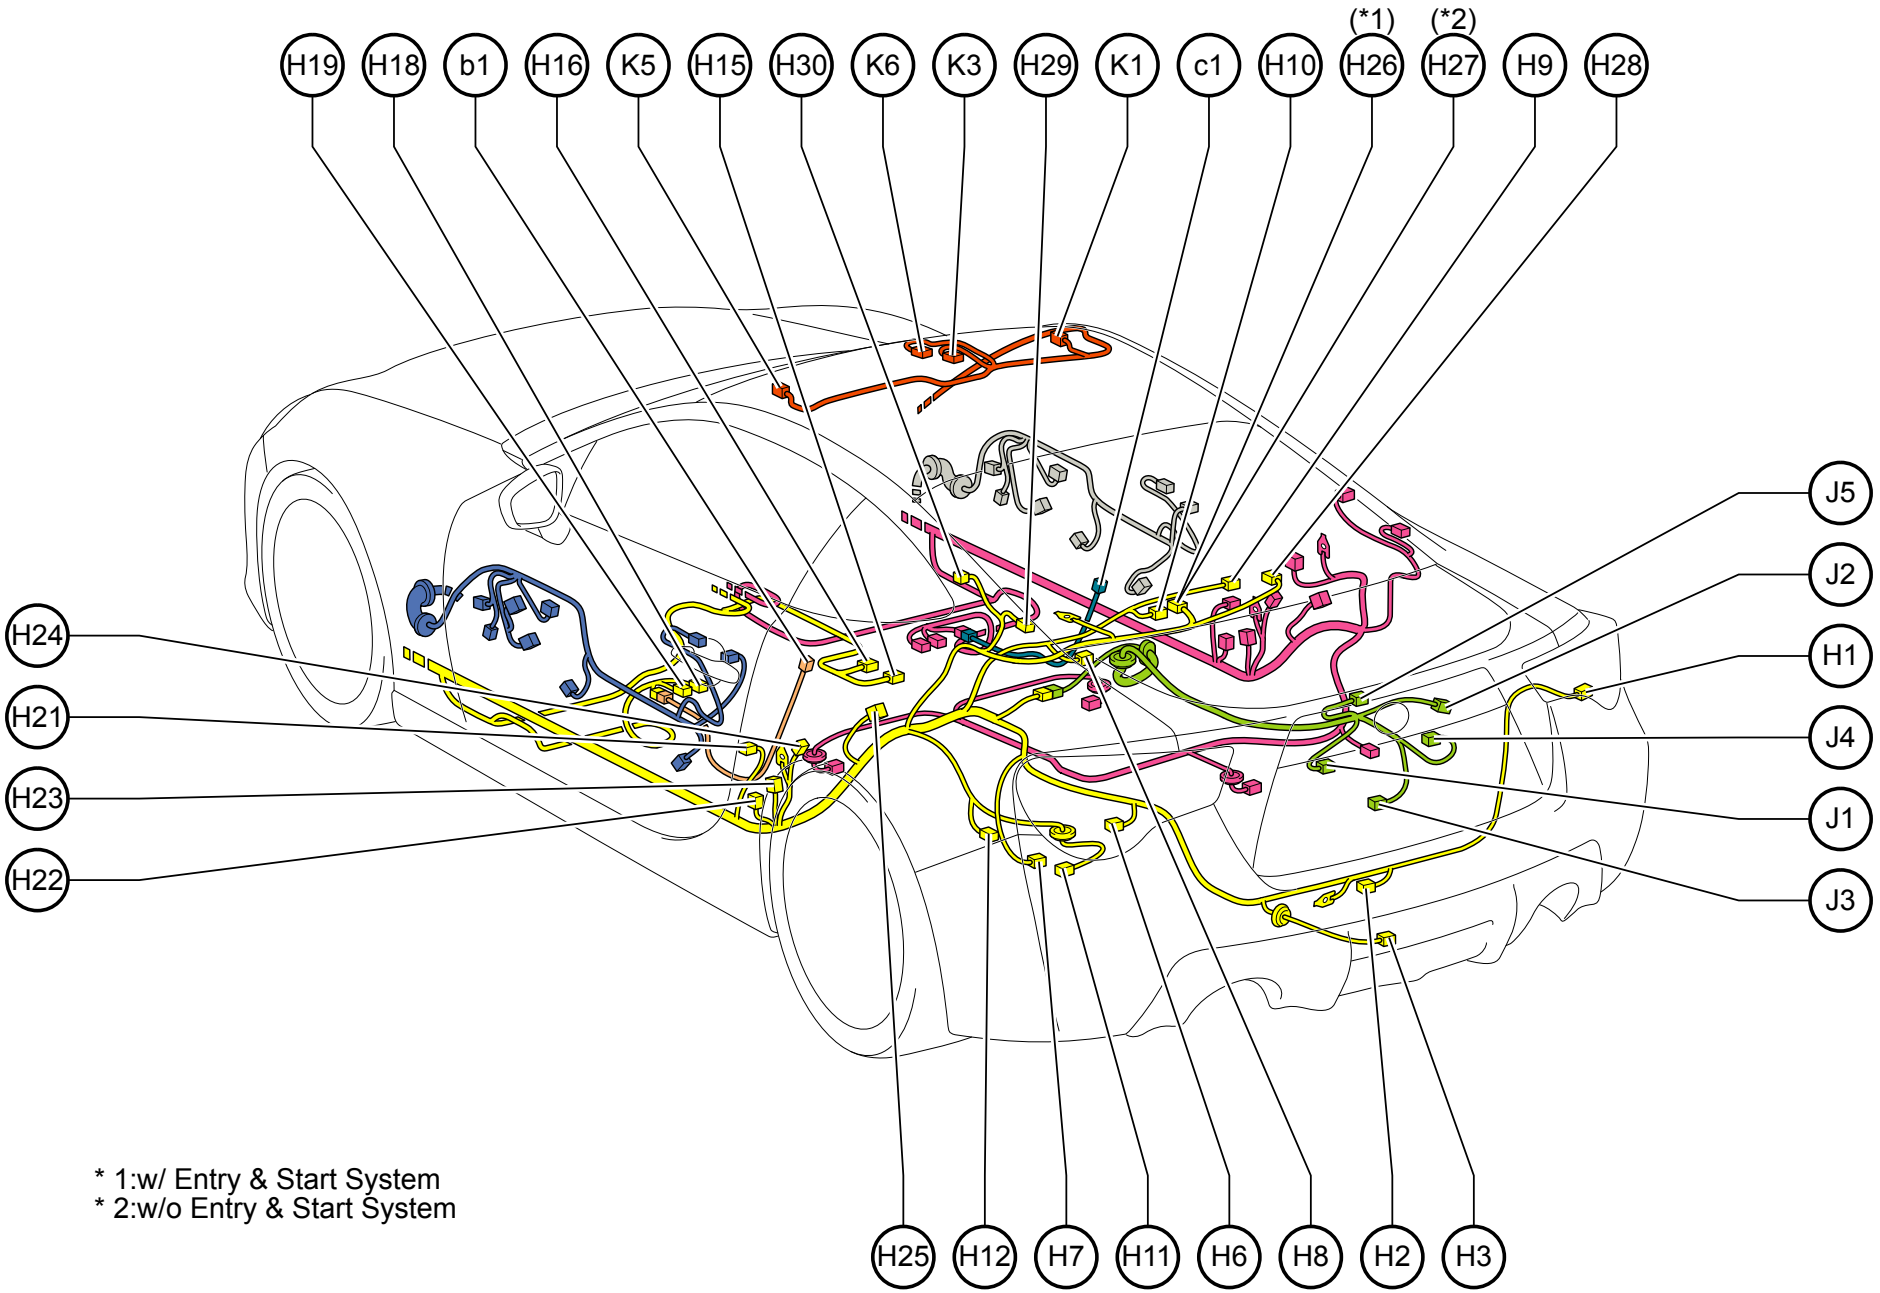


* 1:w/ Entry & Start System
* 2:w/o Entry & Start System

H 1 Rear Combination Light Socket and Wire Sub-Assembly RH
H 2 Rear Light Assembly
H 3 Electrical Key Antenna
H 6 Rear Combination Light Socket and Wire Sub-Assembly LH
H 7 Luggage Door Opening Cancel Switch Assembly
H 8 No. 1 Luggage Compartment Light Assembly
H 9 No. 3 Indoor Electrical Key Oscillator
H 10 Center Stop Light Assembly
H 11 Rear Height Control Sensor Sub-Assembly LH
H 12 Rear Speed Sensor LH
H 15 No. 2 Indoor Electrical Key Oscillator
H 16 No. 2 Airbag Sensor Assembly
H 18 Seat Heater LH
H 19 Front Seat Inner Belt Assembly LH
H 21 Front Door Courtesy Light Switch Assembly LH
H 22 Front Seat Outer Belt Assembly LH
H 23 No. 2 Side Airbag Sensor Assembly LH
H 24 Rear Speaker Assembly LH
H 25 Rear Airbag Sensor LH
H 26 Door Control Receiver
H 27 Door Control Receiver
H 28 Tire Pressure Warning ECU and Receiver
H 29 Rear Window Defogger (Back Window Glass)
H 30 Curtain Shield Airbag Assembly LH


J 1 License Plate Light Socket and Wire LH
J 2 Back Door Opener Switch Assembly
J 3 Luggage Door Closer Assembly
J 4 License Plate Light Socket and Wire RH
J 5 Rear Television Camera Assembly

K 1 Vanity Light Assembly RH (Visor Assembly RH)
K 3 Map Light Assembly
K 5 Vanity Light Assembly LH (Visor Assembly LH)
K 6 Inner Rear View Mirror Assembly


b 1 Front Seat Airbag Assembly LH

c 1 Front Seat Airbag Assembly RH


H 1
White




H 2
White




H 3
White

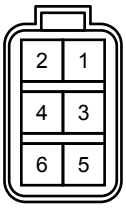


H 6
White




H 7
White




H 8
White




H 9
White




H 10
White

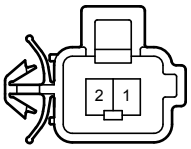


H 11
Black




H 12
White




H 15
White




H 16
Yellow



H 18
White




H 19
White




H 21
White




H 22
White




H 23
White




H 24
White




H 25
White




H 26
White



H 27
White




H 28
White



H 29
White




H 30
White




J 1
White



J 2
White




J 3
White



J 4
White




J 5
White



K 1
White




K 3
White




K 5
White



K 6
Black



b 1
White



c 1
White

