

* 7:Before Jul. 2013 Production
* 9:Before May 2014 Production
* 11:Before Jun.2016 Production

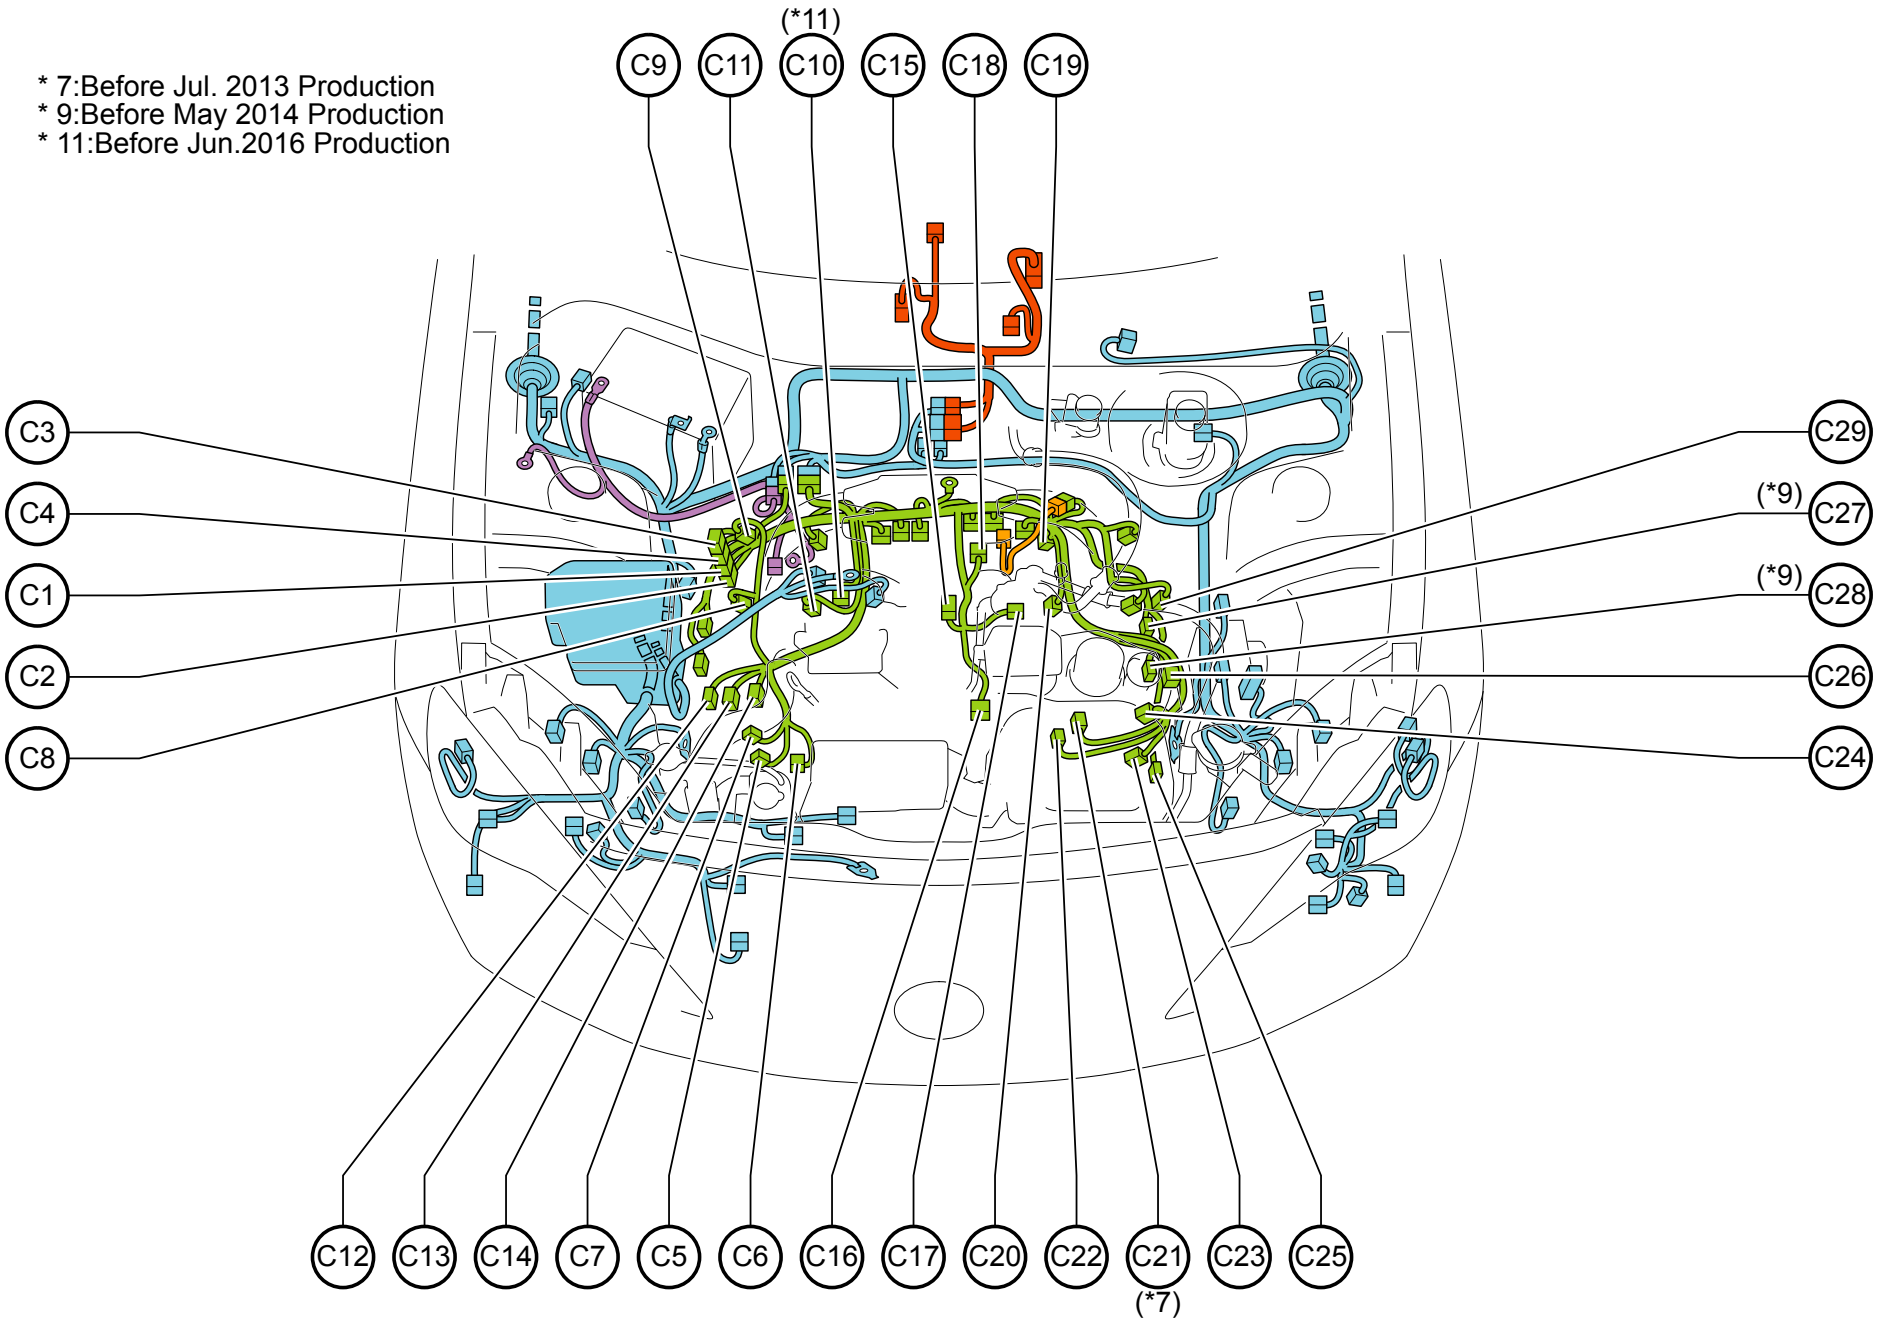


C 1 Injector Driver (EDU)
C 2 Injector Driver (EDU)
C 3 Injector Driver (EDU)
C 4 Injector Driver (EDU)
C 5 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
C 6 VVT Sensor (Camshaft Position Sensor) (Bank 1 Exhaust Side)
C 7 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
C 8 Fuel Injector Assembly (for Port Injection No. 1)
C 9 Fuel Injector Assembly (for Port Injection No. 3)
C 10 Fuel Pressure Sensor
C 11 Fuel Injector Assembly (for Direct Injection No. 1)
C 12 VVT Sensor (Camshaft Position Sensor) (Bank 1 Intake Side)
C 13 Heated Oxygen Sensor (Bank 1 Sensor 2)
C 14 Wide Range Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 15 Throttle Body with Motor Assembly
C 16 Intake Mass Air Flow Meter Sub-Assembly
C 17 Compressor with Magnet Clutch
C 18 Air Pressure Sensor Assembly
C 19 Fuel Injector Assembly (for Direct Injection No. 4)
C 20 Fuel Injector Assembly (for Direct Injection No. 2)
C 21 Engine Oil Temperature Sensor (Temperature Sensor)
C 22 Engine Oil Pressure Switch Assembly
C 23 Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
C 24 Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
C 25 VVT Sensor (Camshaft Position Sensor) (Bank 2 Exhaust Side)
C 26 VVT Sensor (Camshaft Position Sensor) (Bank 2 Intake Side)
C 27 Ignition Coil Assembly No. 4
C 28 Ignition Coil Assembly No. 2
C 29 Spill Control Valve (Fuel Pump Assembly)


C 1
Black

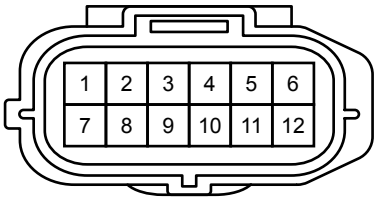


C 2
Gray

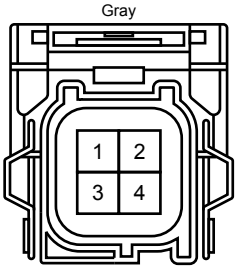


C 3
Black

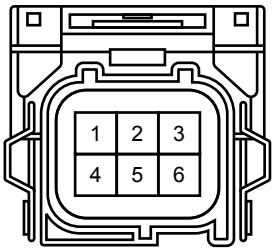


C 4
Gray

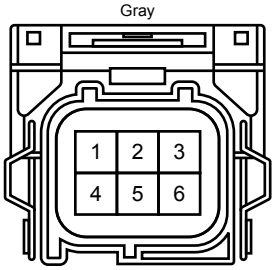


C 5
Black

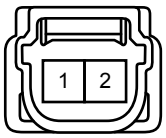

C 6
Gray

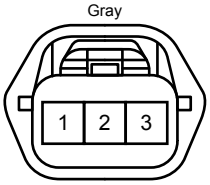

C 7
Black

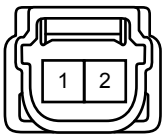


C 8
Dark Gray




C 9
Dark Gray




C 10
Black

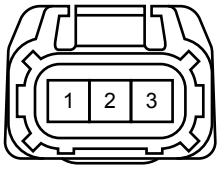


C 11
Gray

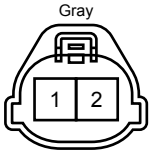


C 12
Gray

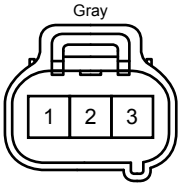


C 13
Black

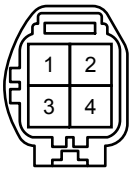


C 14
Gray

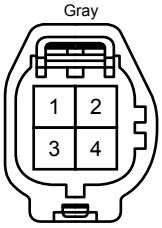

C 15
Black

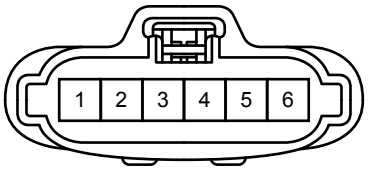

C 16
Black

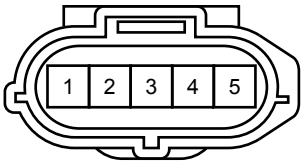


C 17
Gray




C 18
Black




C 19
Gray

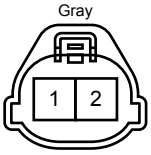


C 20
Gray

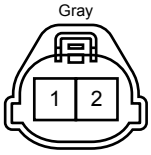


C 21
Black

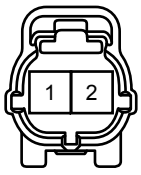


C 22
White




C 23
Black

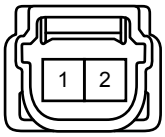


C 24
Black

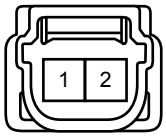

C 25
Gray

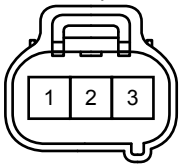

C 26
Gray

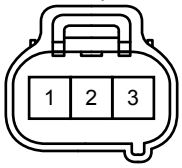

C 27
Black



C 28
Black



C 29
Black

