
* 3:Before Jul. 2013 Production
* 4:From Jul. 2013 Production
* 5:Before May 2014 Production
* 6:From May 2014 Production
* 8:From Jun. 2016 Production
* 9:From Jul. 2013 Production until Jul. 2016 Production

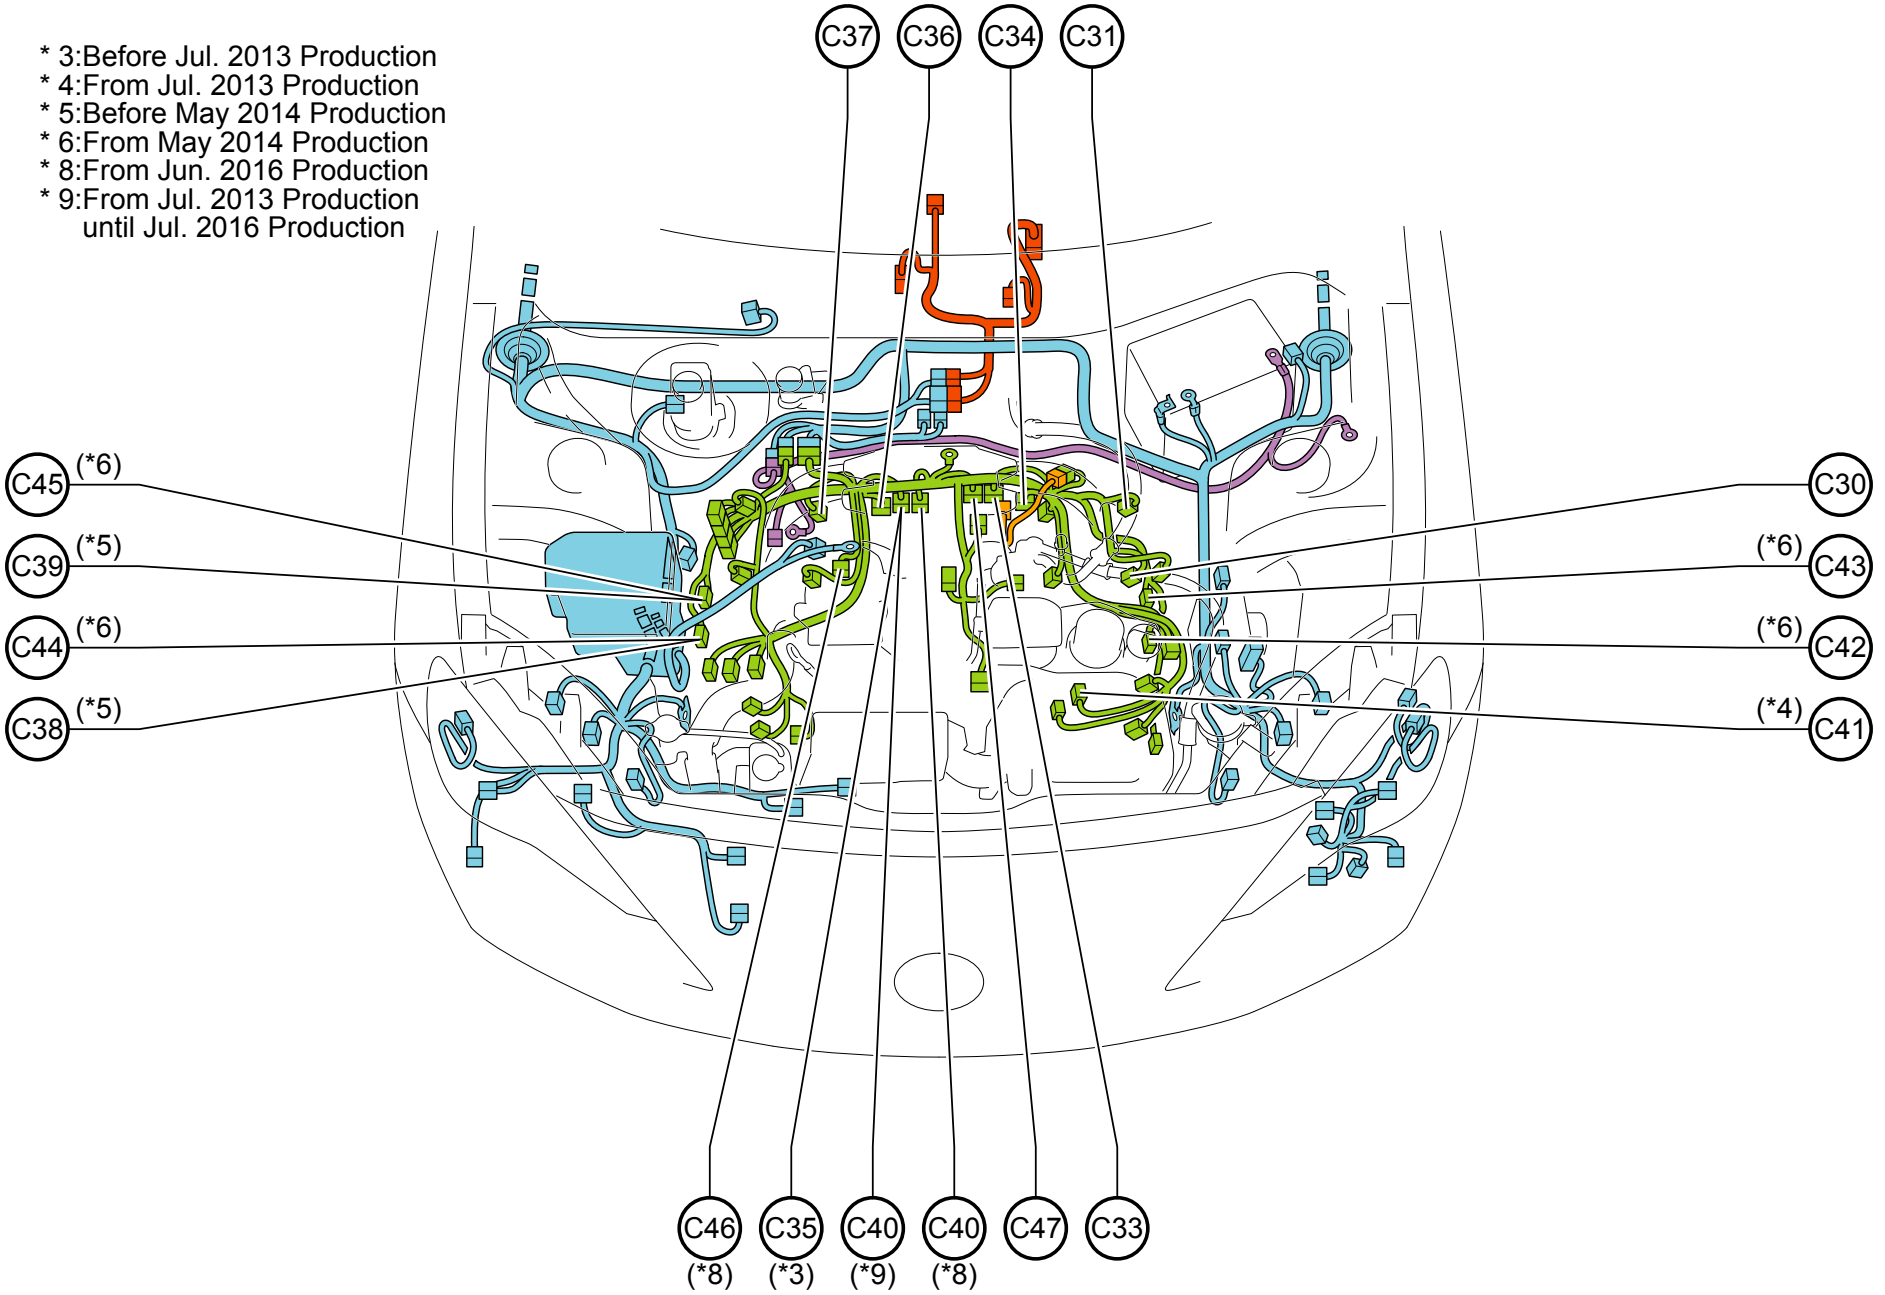


C 30 Fuel Injector Assembly (for Port Injection No. 2)
C 31 Fuel Injector Assembly (for Port Injection No. 4)
C 33 Crankshaft Position Sensor
C 34 Knock Control Sensor (Bank 2)
C 35 E.F.I. Engine Coolant Temperature Sensor
C 36 Knock Control Sensor (Bank 1)
C 37 Fuel Injector Assembly (for Direct Injection No. 3)
C 38 Ignition Coil Assembly No. 1
C 39 Ignition Coil Assembly No. 3
C 40 E.F.I. Engine Coolant Temperature Sensor
C 41 Engine Oil Temperature Sensor (Temperature Sensor)
C 42 Ignition Coil Assembly No. 2
C 43 Ignition Coil Assembly No. 4
C 44 Ignition Coil Assembly No. 1
C 45 Ignition Coil Assembly No. 3
C 46 Fuel Pressure Sensor
C 47 Crankshaft Position Sensor


C 30
Dark Gray



C 31
Dark Gray

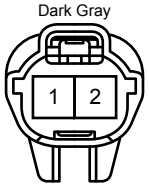


C 33
Gray

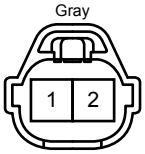

C 34
Black




C 35
Black

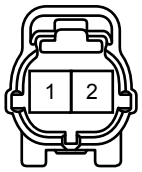


C 36
Black




C 37
Gray

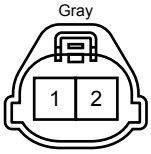


C 38
Black

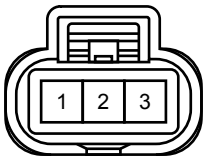


C 39
Black

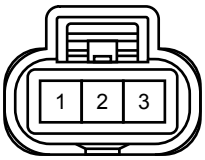


C 40
Black

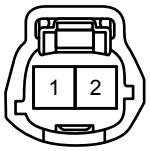


C 41
Black

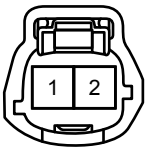


C 42
Black

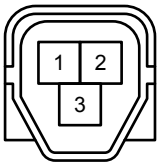


C 43
Black

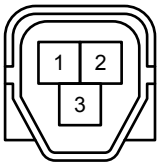


C 44
Black

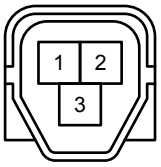

C 45
Black

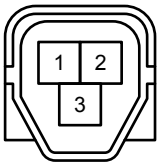

C 46
Black

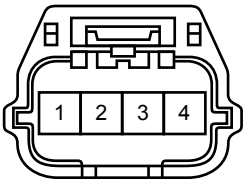

C 47
Black

