
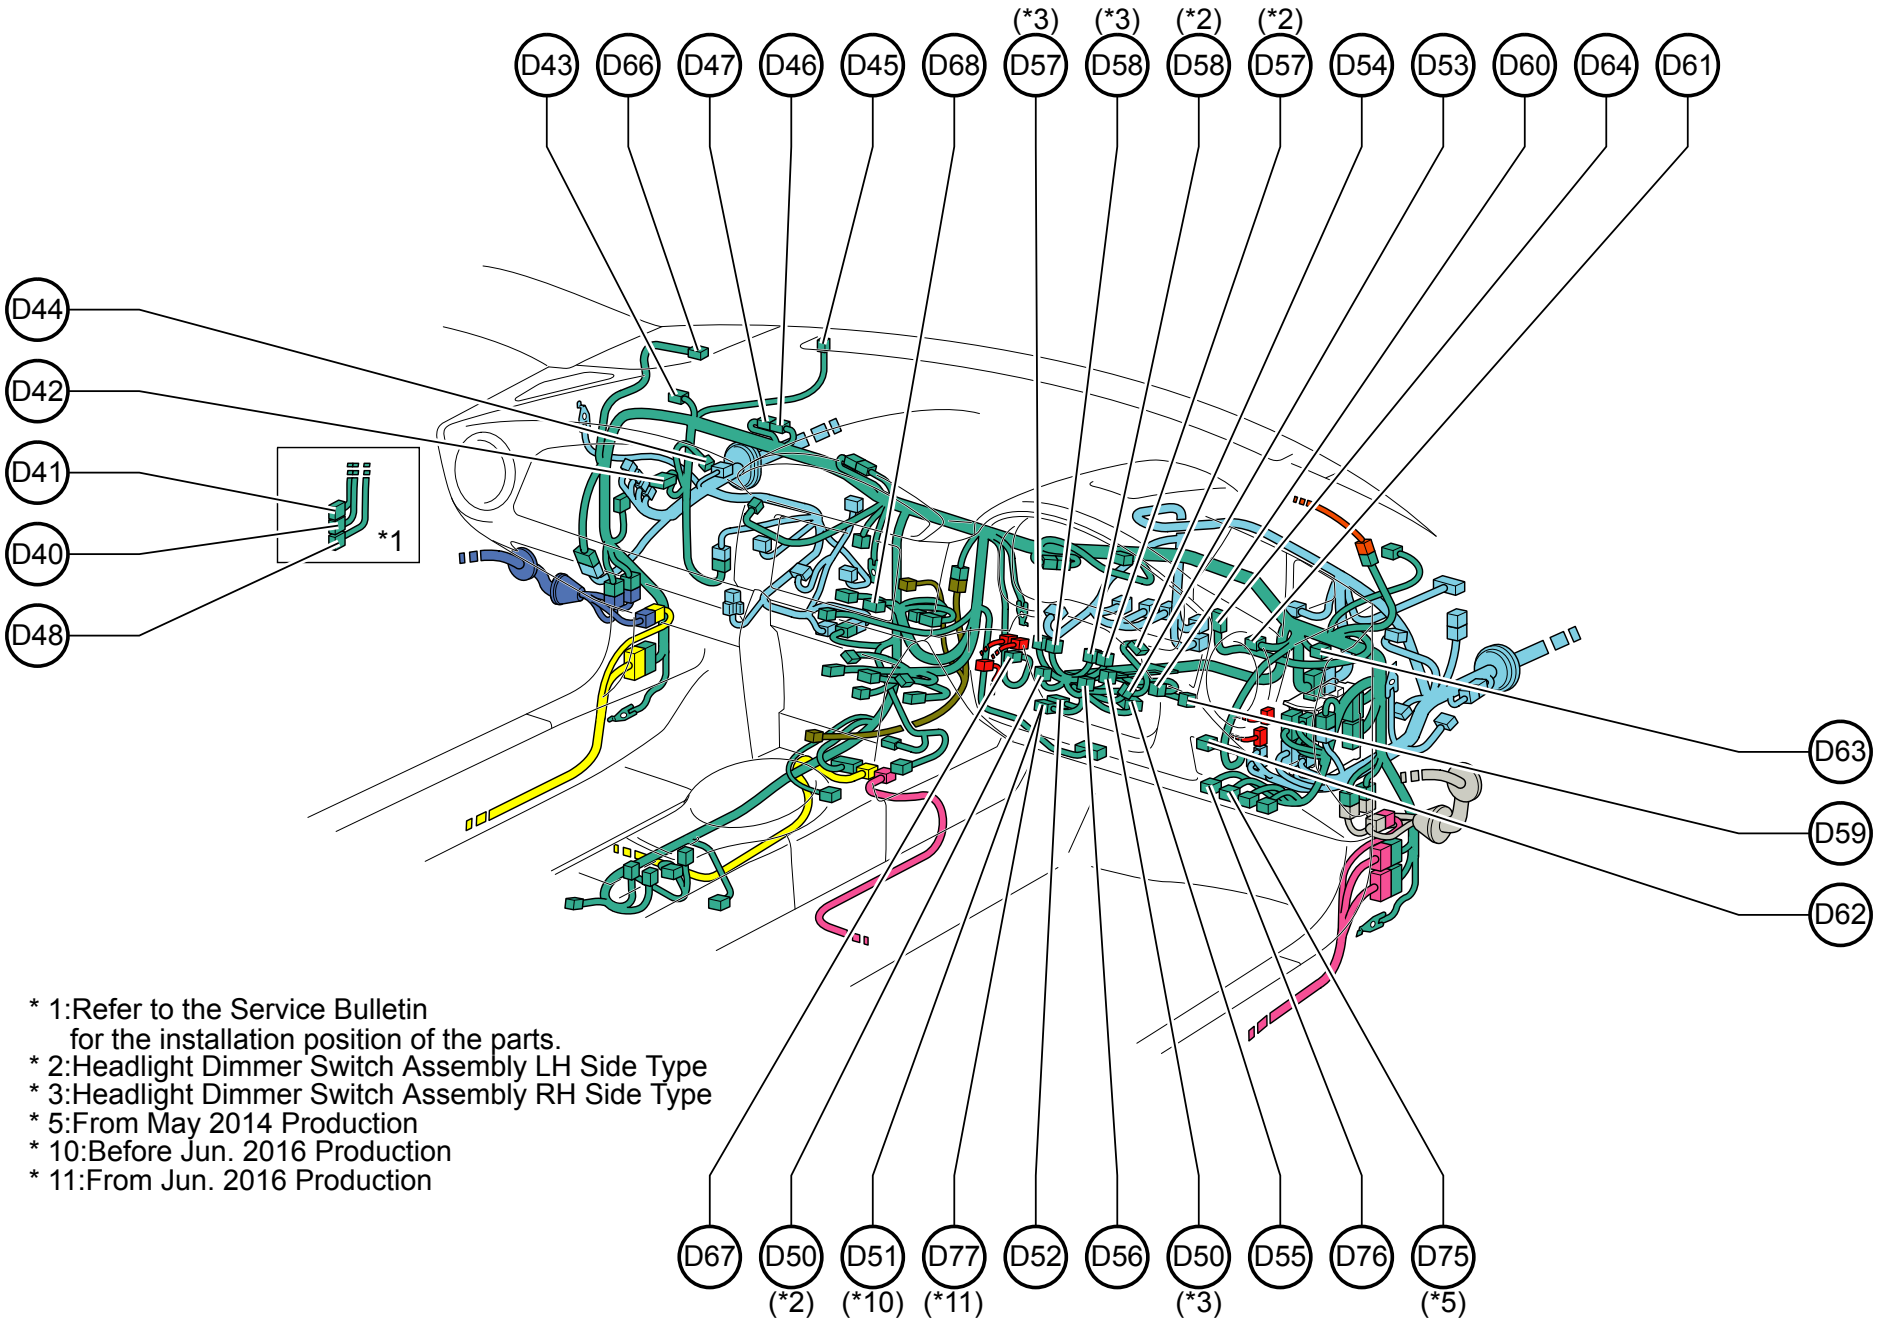



* 1:Refer to the Service Bulletin
  for the installation position of the parts.
* 2:Headlight Dimmer Switch Assembly LH Side Type
* 3:Headlight Dimmer Switch Assembly RH Side Type
* 5:From May 2014 Production
* 10:Before Jun. 2016 Production
* 11:From Jun. 2016 Production

D 40 Certification ECU Assembly
D 41 Certification ECU Assembly
D 42 Control Unit Relay Assembly
D 43 Junction Connector
D 44 No. 1 Power Outlet Socket Assembly
D 45 Automatic Light Control Sensor
D 46 Junction Connector
D 47 Junction Connector
D 48 Certification ECU Assembly
D 50 Headlight Dimmer Switch Assembly
D 51 Spiral Cable Sub-Assembly
D 52 Spiral Cable Sub-Assembly
D 53 Un-Lock Warning Switch Assembly
D 54 Transponder Key Amplifier
D 55 Ignition or Starter Switch Assembly
D 56 Steering Sensor
D 57 Windshield Wiper Switch Assembly
D 58 Windshield Wiper Switch Assembly
D 59 Steering Lock Actuator Assembly
D 60 Key Inter Lock Solenoid
D 61 Turn Signal Flasher Assembly
D 62 Lower No. 1 Instrument Panel Airbag Assembly
D 63 Option Connector
D 64 Trip Switch
D 66 Front No. 2 Speaker Assembly LH
D 67 Cooler (Room Temperature Sensor) Thermistor
D 68 Option Connector
D 75 Luggage Door Opening Switch Assembly
D 76 Tire Pressure Warning Reset Switch
D 77 Spiral Cable Sub-Assembly


D 40
White

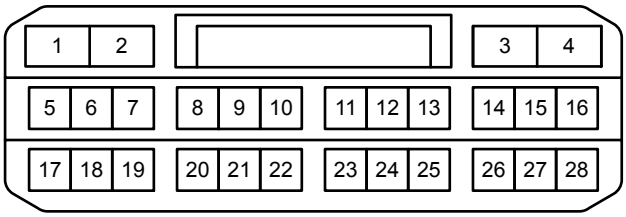


D 41
White

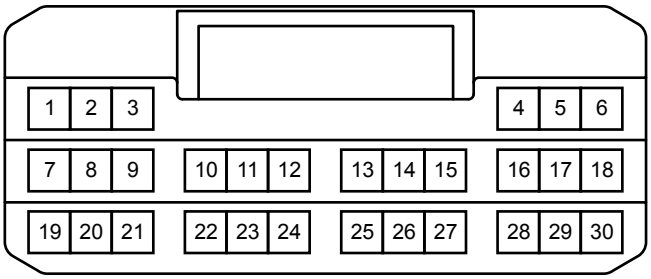


D 42
White



D 43
Gray




D 44
White




D 45
White




D 46
Black




D 47
Black




D 48
White

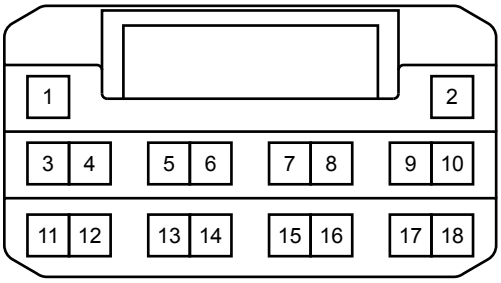


D 50
White



D 51
White




D 52
White




D 53
White




D 54
Black




D 55
White




D 56
White




D 57
White

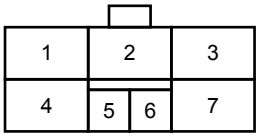

D 58
White

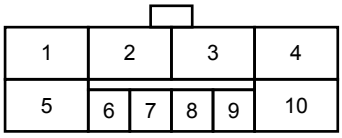


D 59
Black




D 60
White




D 61
White




D 62
White



D 63
White

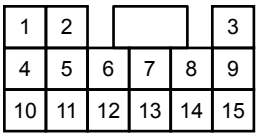

D 64
White




D 66
White




D 67
White




D 68
White



D 75
White



D 76
White



D 77
White

