Clock

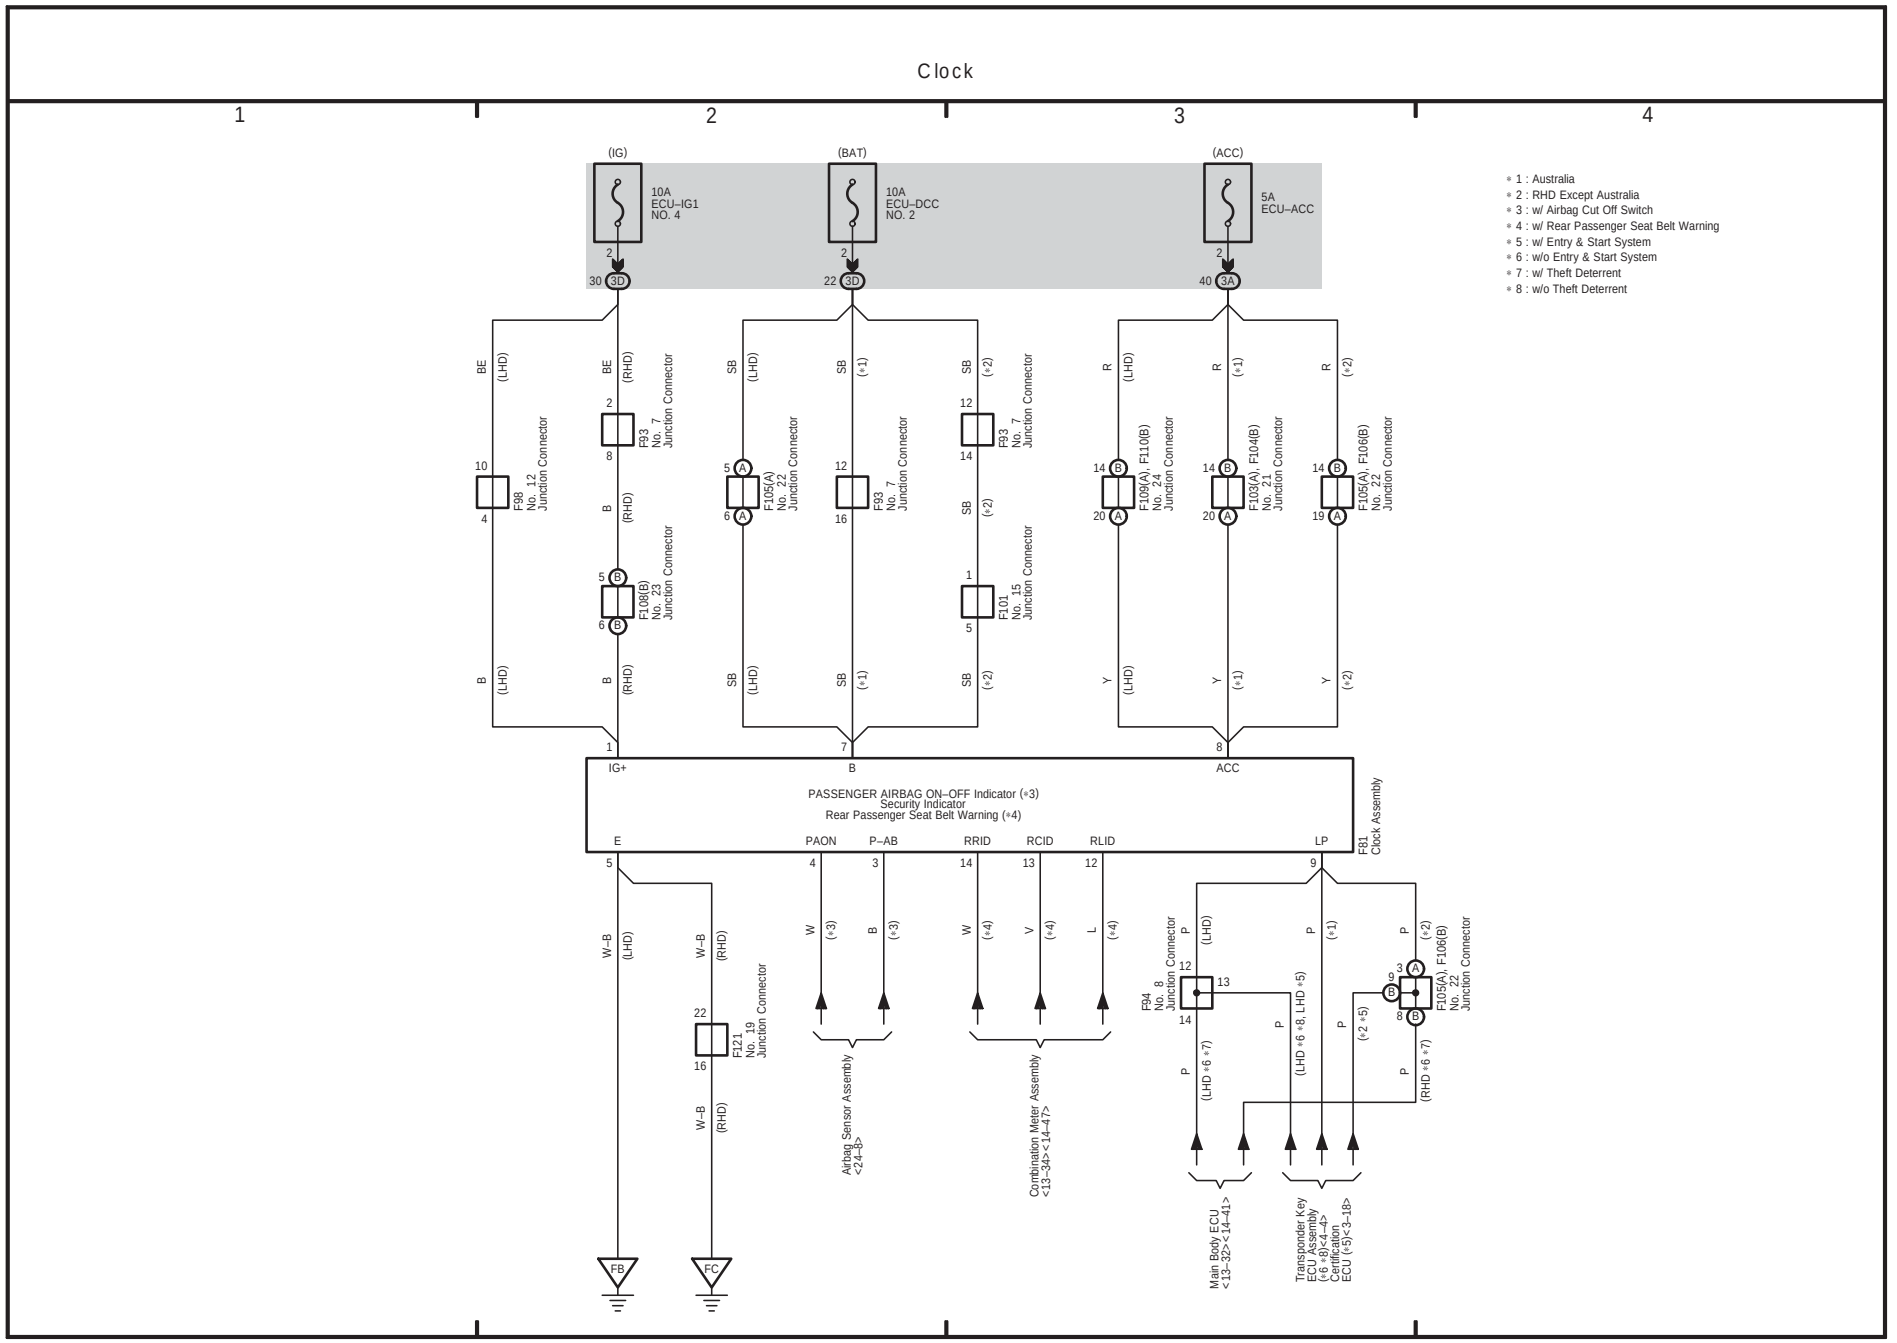
1
2
3
4
(IG)
(BAT)
(ACC)
10A
ECU–IG1
NO. 4
10A
ECU–DCC
NO. 2
5A
ECU–ACC
30 3D
22 3D
40 3A
∗ 1 : Australia
∗ 2 : RHD Except Australia
∗ 3 : w/ Airbag Cut Off Switch
∗ 4 : w/ Rear Passenger Seat Belt Warning
∗ 5 : w/ Entry & Start System
∗ 6 : w/o Entry & Start System
∗ 7 : w/ Theft Deterrent
∗ 8 : w/o Theft Deterrent
F98 No. 12 Junction Connector
F93 No. 7 Junction Connector
F108(B) No. 23 Junction Connector
F105(A) No. 22 Junction Connector
F101 No. 15 Junction Connector
F109(A), F110(B) No. 24 Junction Connector
F103(A), F104(B) No. 21 Junction Connector
F105(A), F106(B) No. 22 Junction Connector
IG+
B
ACC
PASSENGER AIRBAG ON–OFF Indicator (∗3)
Security Indicator
Rear Passenger Seat Belt Warning (∗4)
F81 Clock Assembly
E
PAON
P–AB
RRID
RCID
RLID
LP
F121 No. 19 Junction Connector
F94 No. 8 Junction Connector
F105(A), F106(B) No. 22 Junction Connector
FB
FC
Airbag Sensor Assembly <24–8>
Combination Meter Assembly <13–34> <14–47>
Main Body ECU <13–32> <14–41>
Transponder Key ECU Assembly (∗6 ∗8) <4–4> Certification ECU (∗5) <3–18>