
MAP DISC CANNOT BE INSERTED

INSPECTION PROCEDURE

1 CHECK MAP DISC

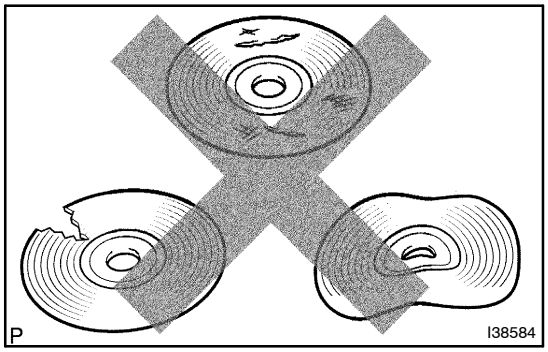


(a) Check that the map disc is not deformed or cracked.
Standard: No deformations or cracks appear on the map disc.

NG → CHECK THE MAP DISC

OK

2 CHECK RADIO AND NAVIGATION ASSY

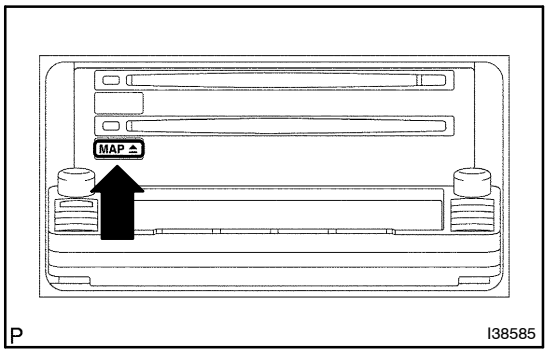

(a) Check that the "MAP" indicator near the disc slot comes on.
Standard: It does not come on.

NG → PRESS THE EJECT SWITCH TO EJECT THE DISC

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–46)