

RADIATOR UPPER SUPPORT (ASSY)

REPLACEMENT

1. REMOVE RADIATOR UPPER SUPPORT

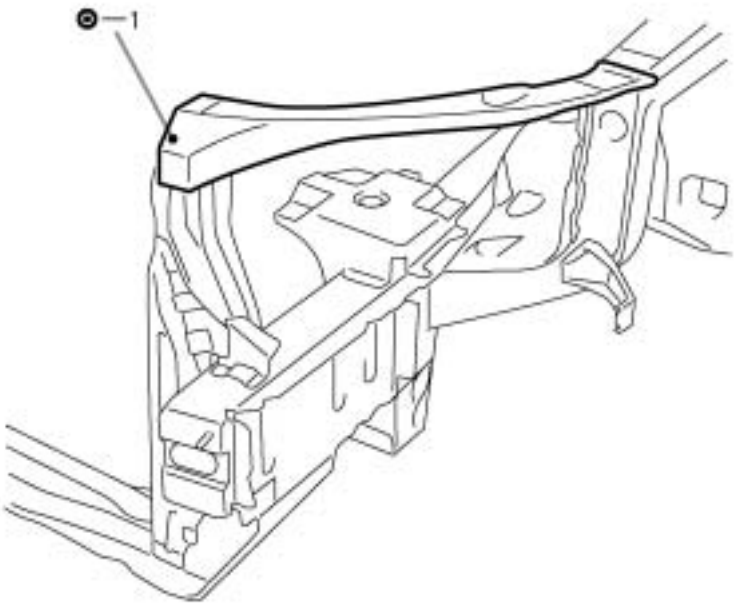

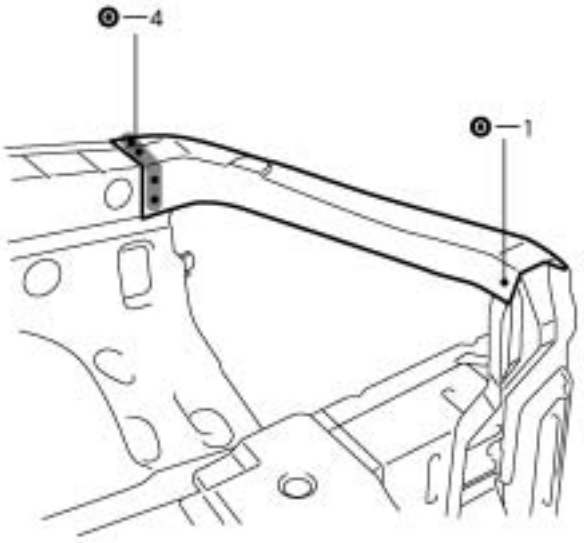


F12901A

2. INSTALL RADIATOR UPPER SUPPORT

(a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:
First install the radiator upper center support.

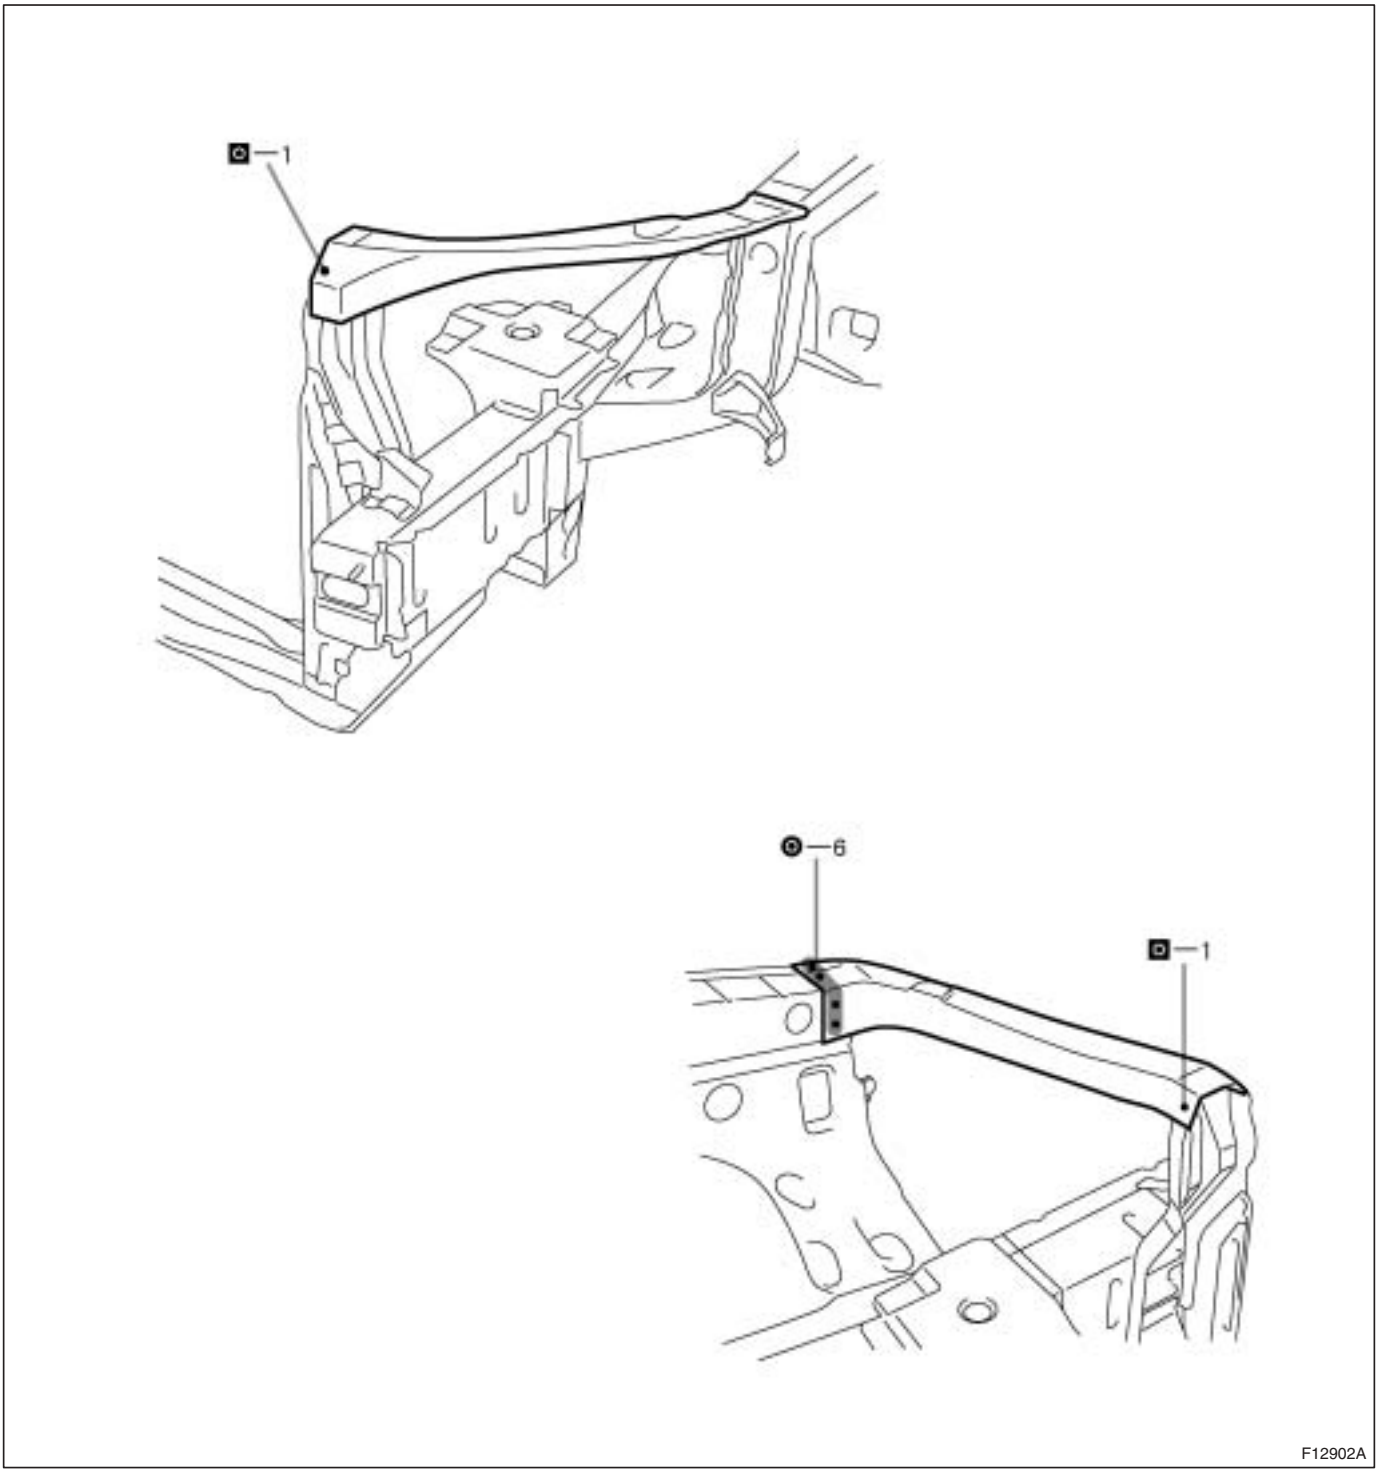

3. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-100)

4. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)

5. APPLYING ANTI-RUST AGENT

(a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.