
RADIATOR SUPPORT UPPER BRACE (ASSY)

REPLACEMENT


1. REMOVE RADIATOR UPPER SUPPORT (See page BP-1)
2. REMOVE RADIATOR SUPPORT UPPER BRACE

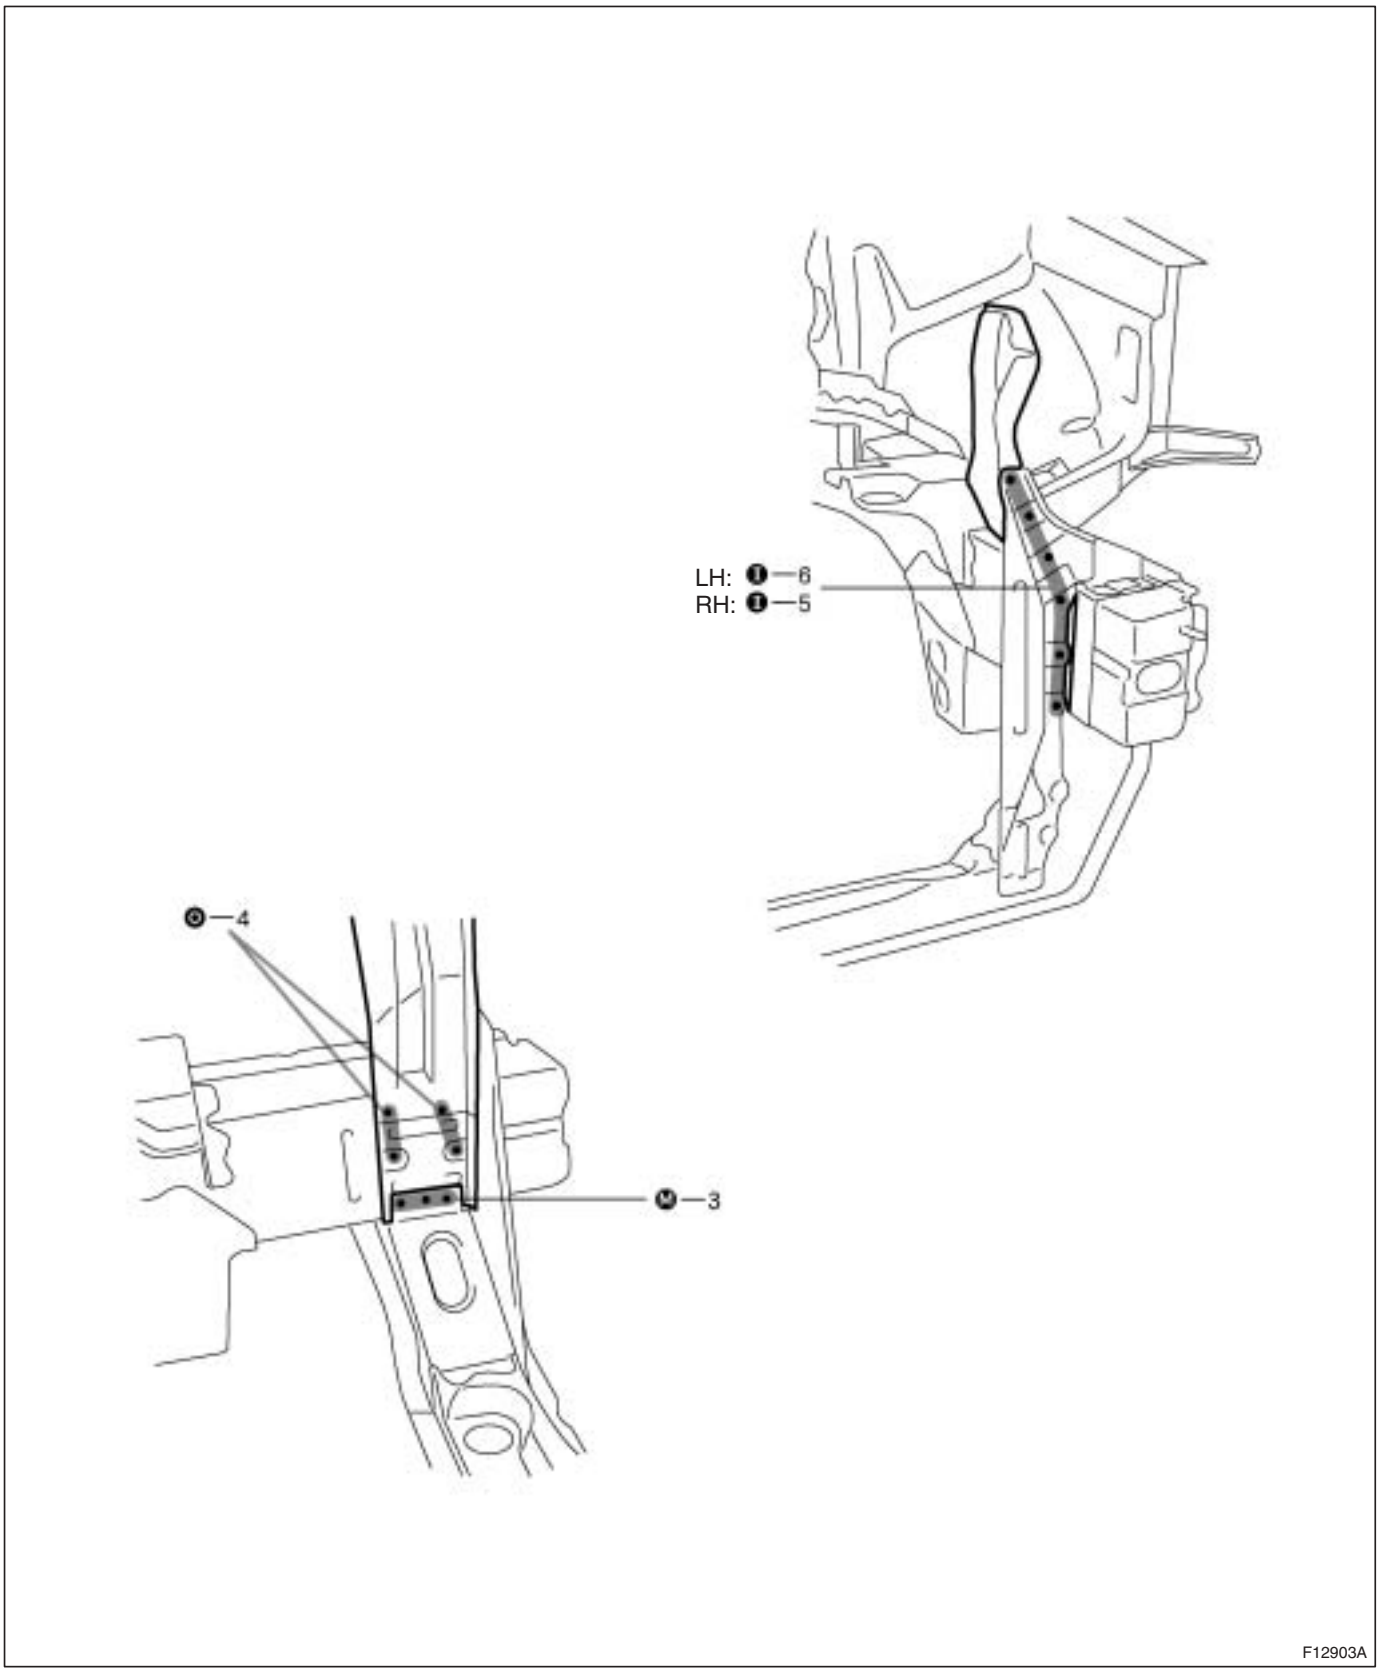

3. INSTALL RADIATOR SUPPORT UPPER BRACE

(a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:
First install the radiator upper support and radiator upper center support.

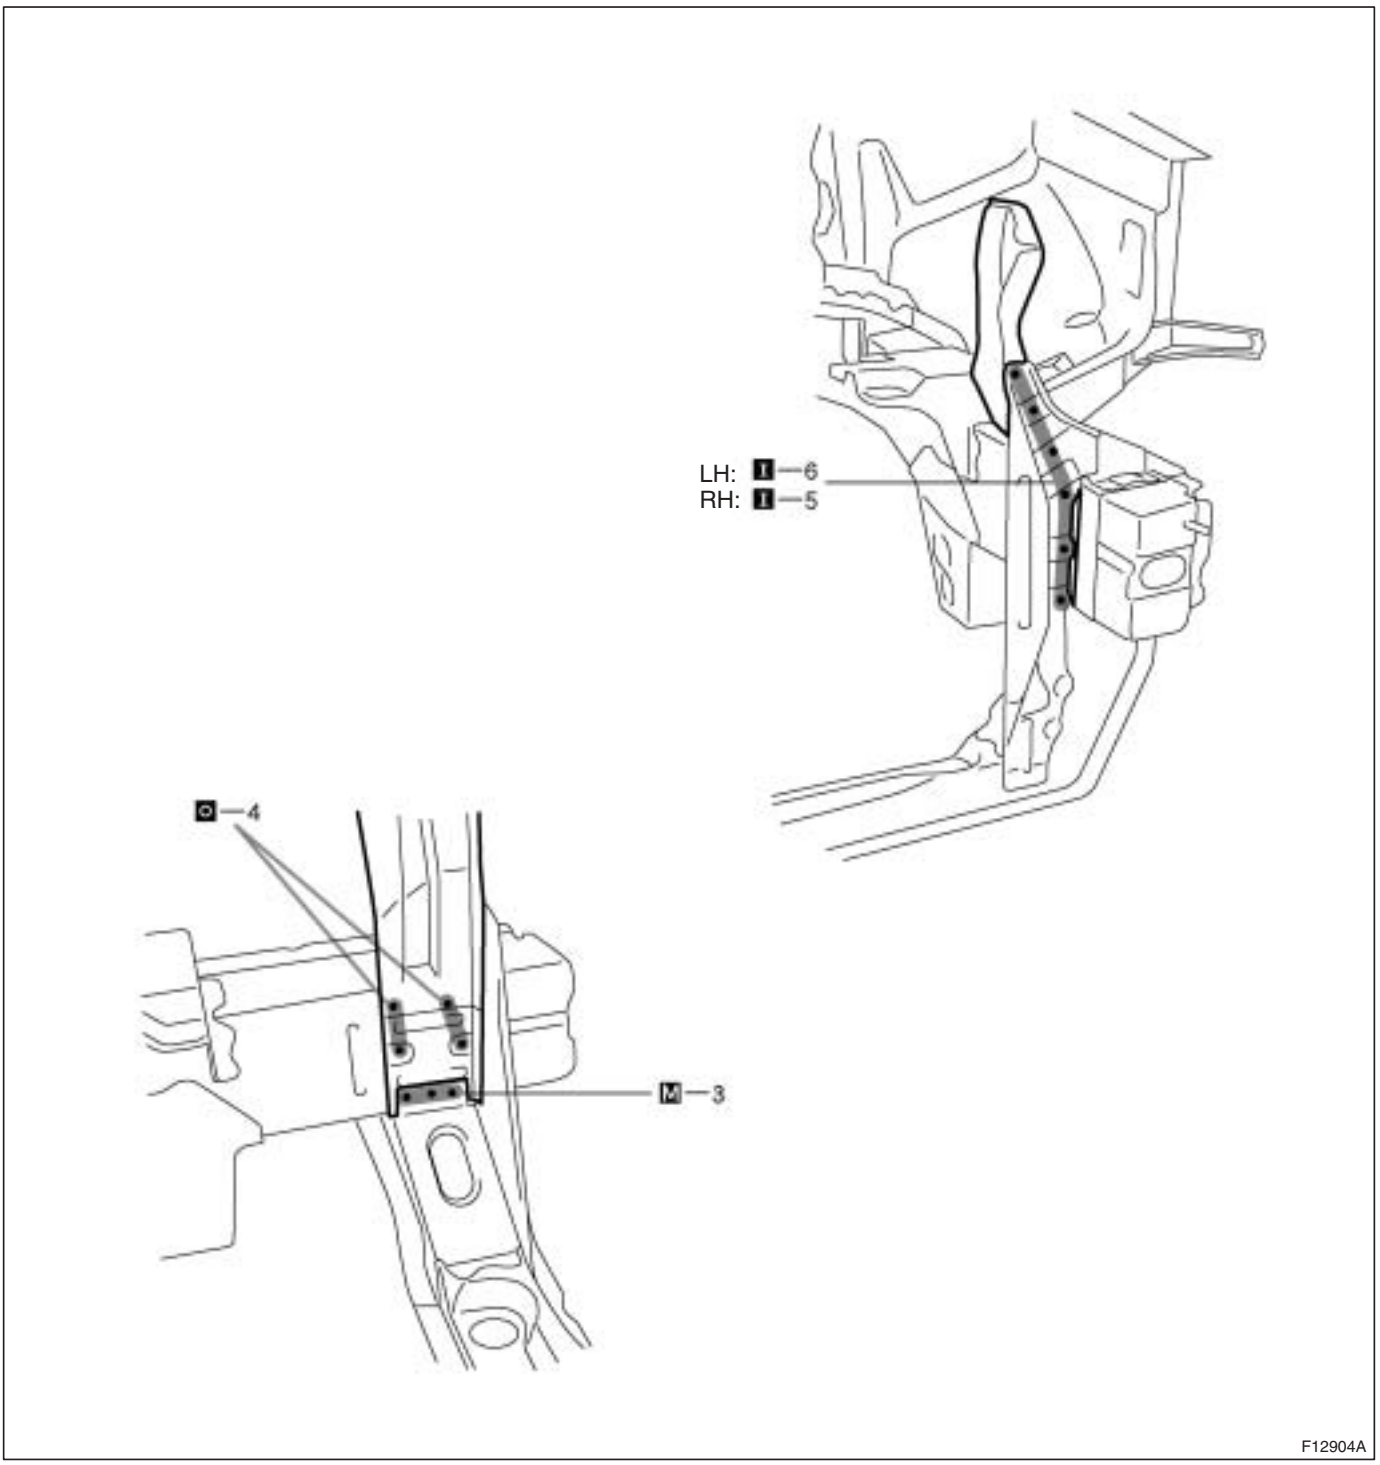

4. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-100)

5. INSTALL RADIATOR UPPER SUPPORT (See page BP-1)

6. APPLYING ANTI-RUST AGENT

(a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.