
RADIATOR SIDE SUPPORT (ASSY)

REPLACEMENT


1. REMOVE RADIATOR UPPER SUPPORT (See page BP-1)
2. REMOVE RADIATOR SIDE SUPPORT

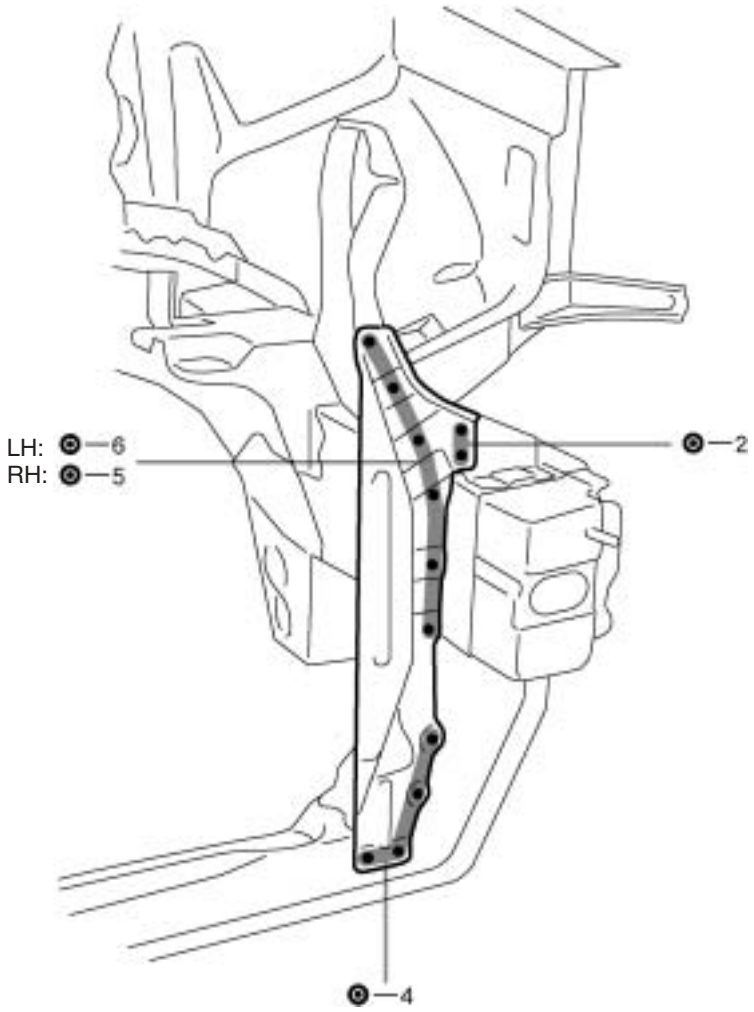

F12905-2

3. INSTALL RADIATOR SIDE SUPPORT

(a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

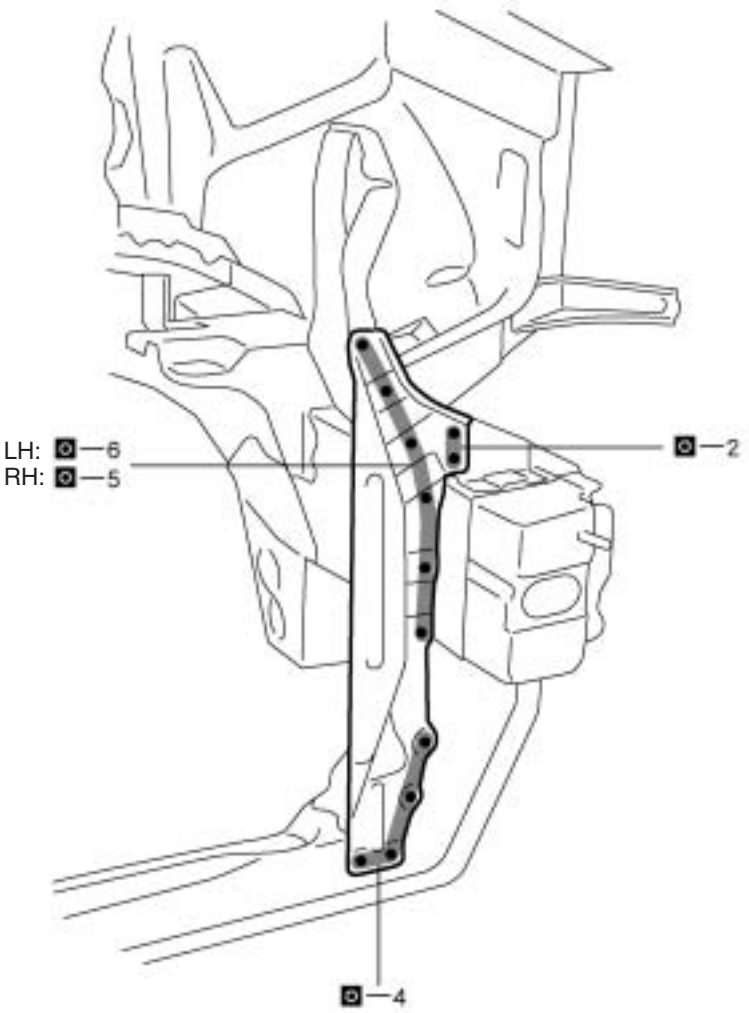

F12906A

4. INSTALL RADIATOR UPPER SUPPORT (See page BP-1)

5. APPLYING ANTI-RUST AGENT

(a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.