
RADIATOR SUPPORT (ASSY)


REPLACEMENT

1. REMOVE RADIATOR SUPPORT

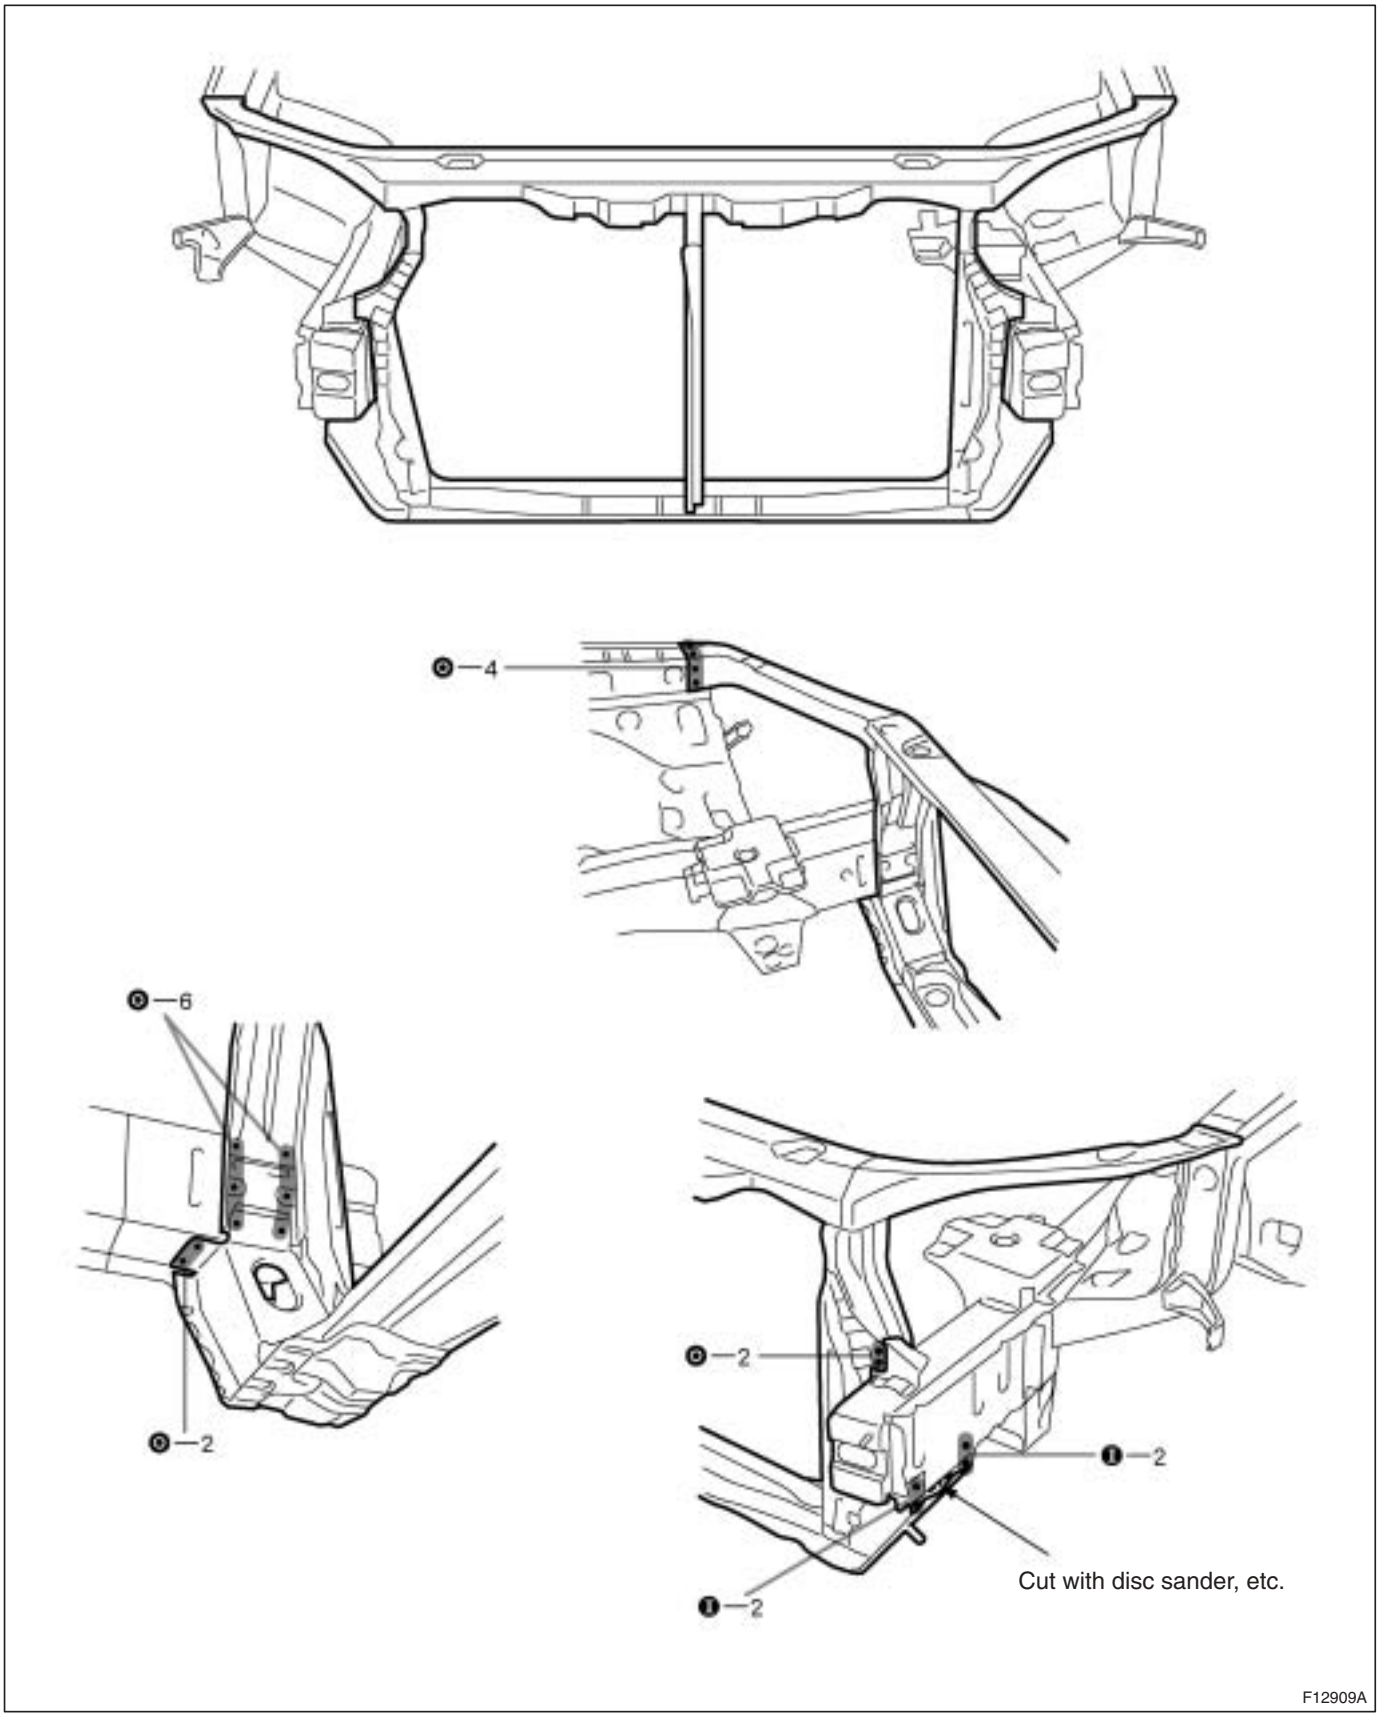

2. INSTALL RADIATOR SUPPORT

(a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

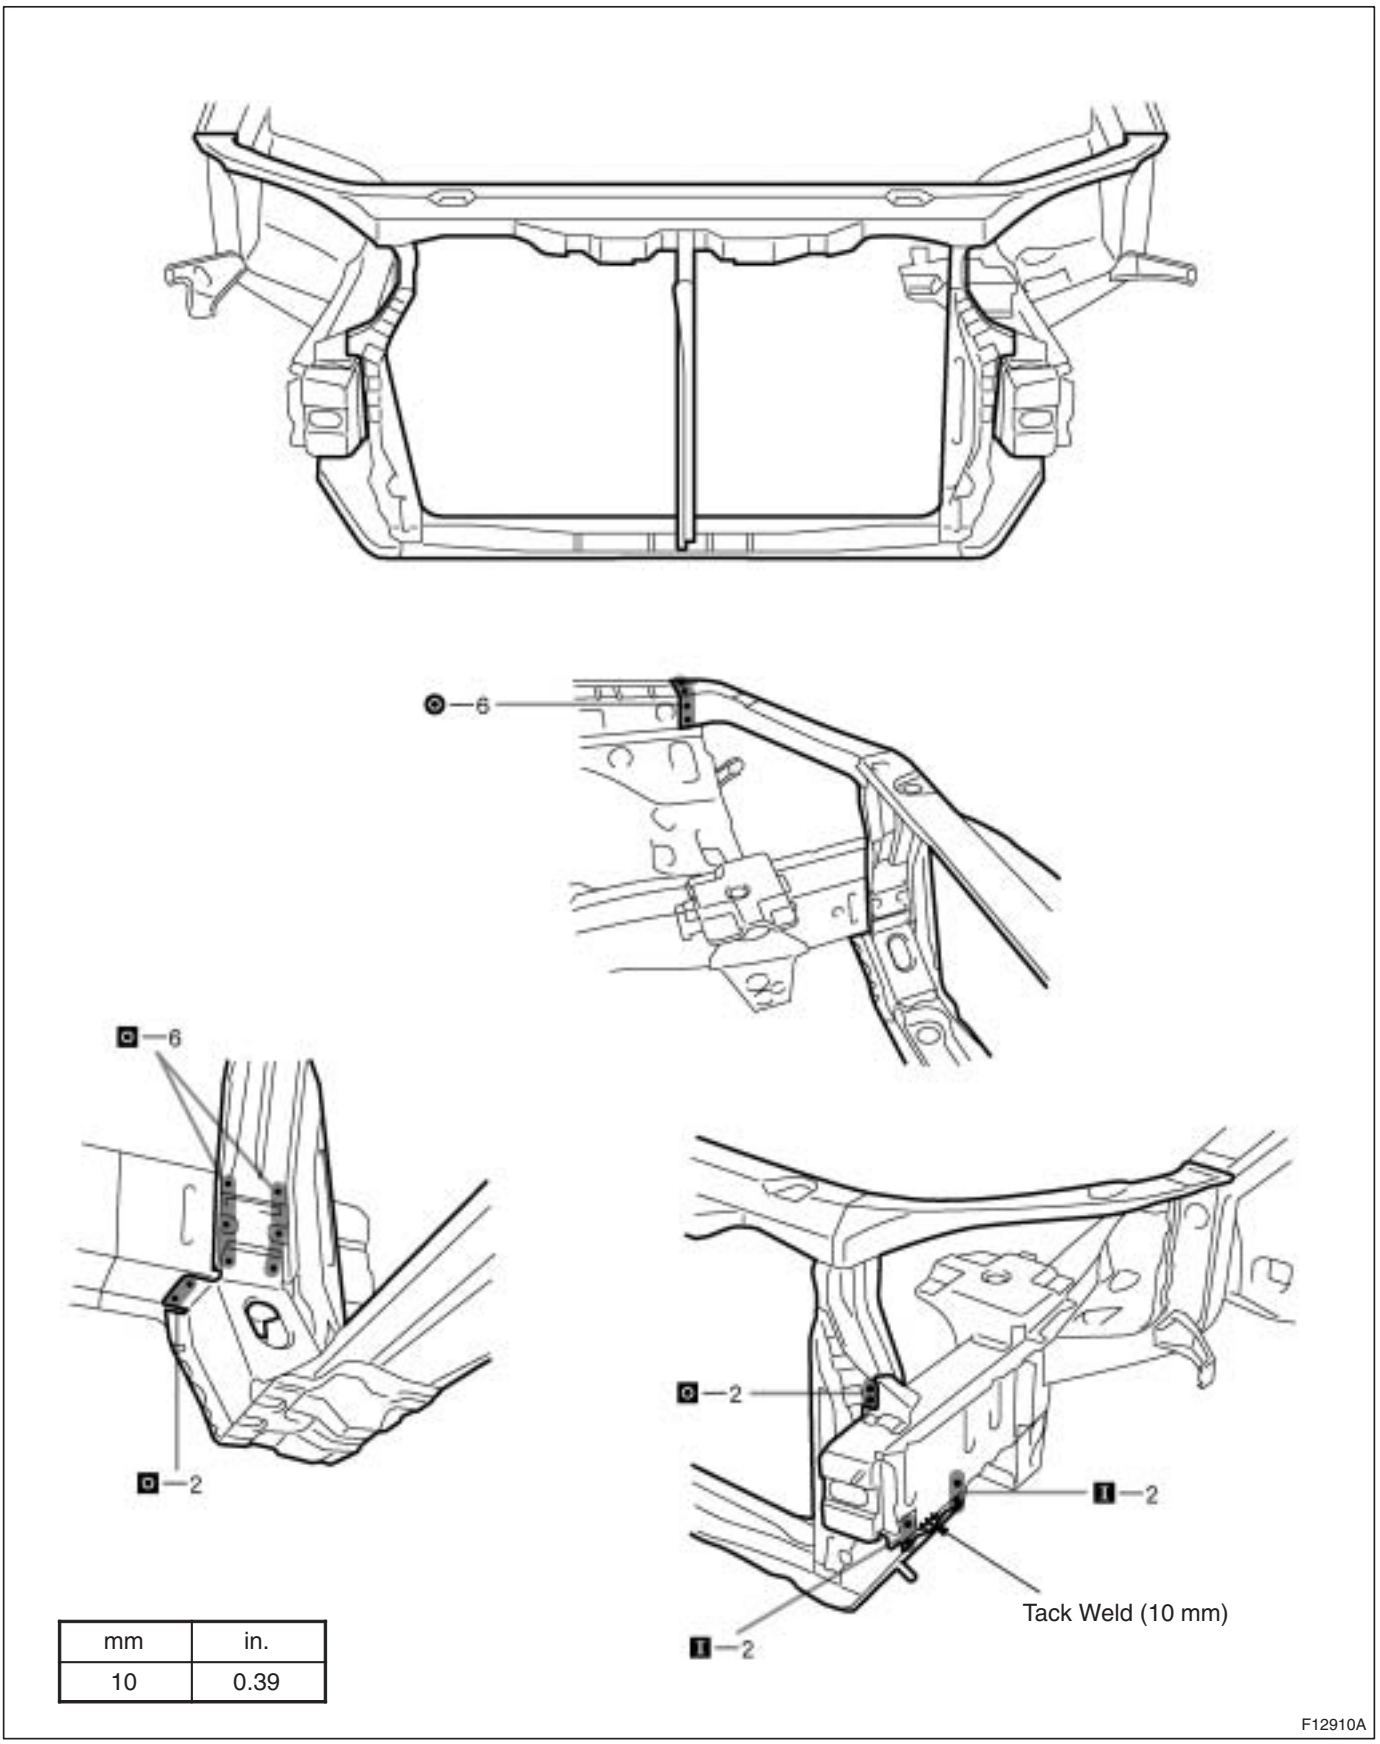

mm	in.
10	0.39

3. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-100)

4. MEASURING THE UNDER BODY DIMENSIONS (See page BP-98)

5. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)

6. APPLYING ANTI-RUST AGENT

(a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.