

# COWL TOP SIDE REINFORCEMENT (ASSY)

## REPLACEMENT

### 1. REMOVE COWL TOP SIDE REINFORCEMENT

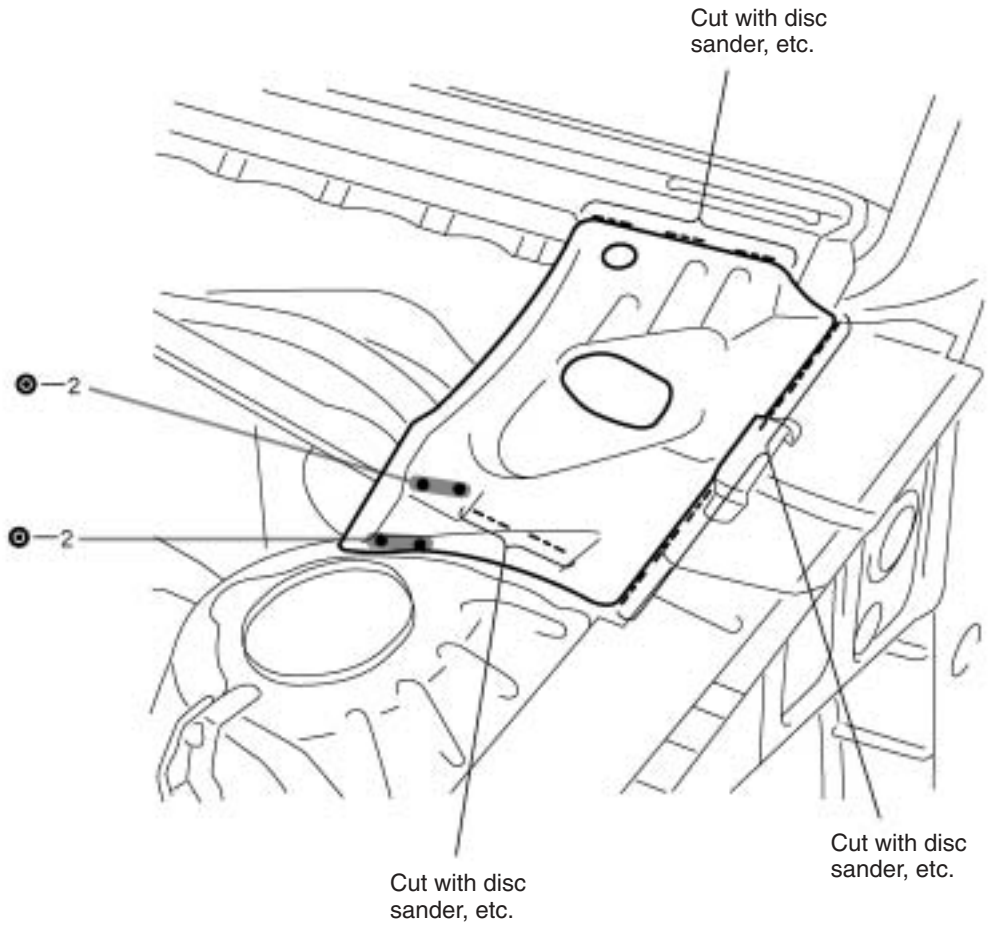

**2. INSTALL COWL TOP SIDE REINFORCEMENT**

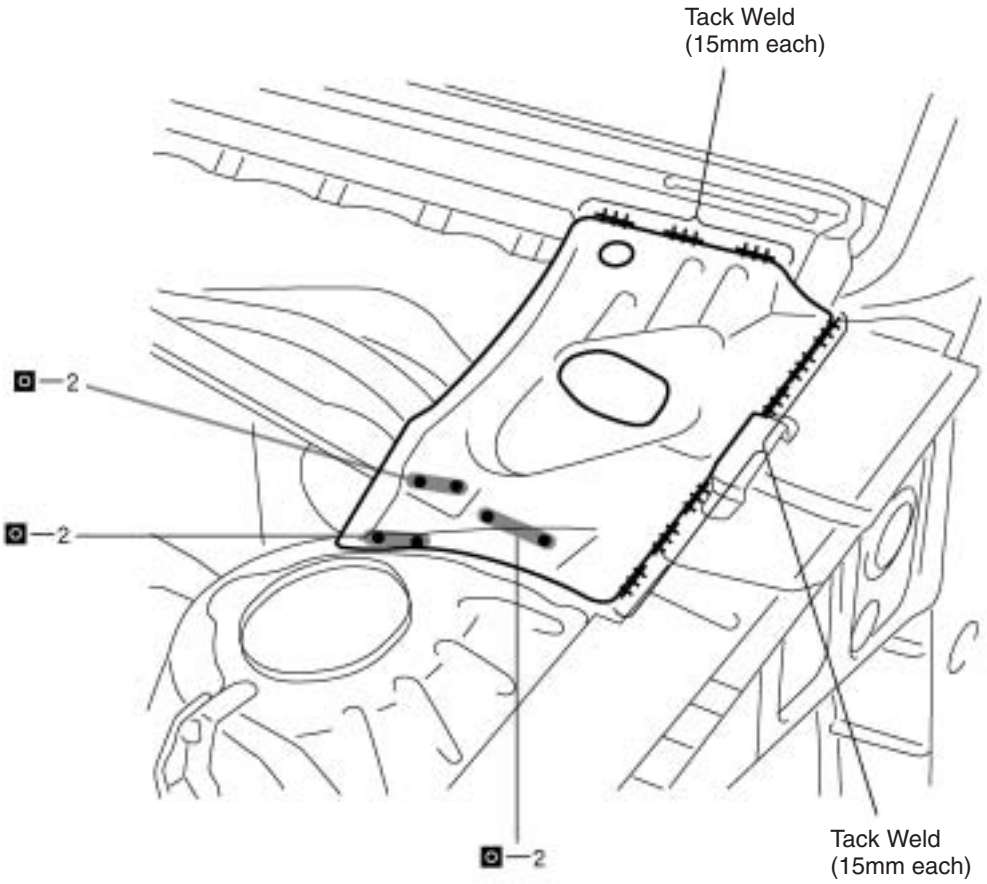


| mm | in. |
|---|---|
| 15 | 0.59 |

F12918A

**3. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)**

**4. APPLYING ANTI-RUST AGENT**

(a) After applying the top coat layer, apply the anit-rust agent to the inside of the necked section structural weld spots.