
REAR FLOOR PAN (ASSY)


REPLACEMENT

1. **REMOVE BODY LOWER BACK PANEL (See page BP-73)**
2. **REMOVE REAR FLOOR NO.3 CROSSMEMBER (See page BP-79)**
3. **REMOVE REAR FLOOR PAN**

(a) After removing the rear floor pan reinforcement, remove the rear floor pan.

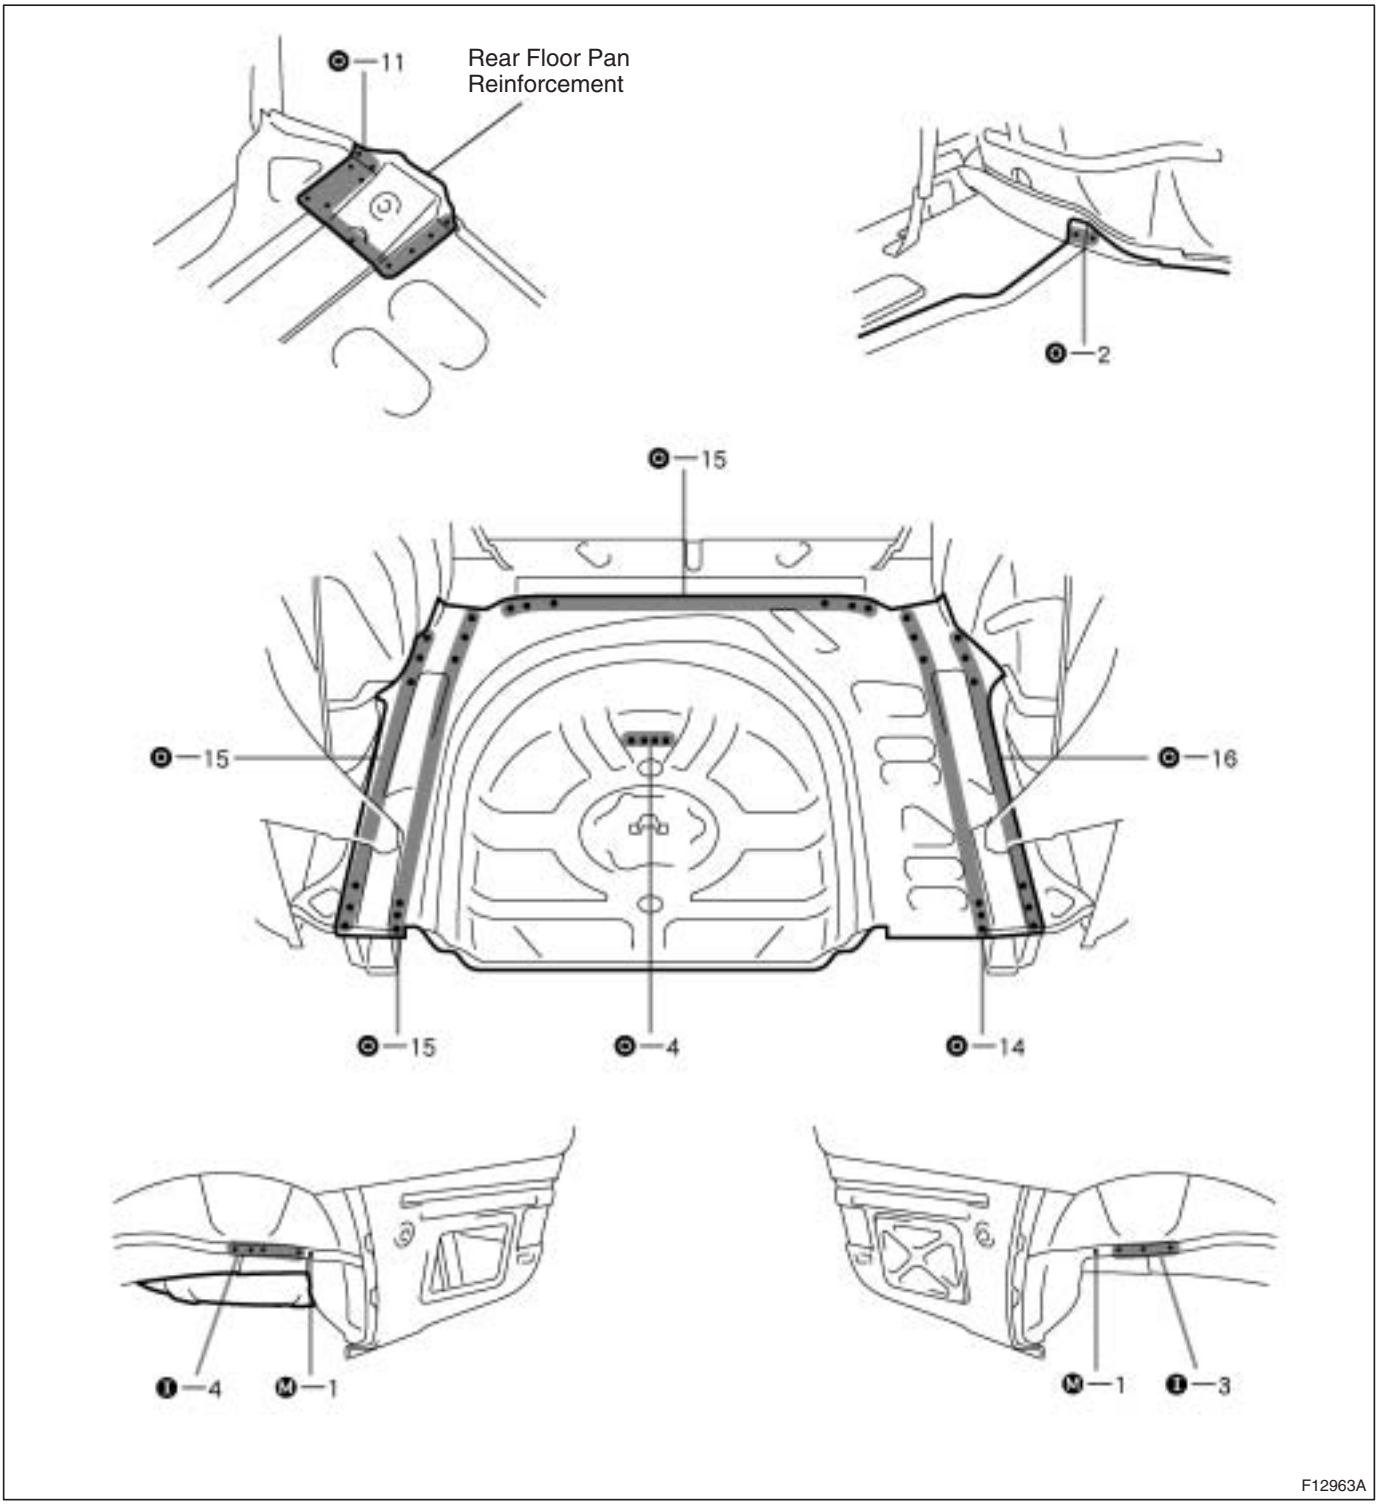

4. INSTALL REAR FLOOR PAN

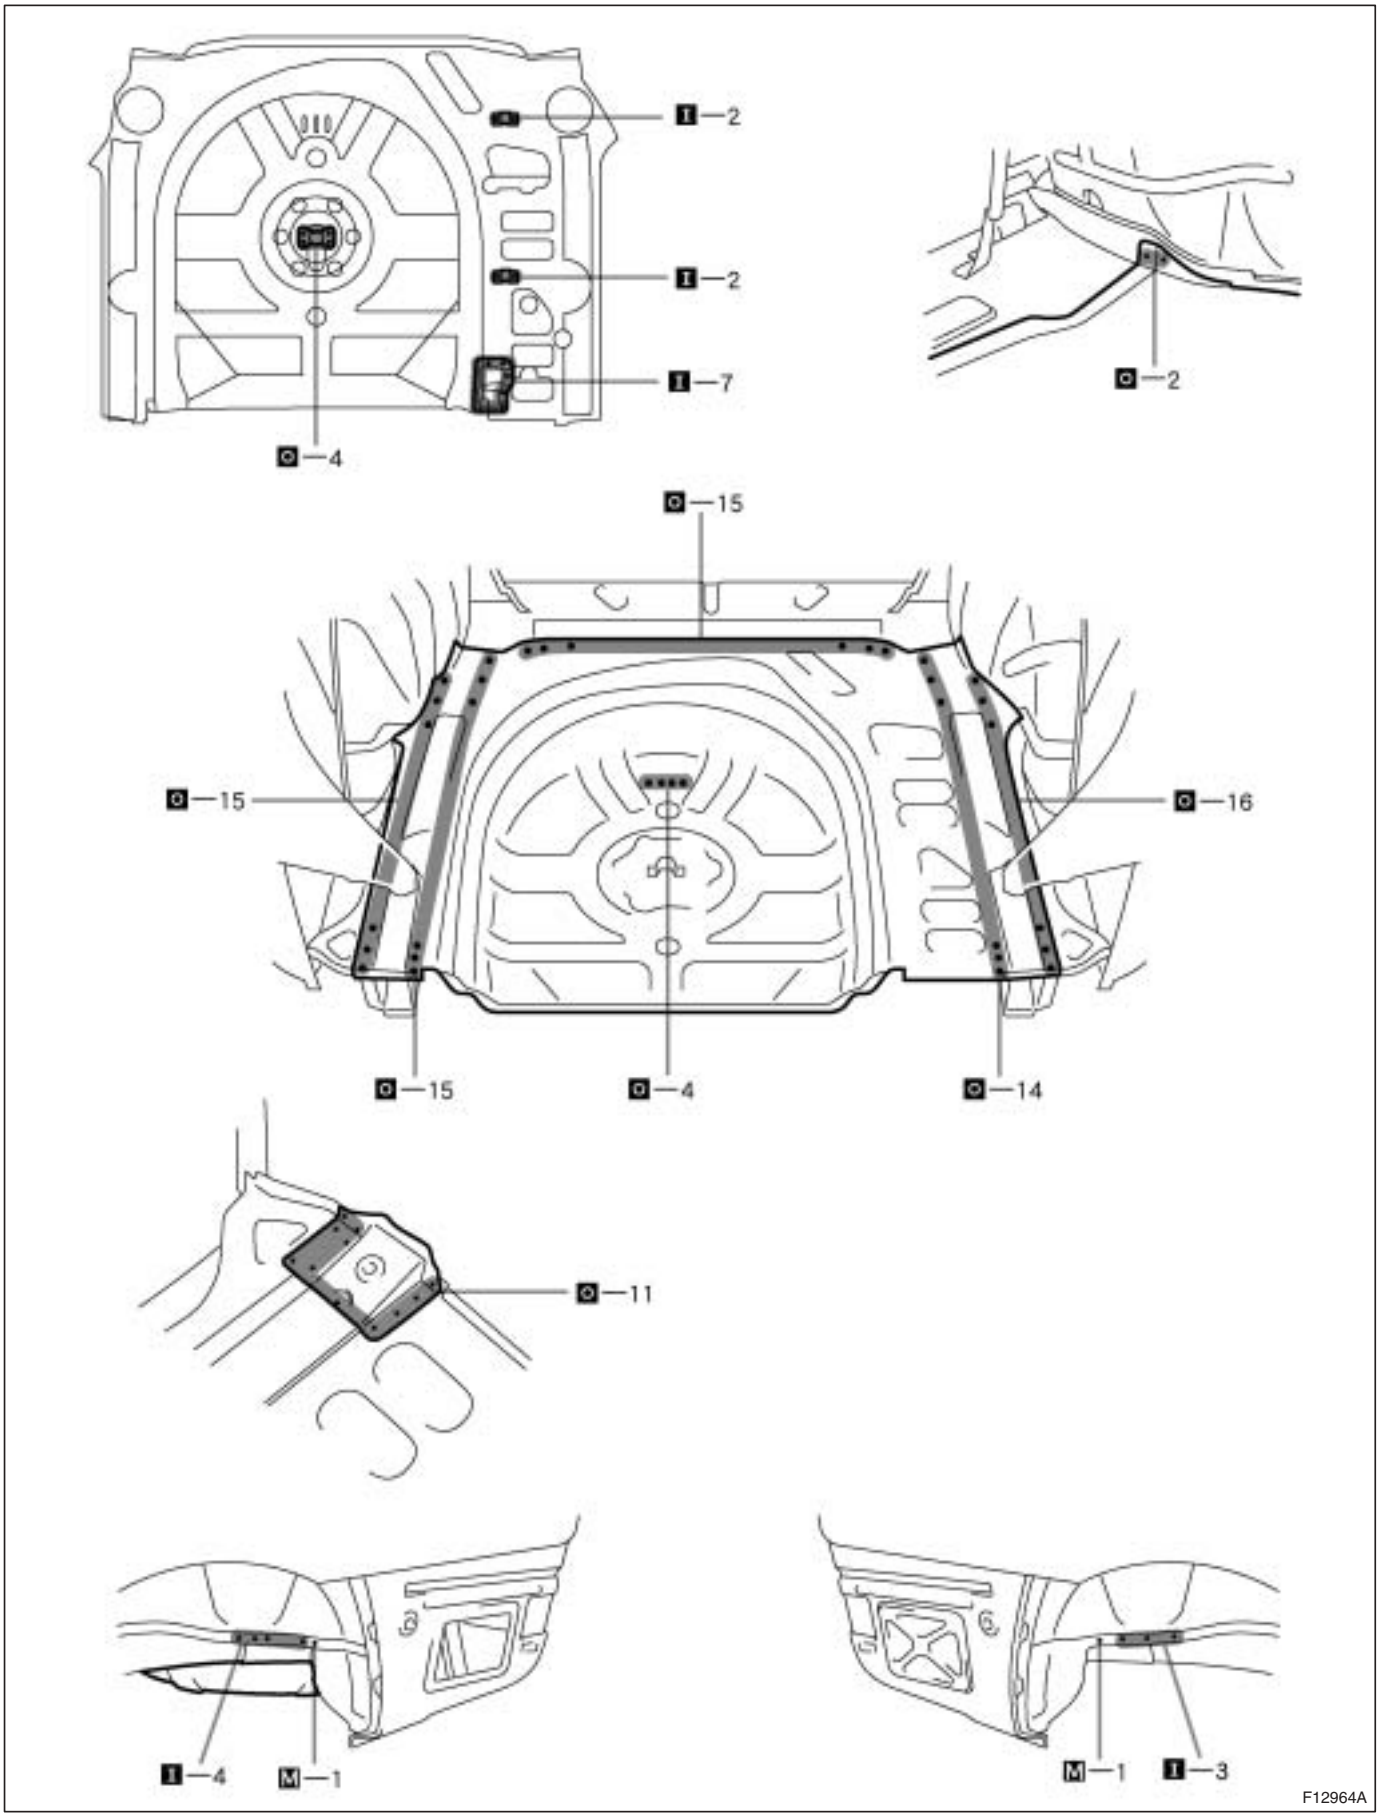

5. **INSTALL REAR FLOOR NO.3 CROSSMEMBER (See page BP-79)**
6. **INSTALL BODY LOWER BACK PANEL (See page BP-73)**
7. **APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT (See page PC-1)**
8. **APPLYING UNDER COATING (See page PC-6)**
9. **INSTALL SILENCER SHEEET (See page PC-11)**
10. **APPLYING ANTI-RUST AGENT**

(a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.