
Position of Parts in Instrument Panel

[RHD]

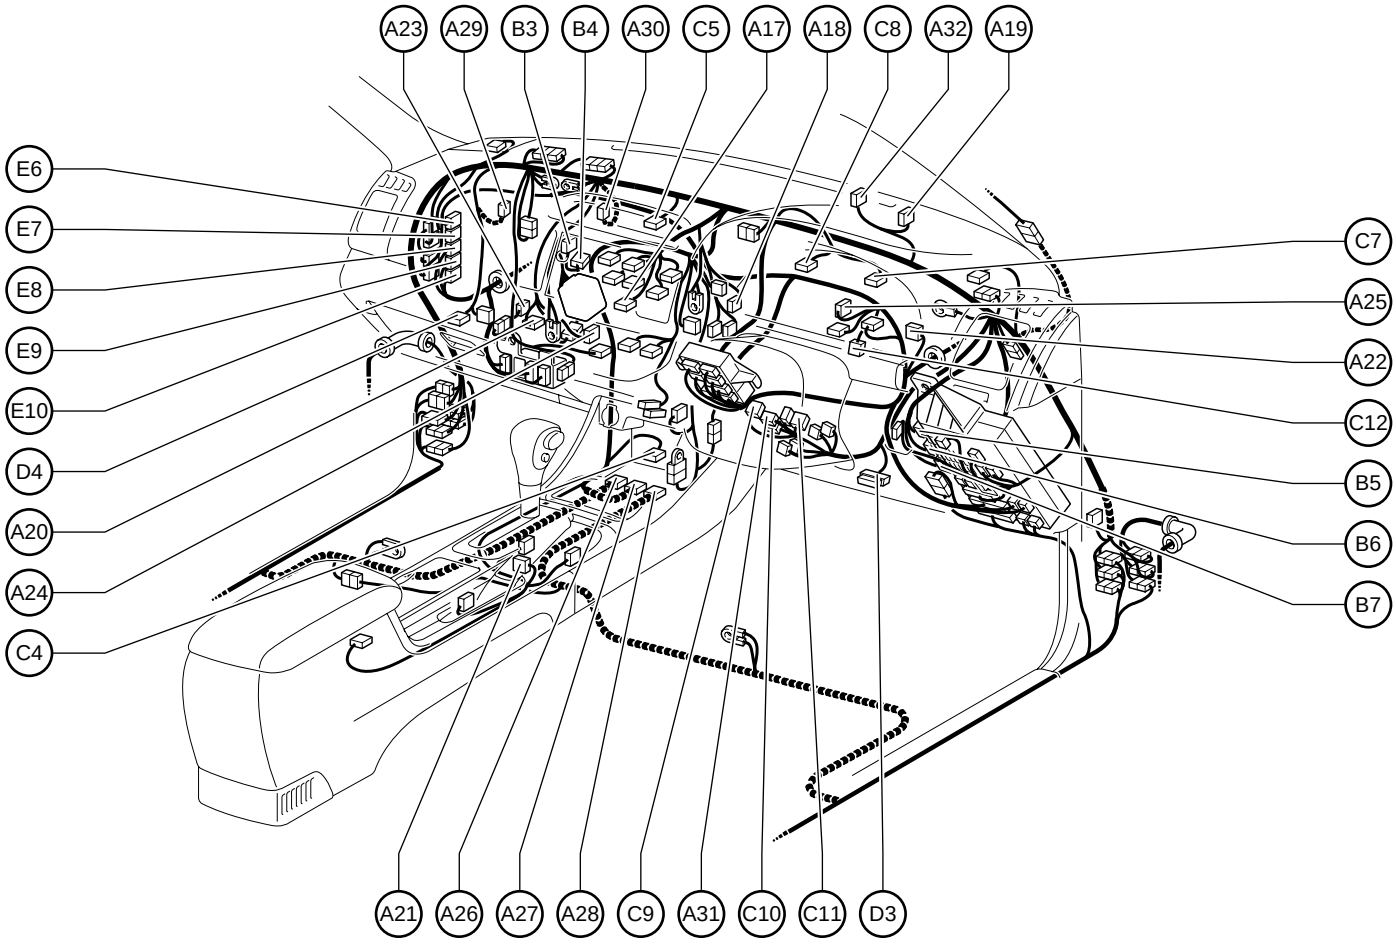

A17 A/C Control Assembly
A18 A/C Room Temp. Sensor
A19 A/C Solar Sensor
A20 A/C Thermistor
A21 A/T Shift Lever Illumination
O/D Main SW
A22 Accelerator Position Sensor
A23 Air Inlet Control Servo Motor
A24 Air Mix Control Servo Motor
A25 Air Vent Mode Control Servo Motor
A26 Airbag Sensor Assembly
A27 Airbag Sensor Assembly
A28 Airbag Sensor Assembly
A29 Airbag Squib (Front Passenger Airbag Assembly)
A30 Airbag Squib (Front Passenger Airbag Assembly)
A31 Airbag Squib (Steering Wheel Pad)
A32 Automatic Light Control Sensor

B 3 Blower Motor
B 4 Blower Motor Controller
B 5 Body ECU
B 6 Body ECU
B 7 Body ECU

C 4 Cigarette Lighter
Cigarette Lighter Illumination
C 5 Clock
C 7 Combination Meter
C 8 Combination Meter
C 9 Combination SW
C10 Combination SW
C11 Combination SW
Combination SW
C12 Cruise Control Clutch SW

D 3 DLC3
D 4 Double Door Lock ECU

E 6 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 7 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 8 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 9 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E10 Engine and ECT ECU (A/T)
Engine ECU (M/T)