
Position of Parts in Body

[RHD]

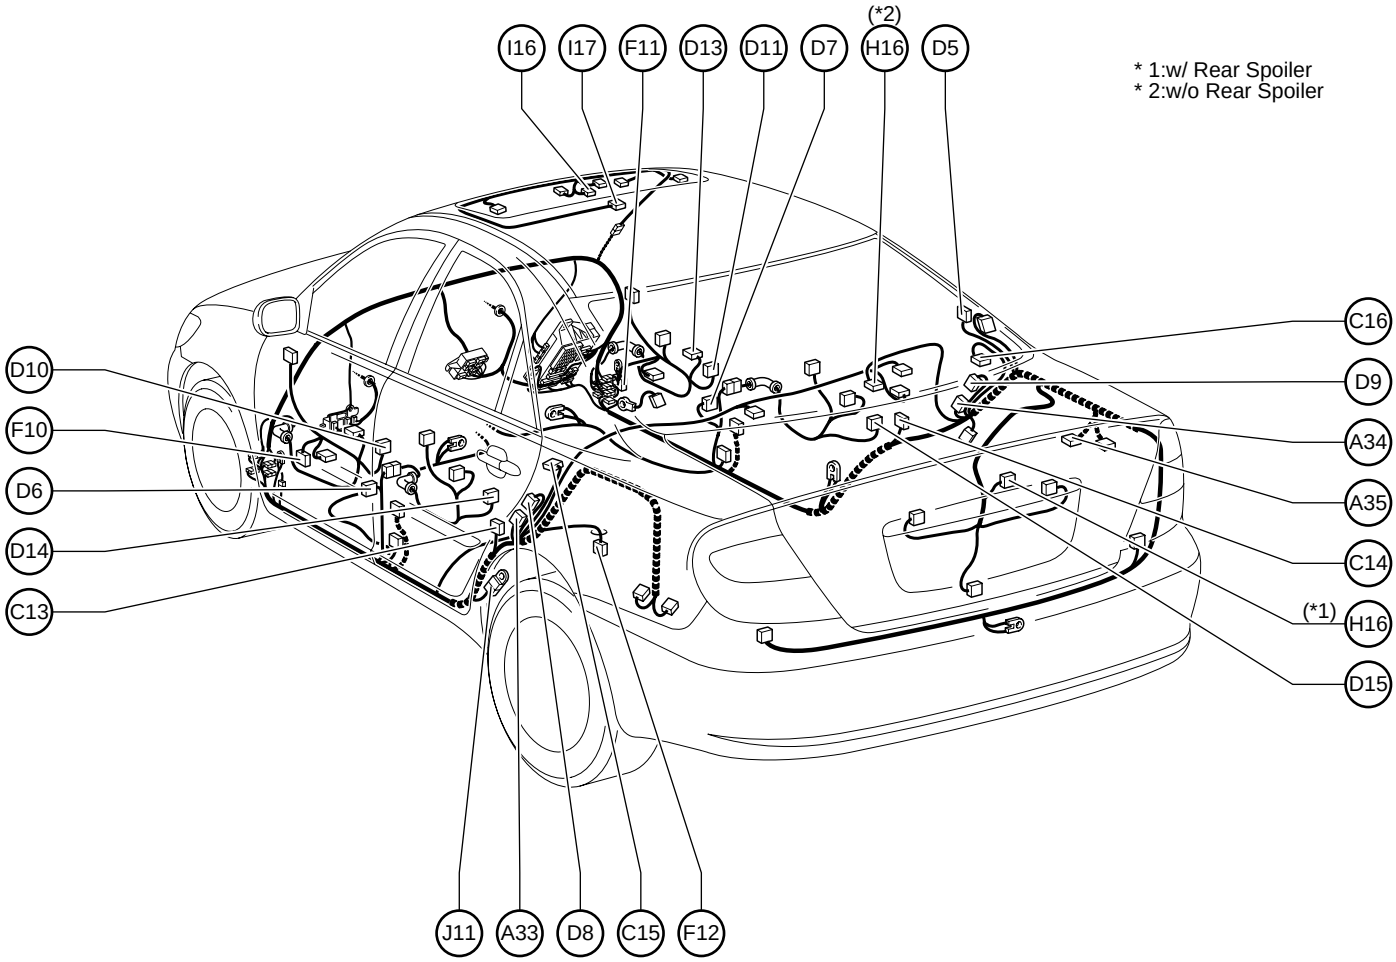

A33 ABS Speed Sensor Rear LH
A34 ABS Speed Sensor Rear RH
A35 Auto Antenna Control Relay

C13 Curtain Shield Airbag Sensor LH
C14 Curtain Shield Airbag Sensor RH
C15 Curtain Shield Airbag Squib LH
C16 Curtain Shield Airbag Squib RH

D 5 Door Control Receiver
D 6 Door Courtesy SW Front LH
D 7 Door Courtesy SW Front RH
D 8 Door Courtesy SW Rear LH
D 9 Door Courtesy SW Rear RH
D10 Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
Double Door Lock Motor Front LH
Position SW Front LH
D11 Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
Double Door Lock Motor Front RH
Position SW Front RH
D13 Door Lock Control SW Front RH
Power Window Master SW
D14 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
Double Door Lock Motor Rear LH
Position SW Rear LH
D15 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
Double Door Lock Motor Rear RH
Position SW Rear RH

F 10 Front Door Speaker LH
F 11 Front Door Speaker RH
F 12 Fuel Pump
Fuel Sender

H16 High Mounted Stop Light

I 16 Inner Mirror
I 17 Interior Light

J 11 Junction Connector