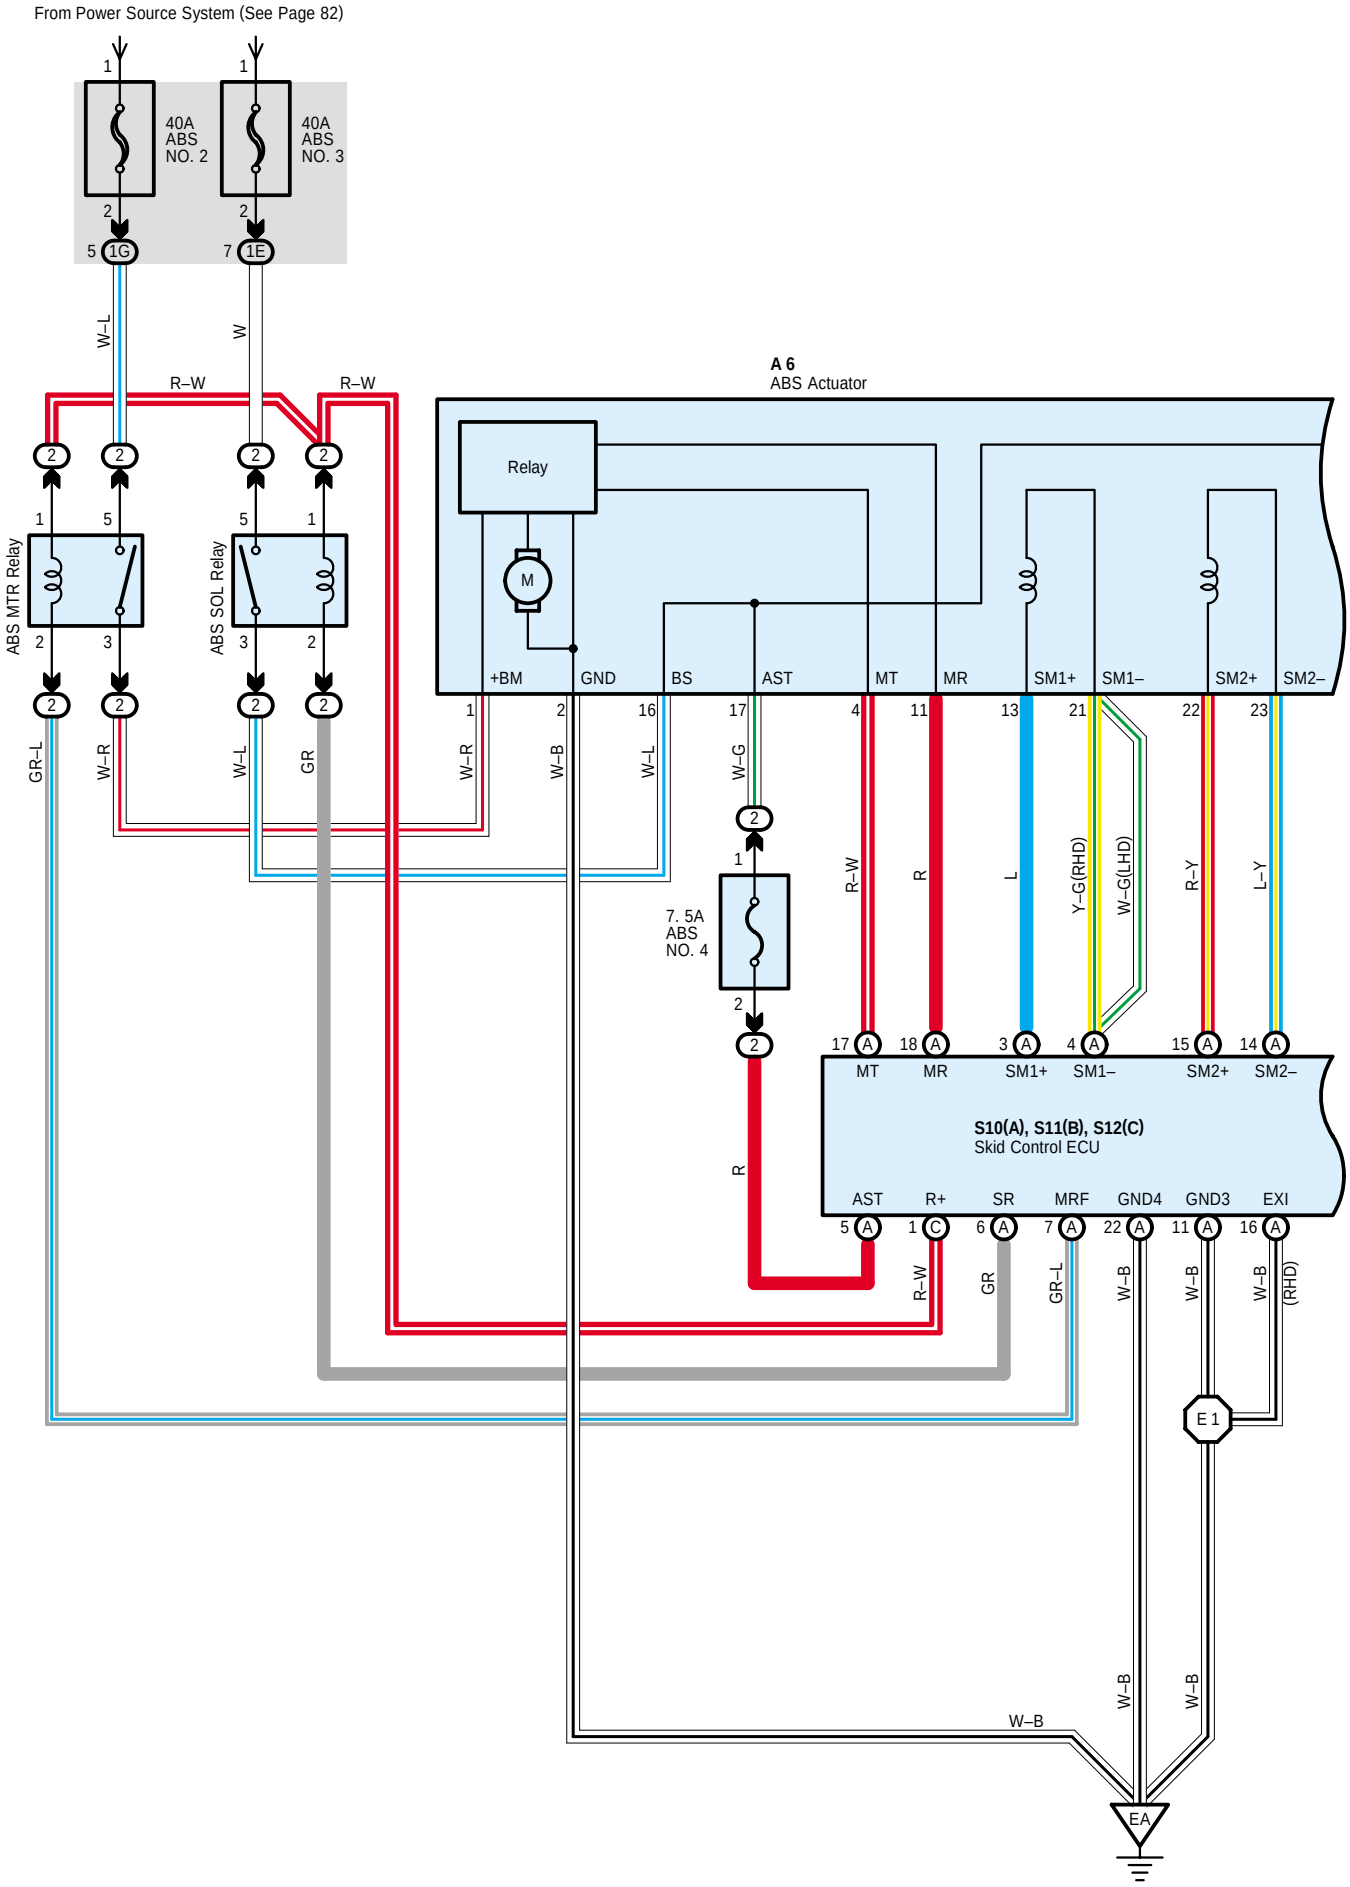
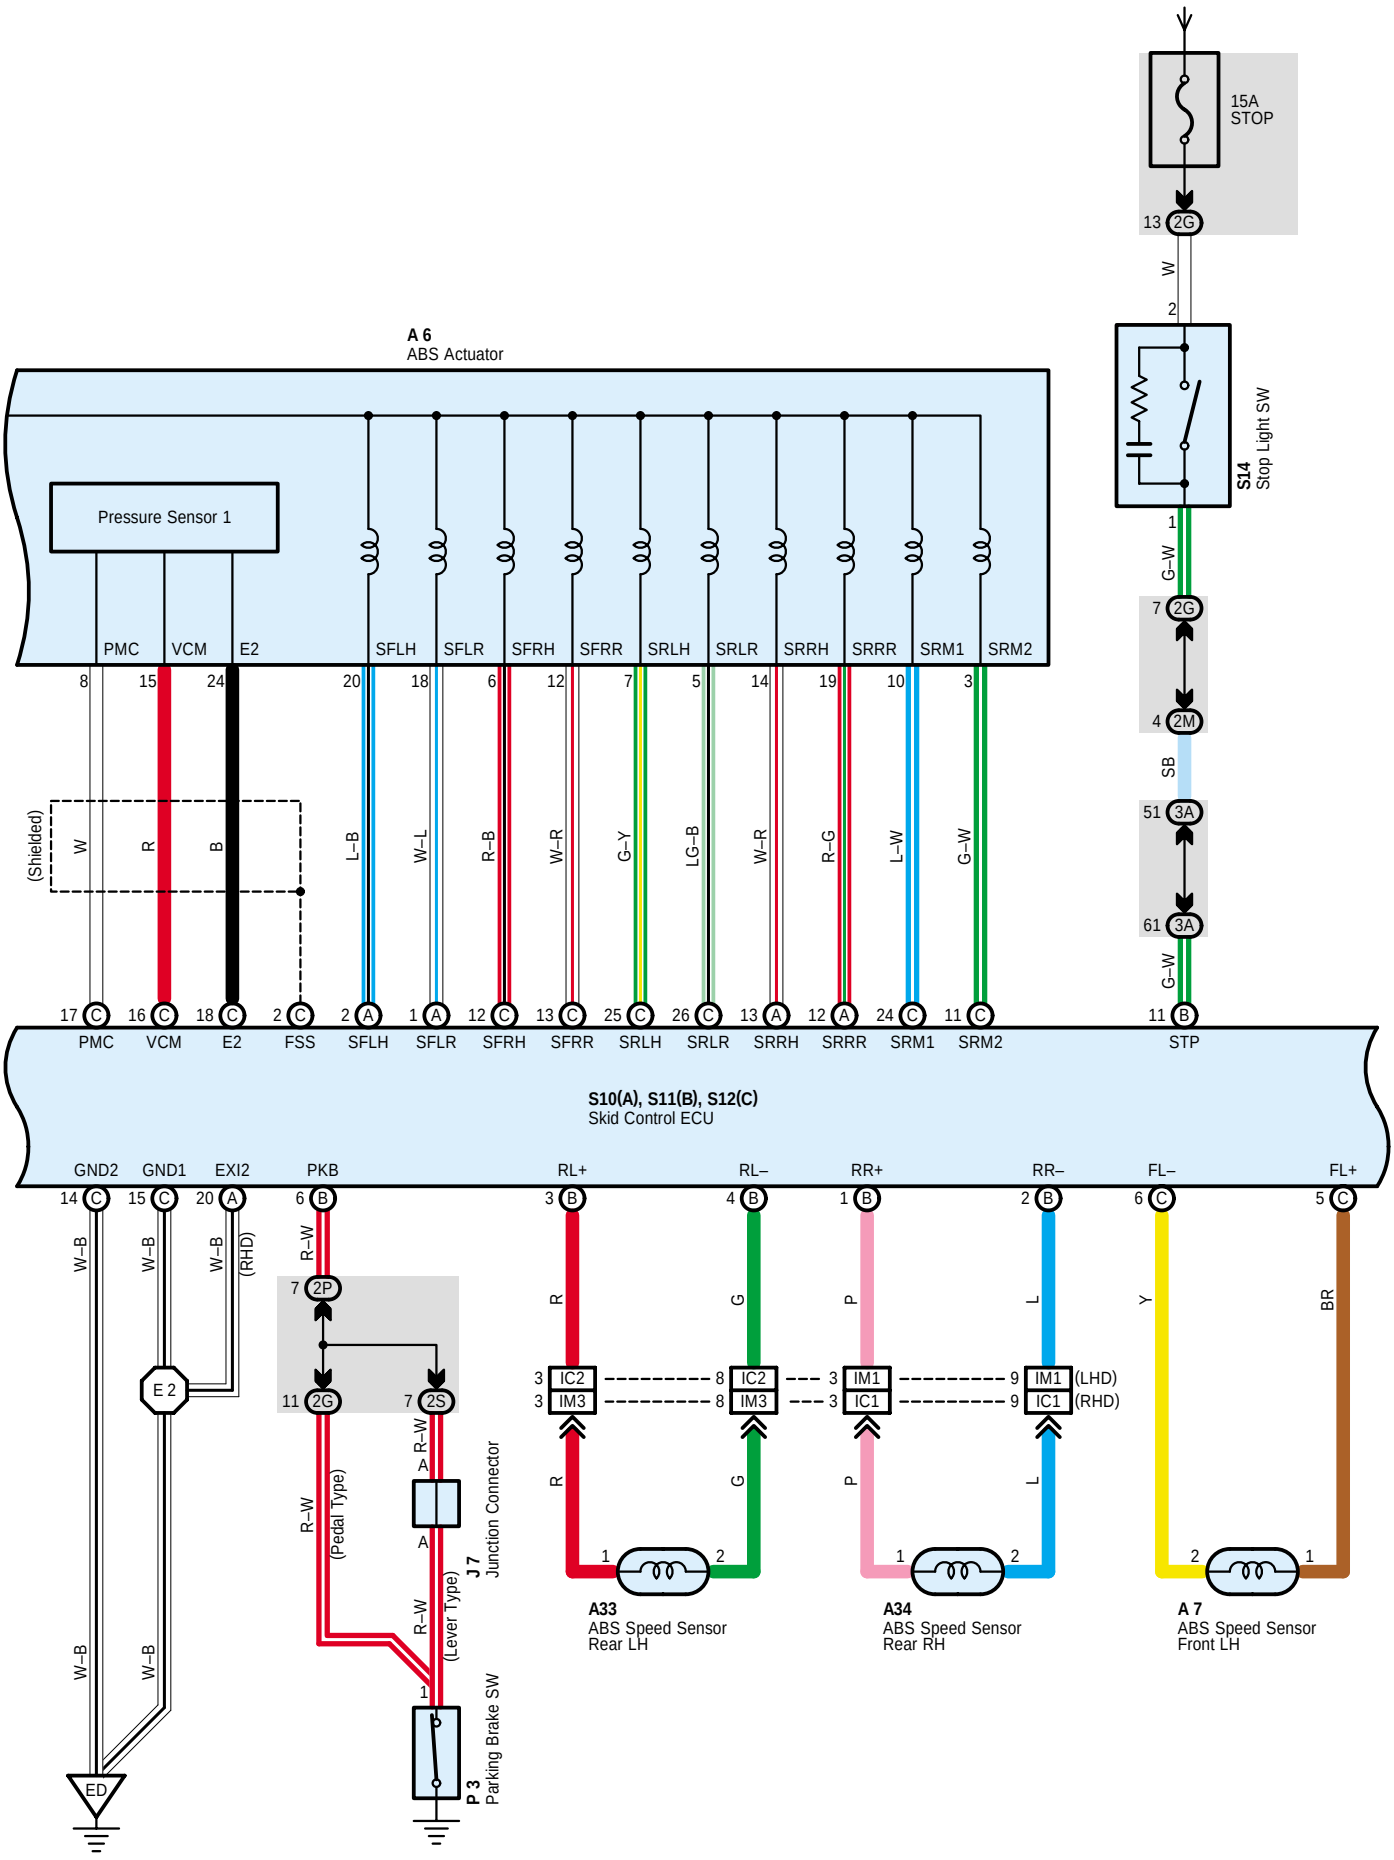
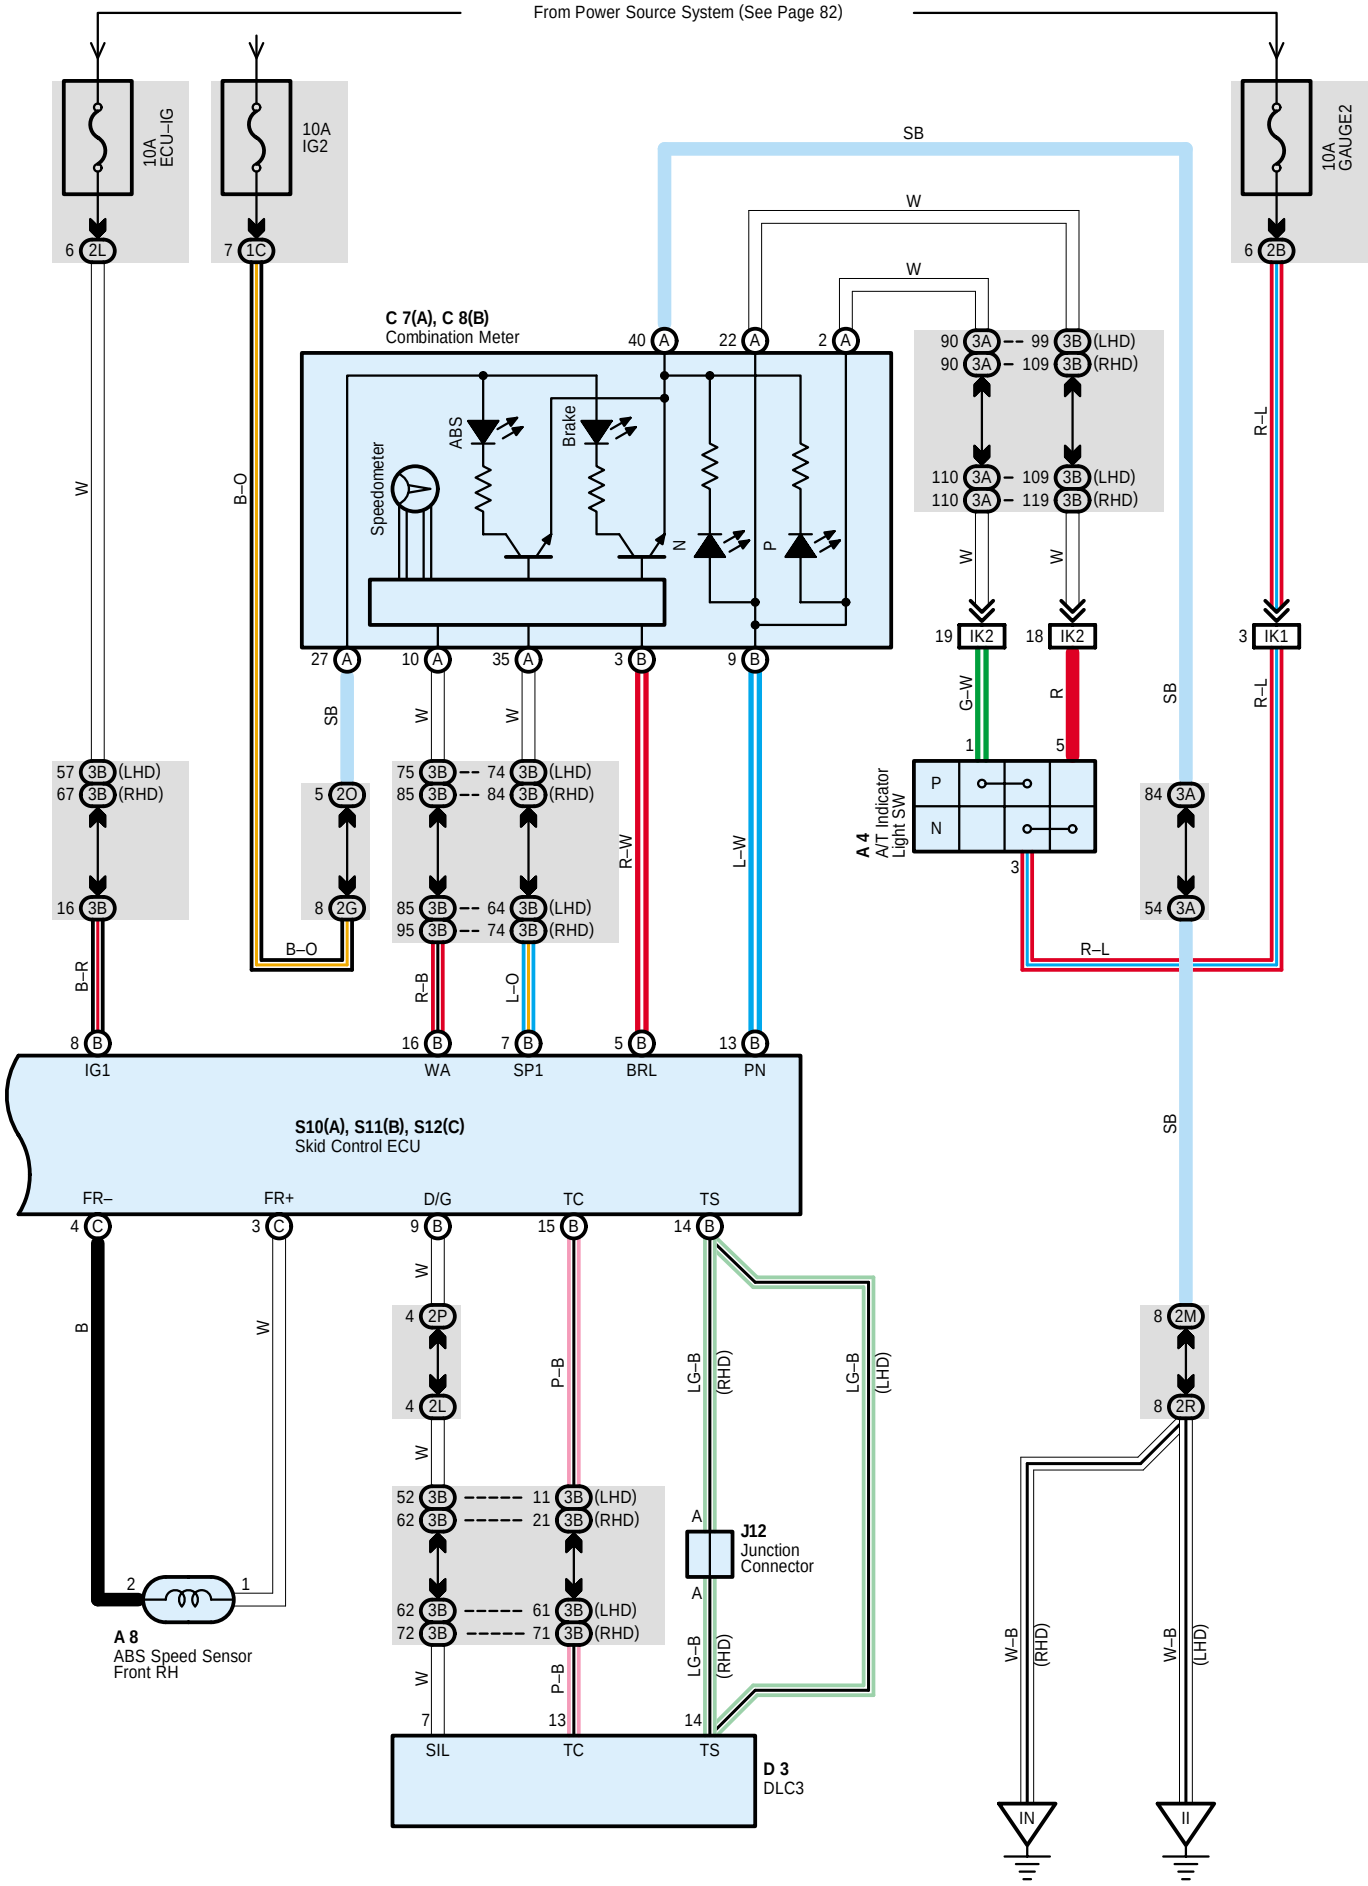

From Power Source System (See Page 82)
40A ABS NO. 2
40A ABS NO. 3
1G
1E
W–L
W
R–W
R–W
A 6
ABS Actuator
Relay
M
ABS MTR Relay
ABS SOL Relay
+BM
GND
BS
AST
MT
MR
SM1+
SM1–
SM2+
SM2–
GR–L
W–R
W–L
GR
W–R
W–B
W–L
W–G
7. 5A ABS NO. 4
R–W
R
L
Y–G(RHD)
W–G(LHD)
R–Y
L–Y
S10(A), S11(B), S12(C)
Skid Control ECU
AST
R+
SR
MRF
GND4
GND3
EXI
R
R–W
GR
GR–L
W–B
W–B
W–B
(RHD)
E 1
W–B
W–B
EA

From Power Source System (See Page 82)




From Power Source System (See Page 82)
10A ECU–IG
10A IG2
10A GAUGE2
C 7(A), C 8(B)
Combination Meter
Speedometer
ABS
Brake
S10(A), S11(B), S12(C)
Skid Control ECU
A 4
A/T Indicator Light SW
A 8
ABS Speed Sensor Front RH
J12
Junction Connector
D 3
DLC3
IG1
WA
SP1
BRL
PN
FR–
FR+
D/G
TC
TS
SIL
IN
II
W
B–O
B–R
R–B
L–O
R–W
L–W
SB
G–W
R
R–L
B
P–B
LG–B
W–B
(LHD)
(RHD)