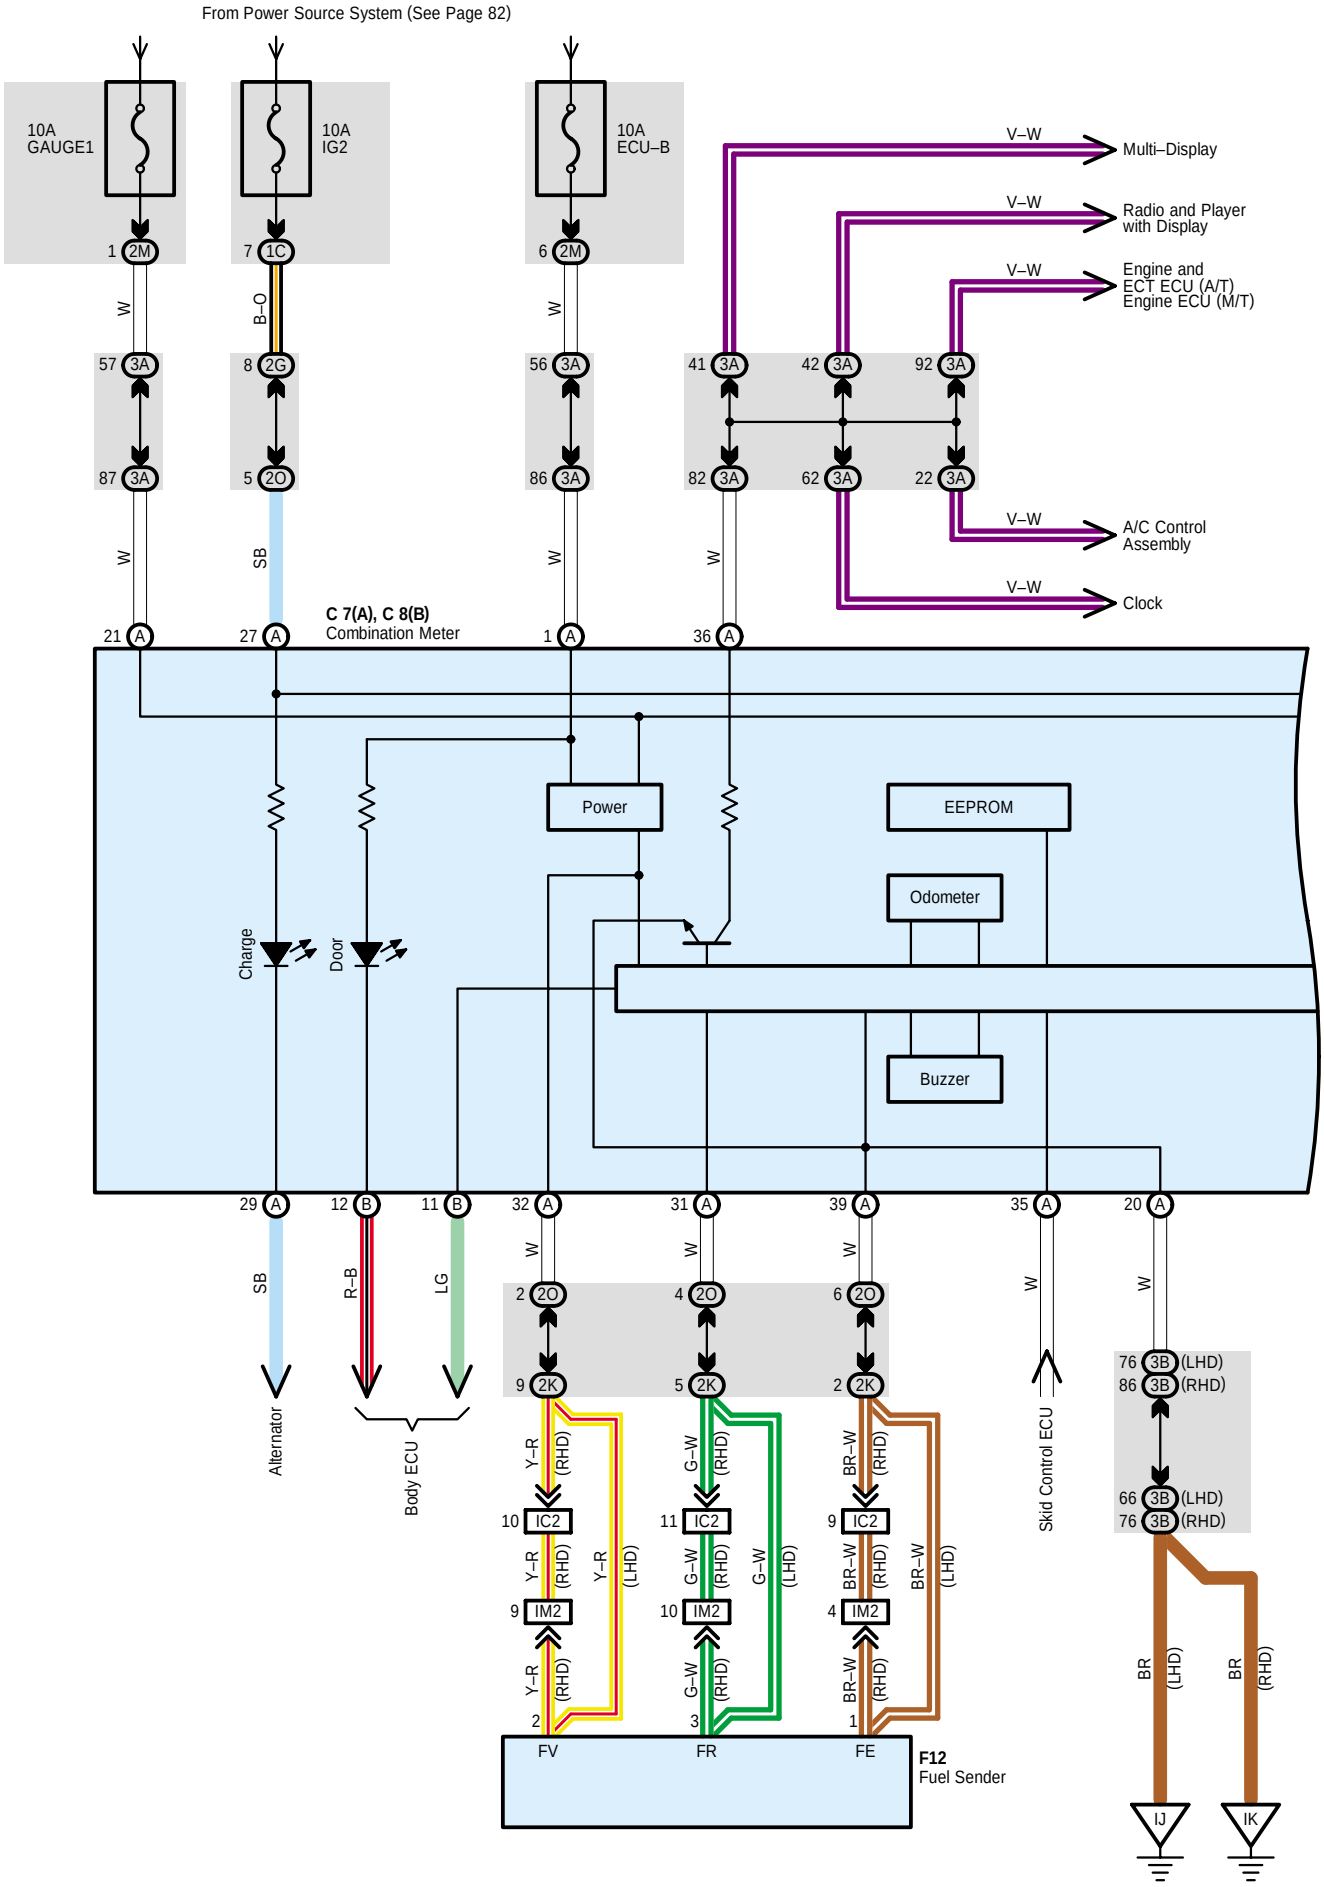
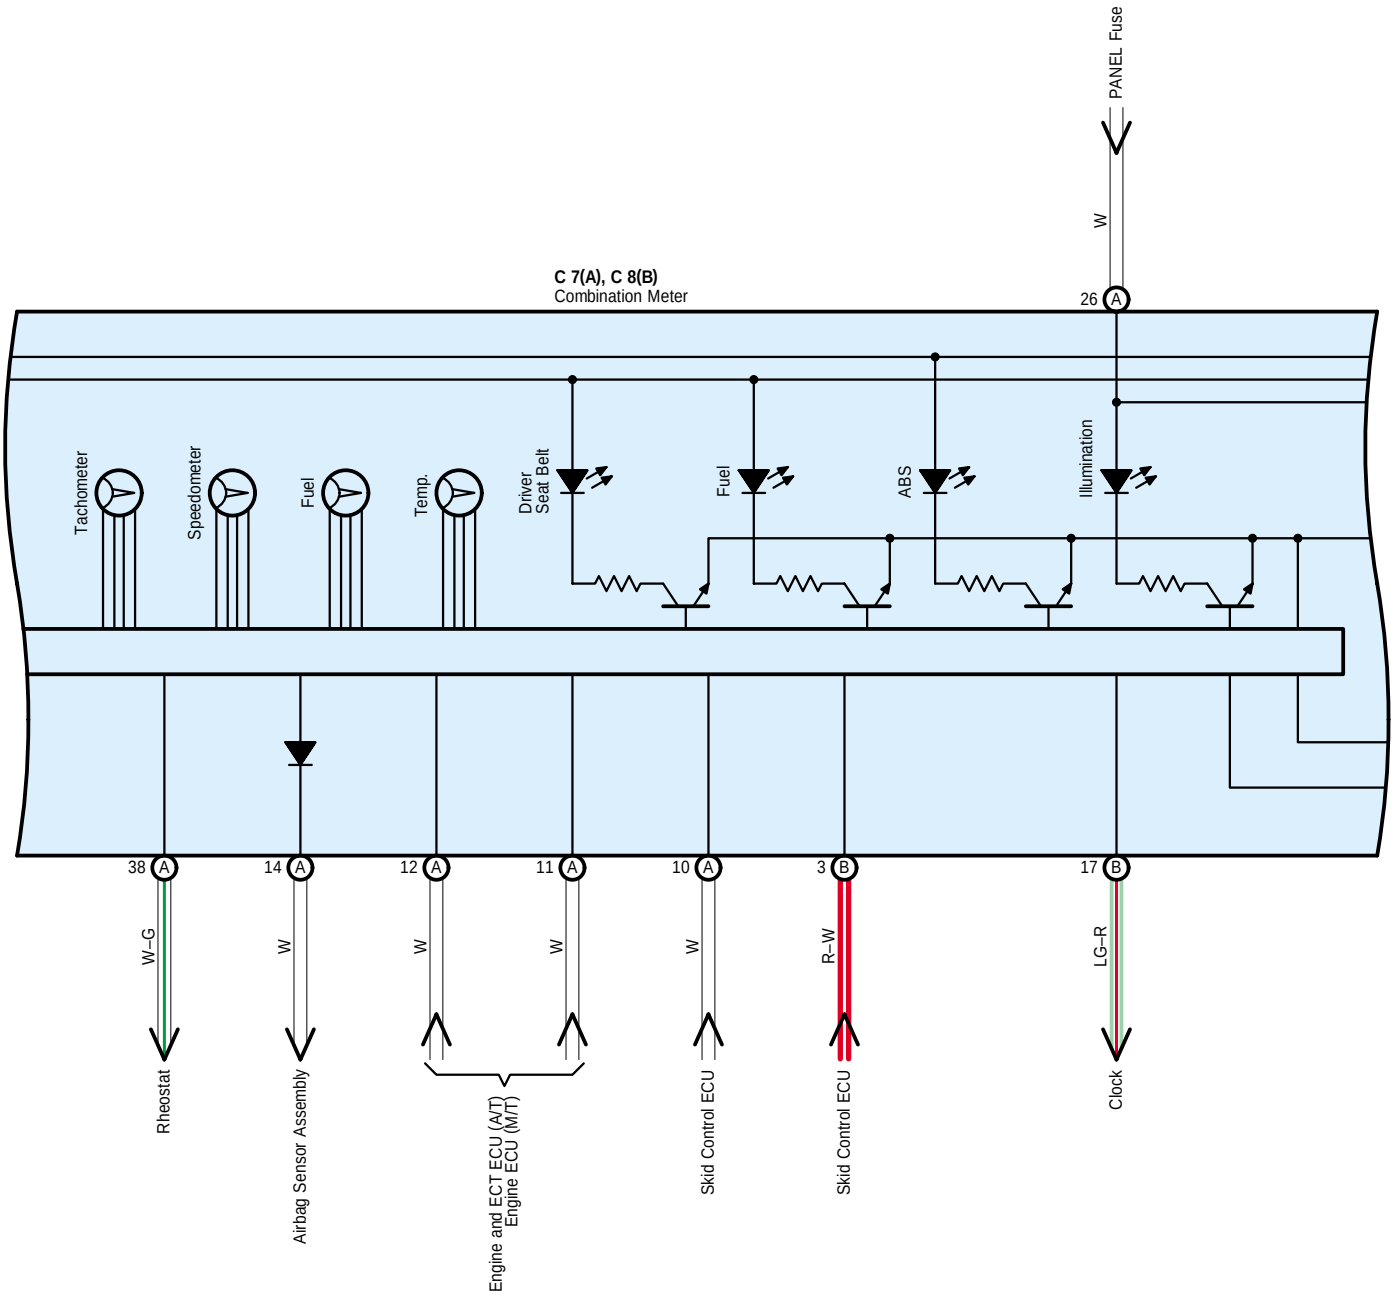
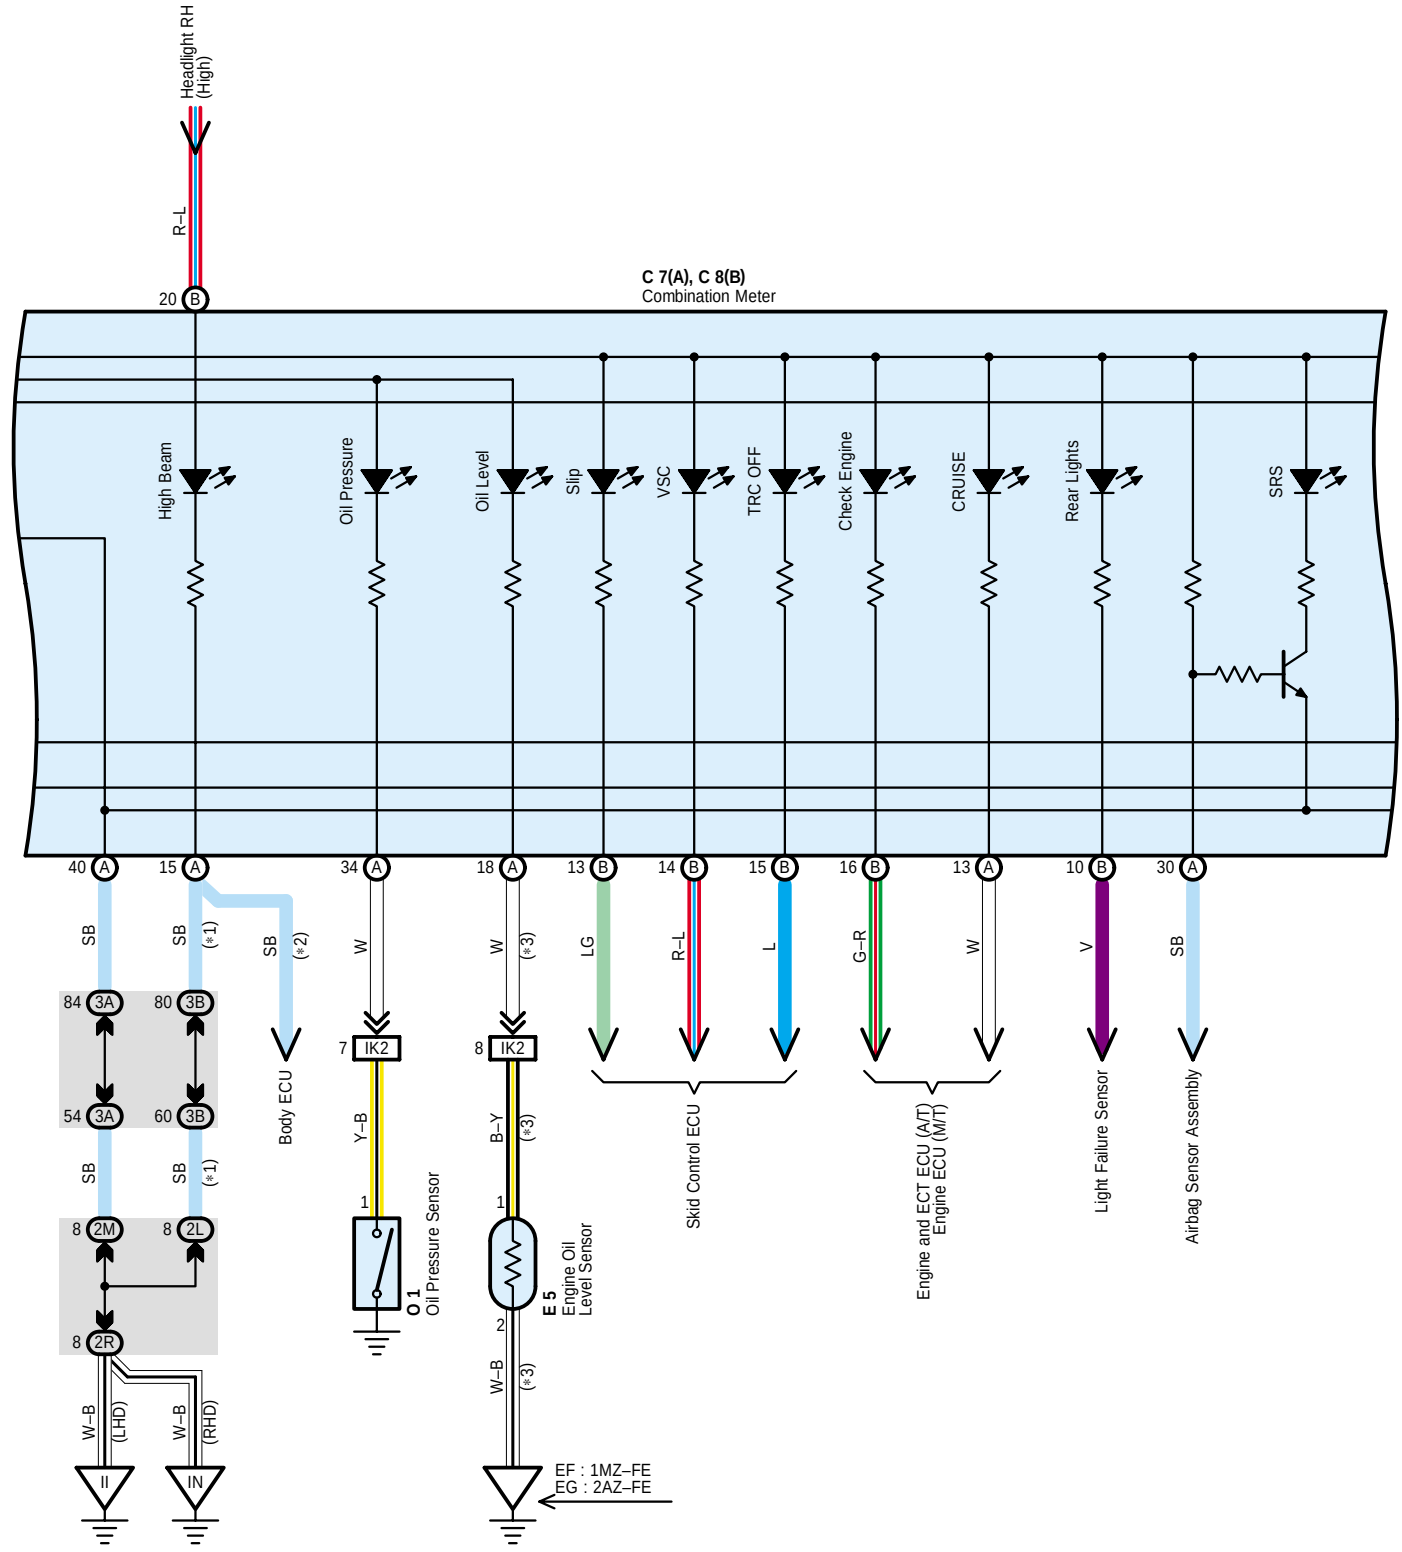

From Power Source System (See Page 82)
10A GAUGE1
10A IG2
10A ECU–B
1 2M
7 1C
6 2M
W
B–O
W
57 3A
8 2G
56 3A
87 3A
5 2O
86 3A
W
SB
W
21 A
27 A
1 A
36 A
C 7(A), C 8(B)
Combination Meter
V–W
Multi–Display
V–W
Radio and Player with Display
V–W
Engine and ECT ECU (A/T) Engine ECU (M/T)
41 3A
42 3A
92 3A
82 3A
62 3A
22 3A
V–W
A/C Control Assembly
V–W
Clock
Power
EEPROM
Odometer
Charge
Door
Buzzer
29 A
12 B
11 B
32 A
31 A
39 A
35 A
20 A
W
W
W
W
W
SB
R–B
LG
2 2O
4 2O
6 2O
9 2K
5 2K
2 2K
Alternator
Body ECU
Y–R (RHD)
G–W (RHD)
BR–W (RHD)
Skid Control ECU
76 3B (LHD)
86 3B (RHD)
10 IC2
11 IC2
9 IC2
66 3B (LHD)
76 3B (RHD)
Y–R (RHD)
Y–R (LHD)
G–W (RHD)
G–W (LHD)
BR–W (RHD)
BR–W (LHD)
9 IM2
10 IM2
4 IM2
BR (LHD)
BR (RHD)
Y–R (RHD)
G–W (RHD)
BR–W (RHD)
2
3
1
FV
FR
FE
F12
Fuel Sender
IJ
IK


PANEL Fuse
W
C 7(A), C 8(B)
Combination Meter
26 A
Tachometer
Speedometer
Fuel
Temp.
Driver Seat Belt
Fuel
ABS
Illumination
38 A
14 A
12 A
11 A
10 A
3 B
17 B
W–G
W
W
W
W
R–W
LG–R
Rheostat
Airbag Sensor Assembly
Engine and ECT ECU (A/T)
Engine ECU (M/T)
Skid Control ECU
Skid Control ECU
Clock


Headlight RH (High)
R–L
20 B
C 7(A), C 8(B)
Combination Meter
High Beam
Oil Pressure
Oil Level
Slip
VSC
TRC OFF
Check Engine
CRUISE
Rear Lights
SRS
40 A
15 A
34 A
18 A
13 B
14 B
15 B
16 B
13 A
10 B
30 A
SB
SB (*1)
SB (*2)
W
W (*3)
LG
R–L
L
G–R
W
V
SB
84 3A
80 3B
54 3A
60 3B
8 2M
8 2L
8 2R
W–B (LHD)
W–B (RHD)
II
IN
Body ECU
7 IK2
Y–B
1
O 1
Oil Pressure Sensor
8 IK2
B–Y (*3)
1
2
E 5
Engine Oil Level Sensor
W–B (*3)
EF : 1MZ–FE
EG : 2AZ–FE
Skid Control ECU
Engine and ECT ECU (A/T)
Engine ECU (M/T)
Light Failure Sensor
Airbag Sensor Assembly

∗ 1 : w/ Daytime Running Light
∗ 2 : w/o Daytime Running Light
∗ 3 : 1MZ–FE, 2AZ–FE
∗ 4 : w/o VSC

