



Double Locking (RHD)

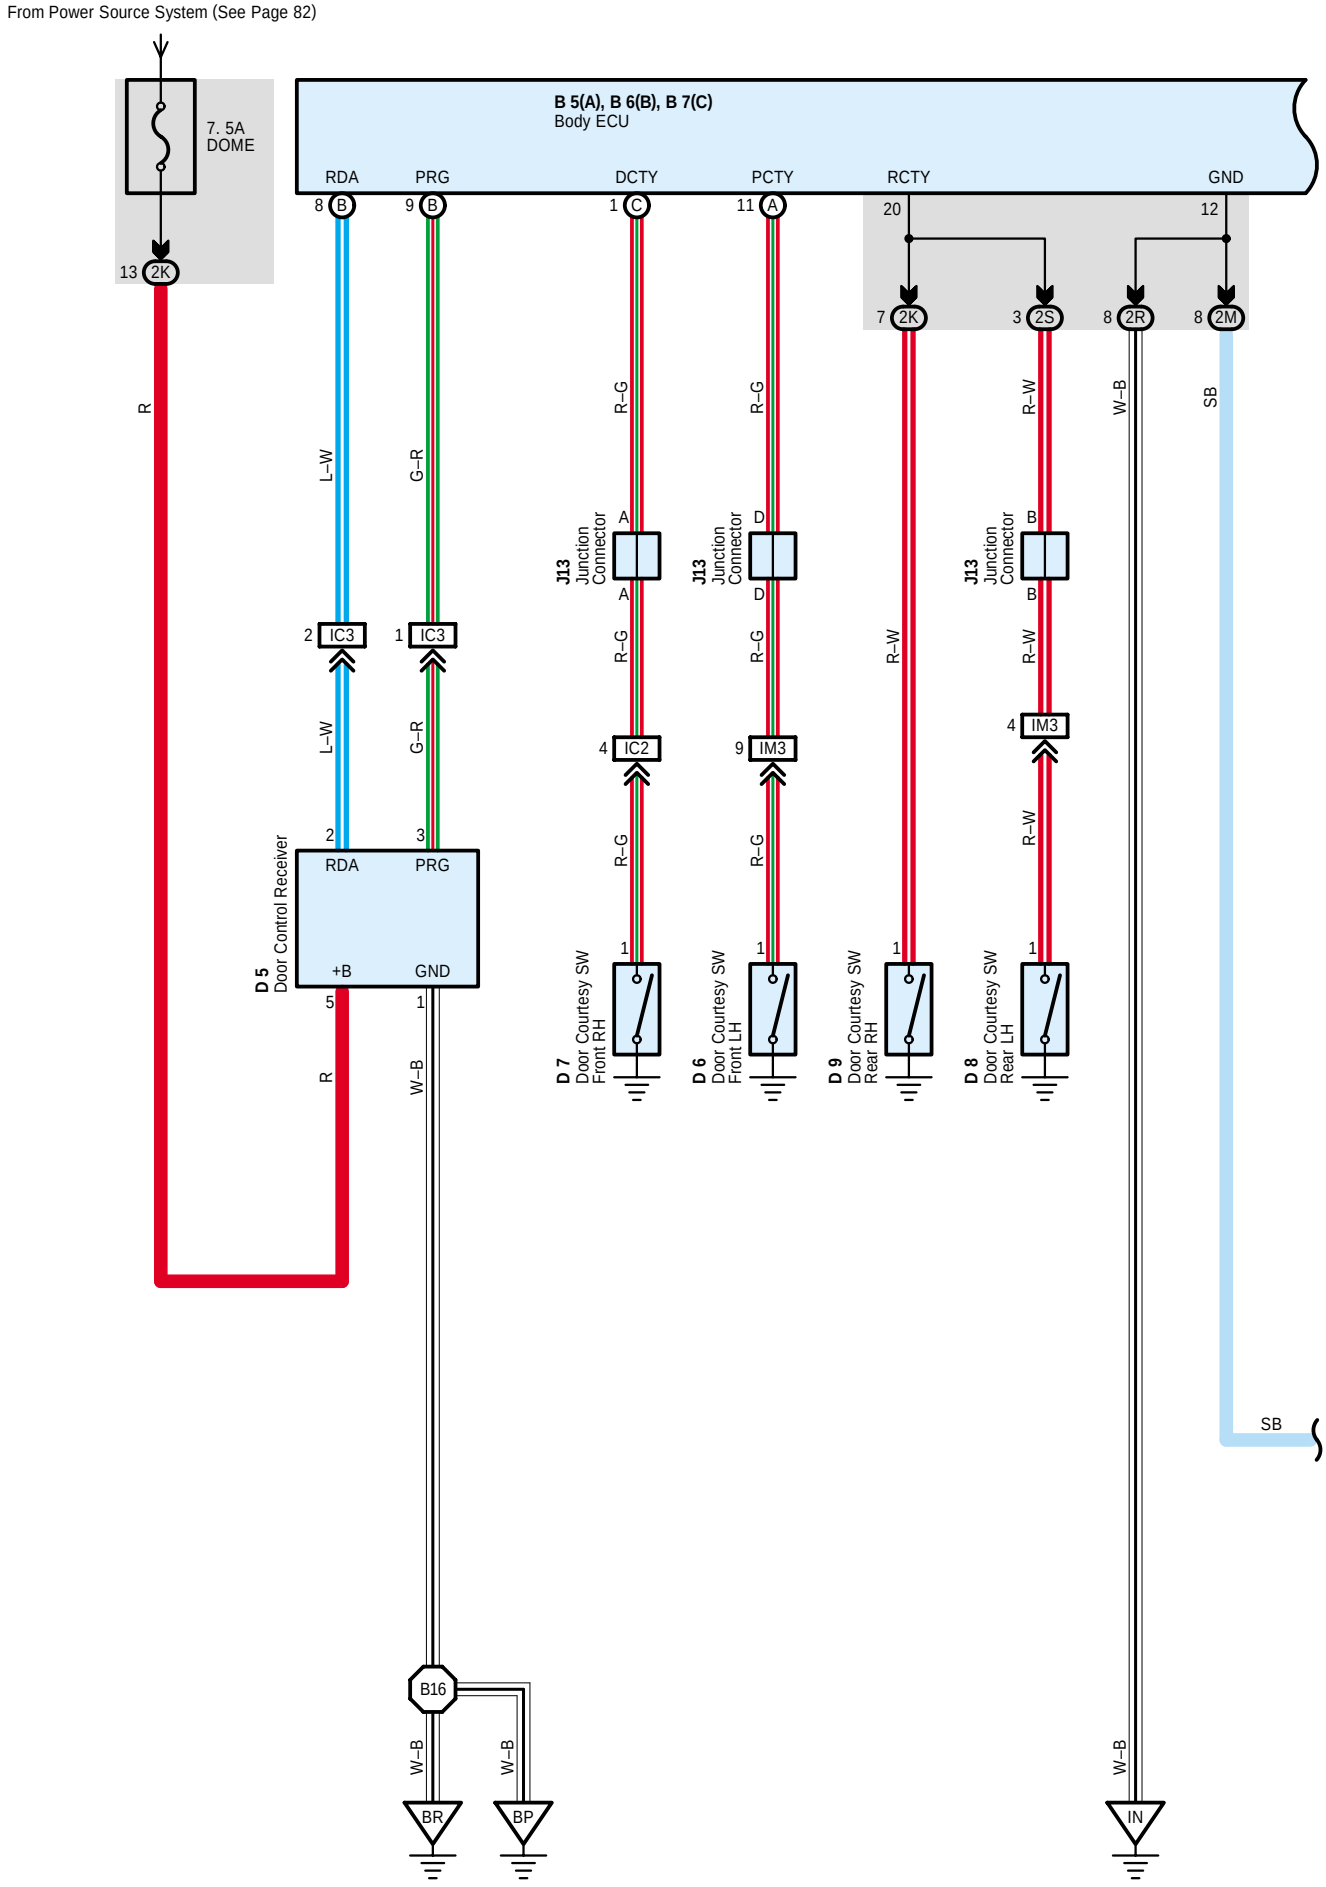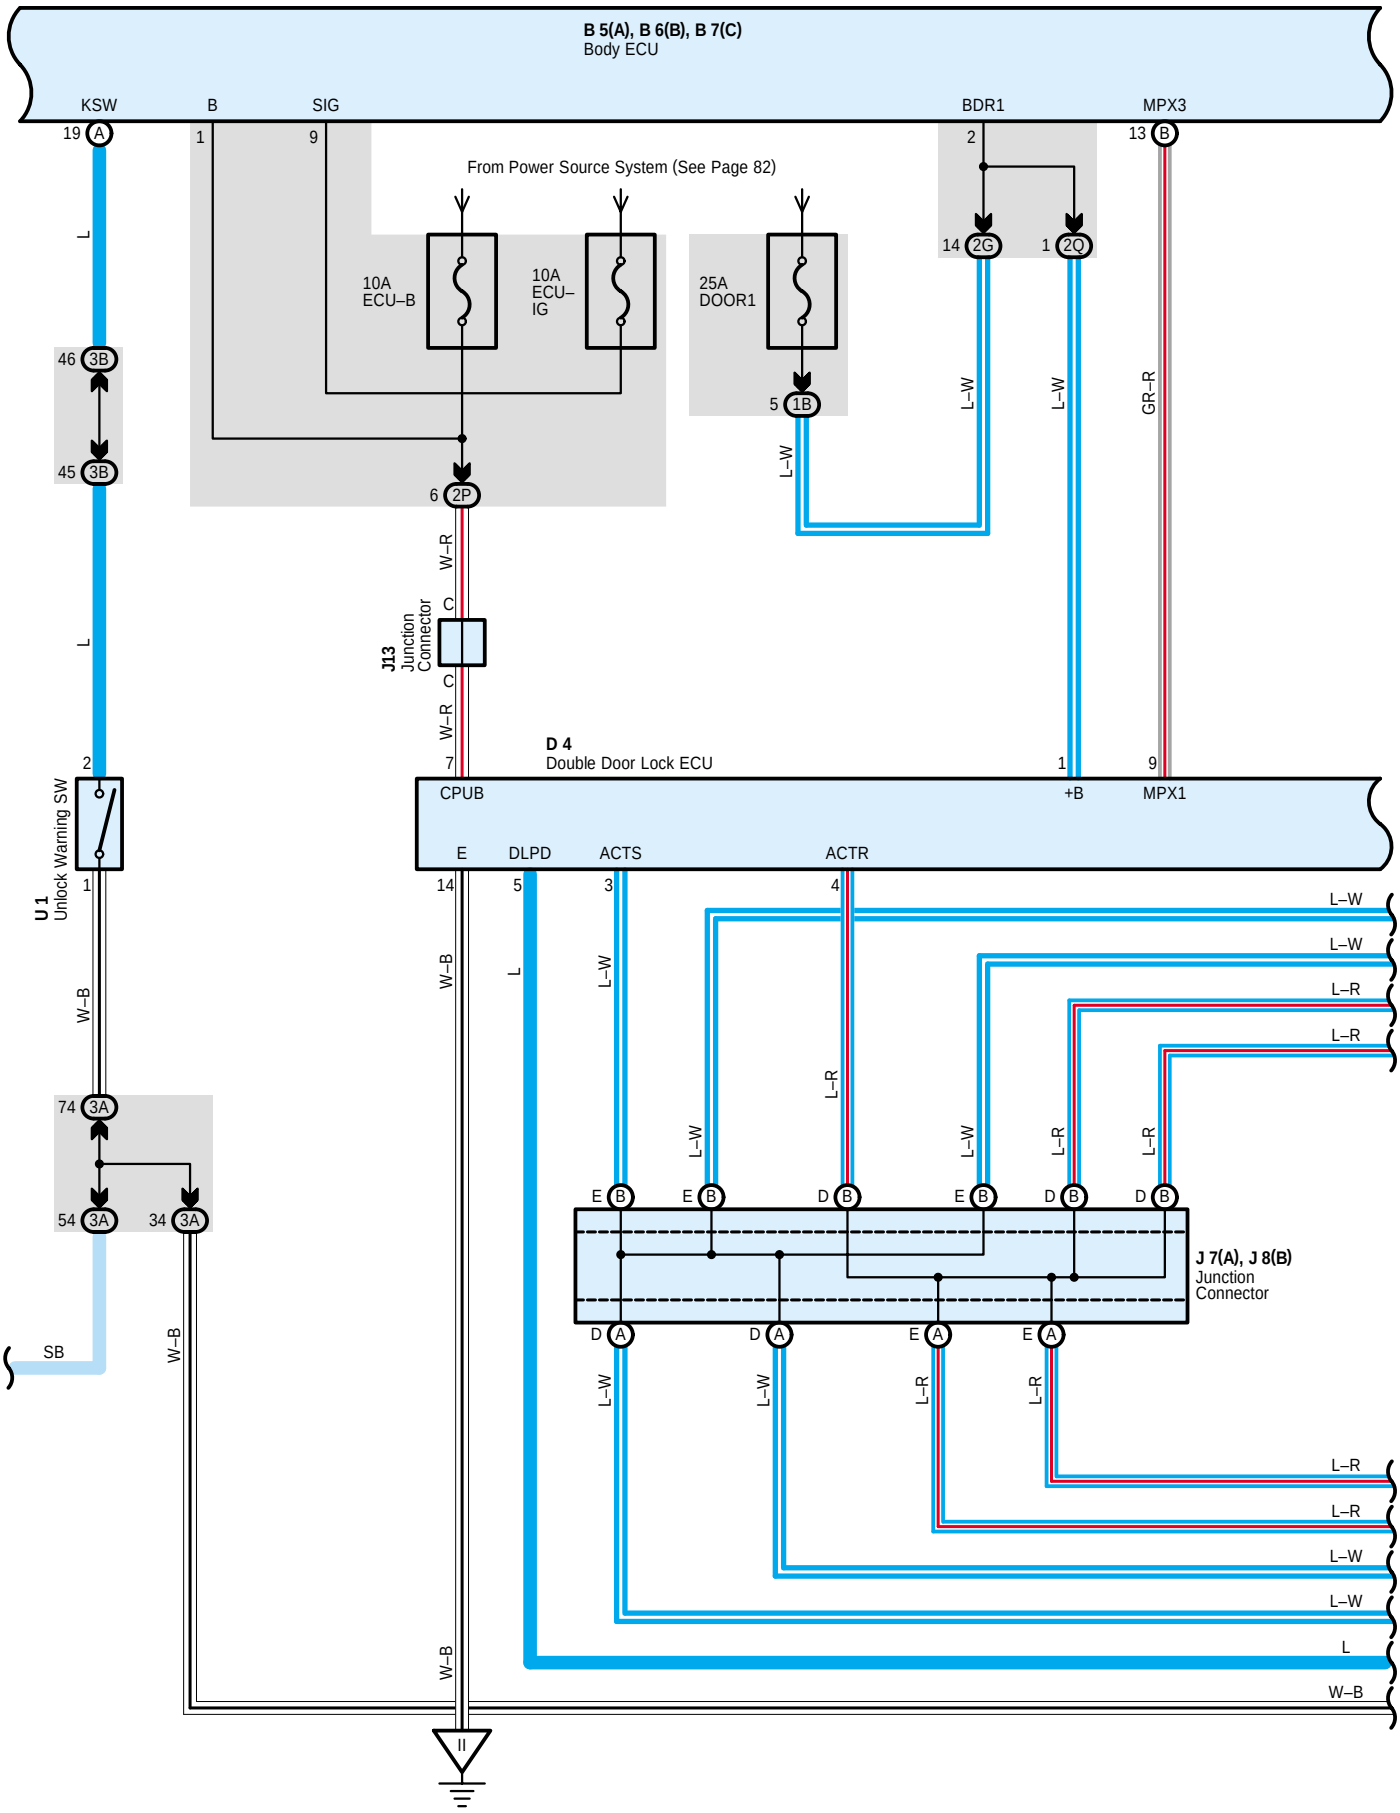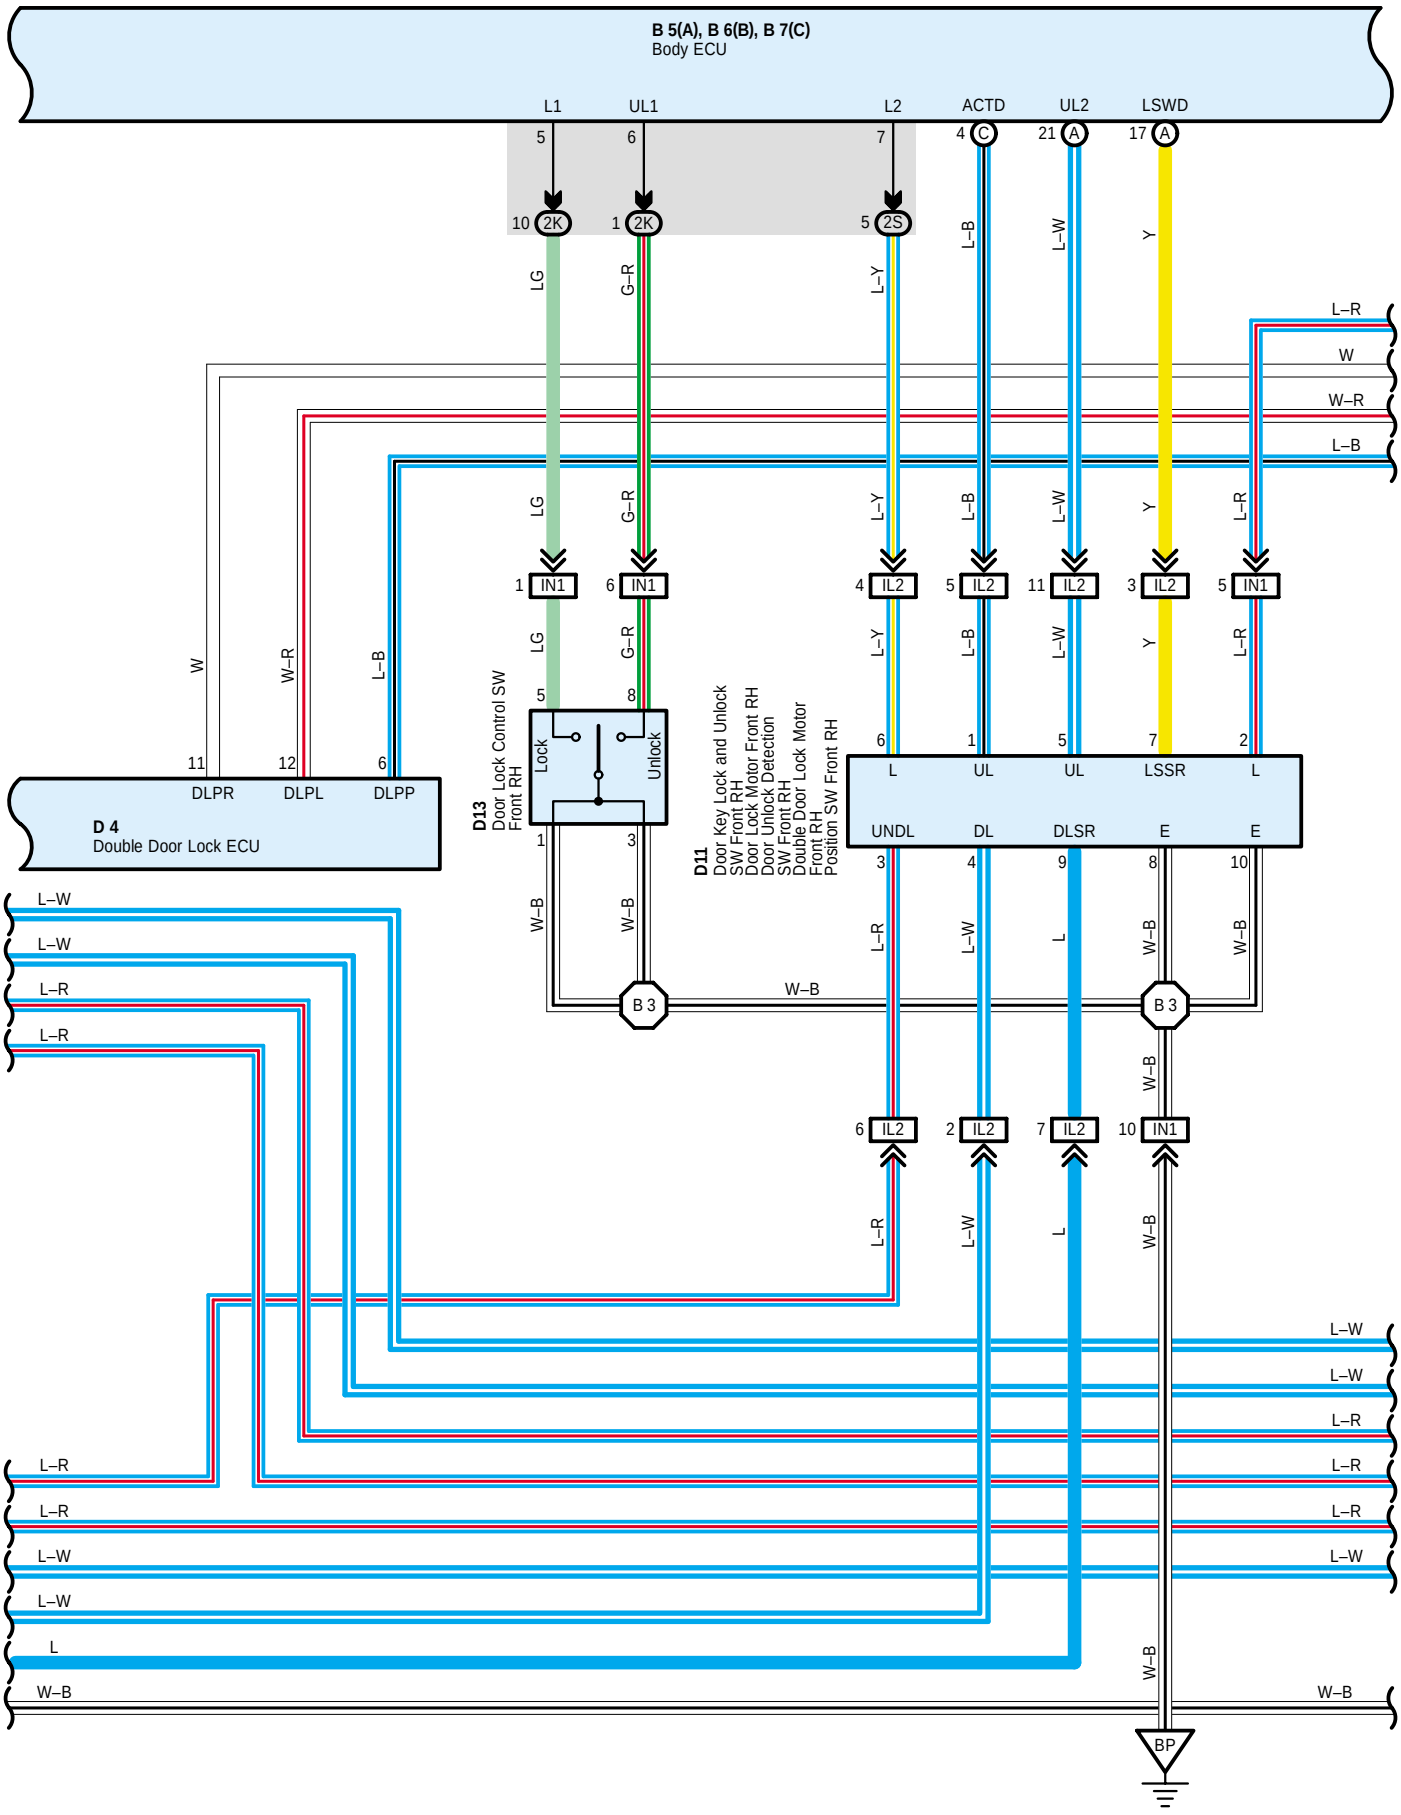


B 5(A), B 6(B), B 7(C)
Body ECU
KSW
B
SIG
BDR1
MPX3
From Power Source System (See Page 82)
10A ECU–B
10A ECU–IG
25A DOOR1
J13 Junction Connector
D 4
Double Door Lock ECU
CPUB
+B
MPX1
E
DLPD
ACTS
ACTR
U 1
Unlock Warning SW
J 7(A), J 8(B)
Junction Connector
SB

Double Locking (RHD)

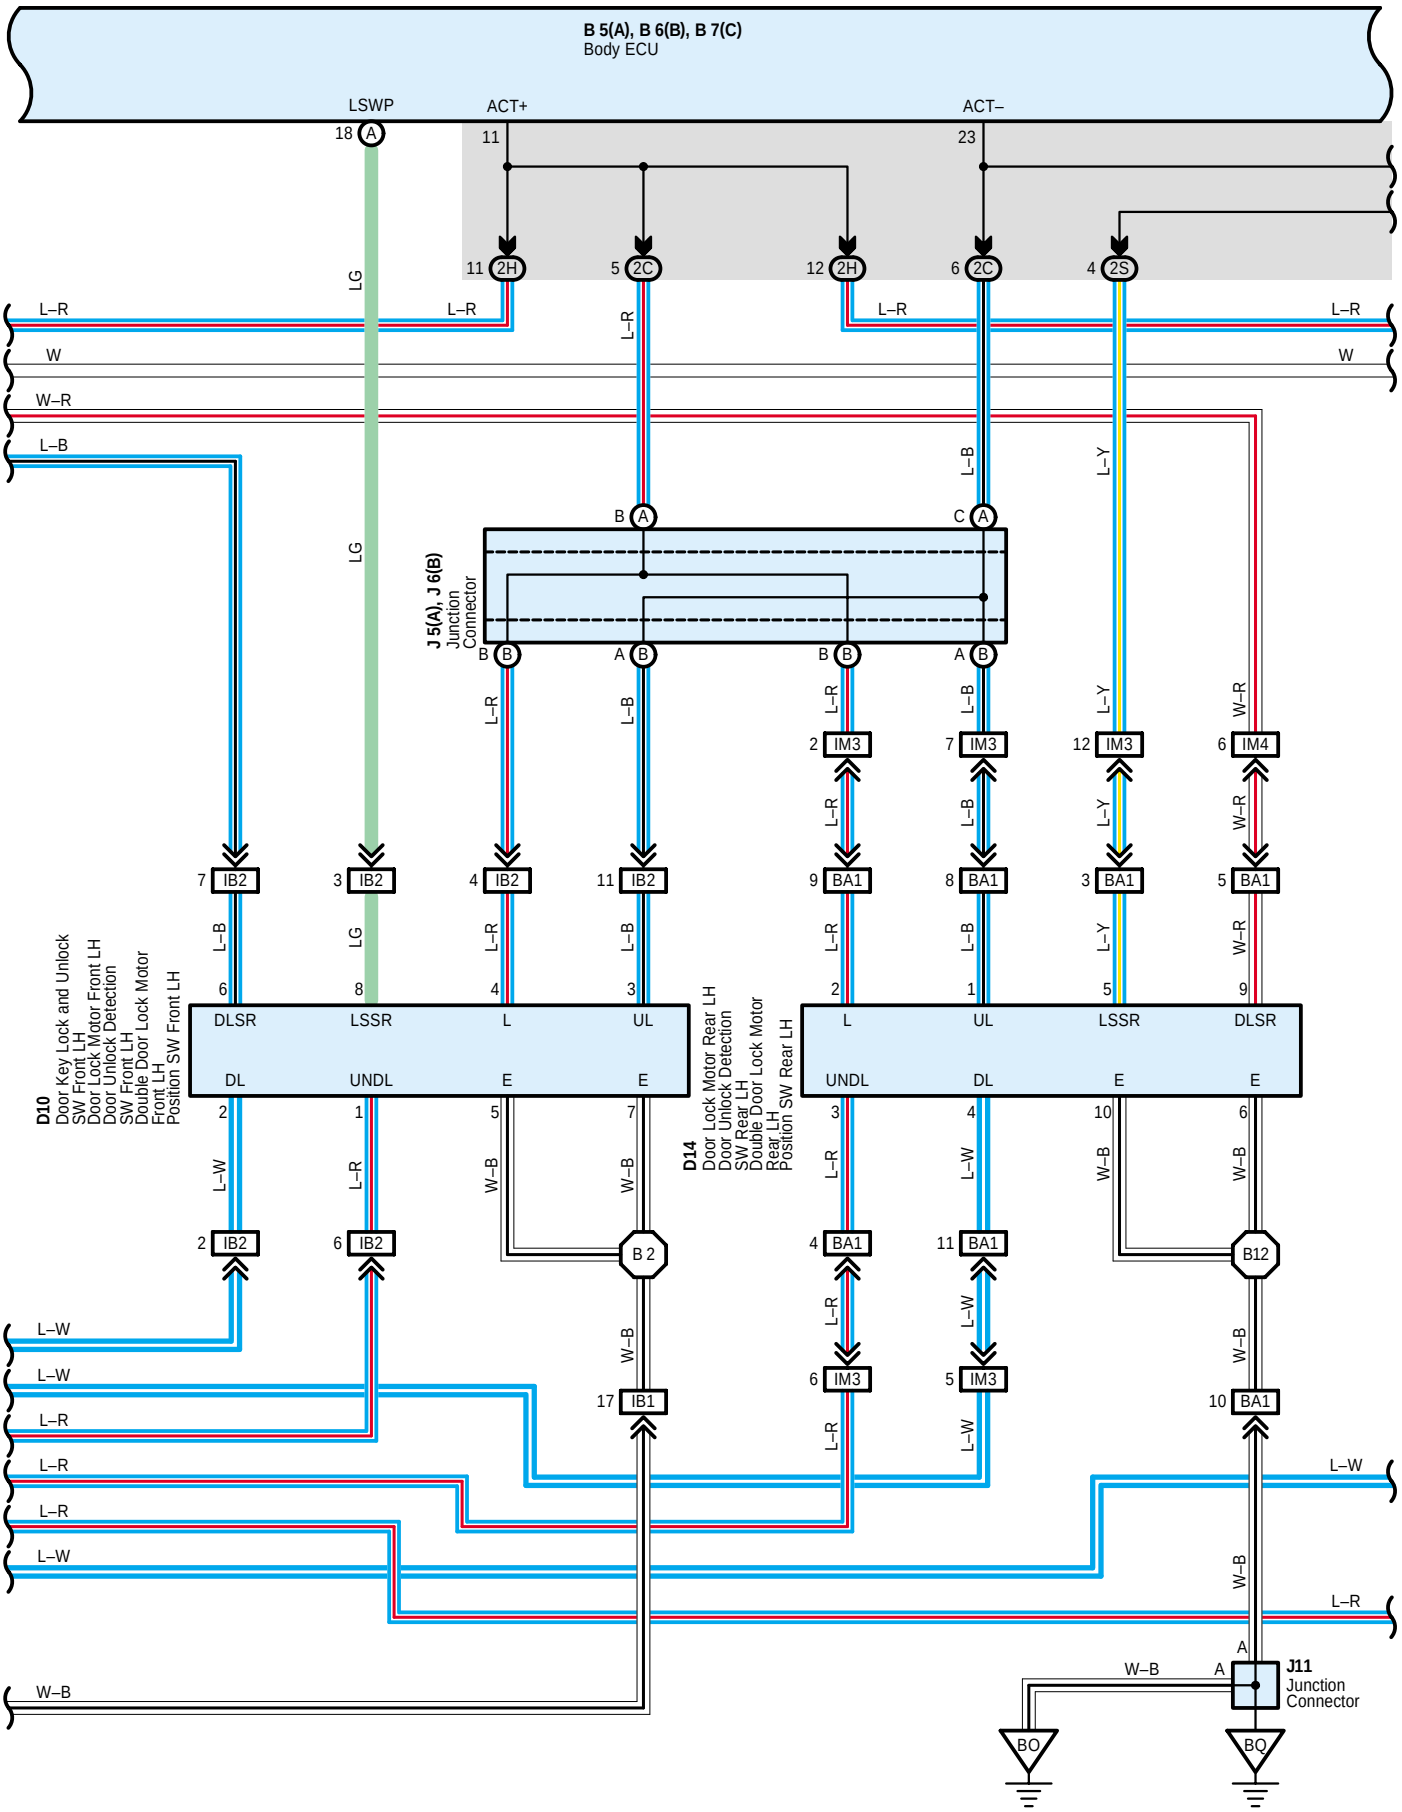


B 5(A), B 6(B), B 7(C)
Body ECU
LSWP
ACT+
ACT–
18 A
11
23
11 2H
5 2C
12 2H
6 2C
4 2S
LG
L–R
W
W–R
L–B
L–Y
J 5(A), J 6(B)
Junction Connector
B A
C A
B B
A B
B B
A B
2 IM3
7 IM3
12 IM3
6 IM4
9 BA1
8 BA1
3 BA1
5 BA1
7 IB2
3 IB2
4 IB2
11 IB2
D10
Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
Double Door Lock Motor Front LH
Position SW Front LH
DLSR
LSSR
L
UL
DL
UNDL
E
E
D14
Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
Double Door Lock Motor Rear LH
Position SW Rear LH
L
UL
LSSR
DLSR
UNDL
DL
E
E
W–B
L–W
2 IB2
6 IB2
B 2
4 BA1
11 BA1
B12
6 IM3
5 IM3
17 IB1
10 BA1
J11
Junction Connector
BO
BO

Double Locking (RHD)

From Power Source System (See Page 82)

