



I GROUND POINT (LHD)

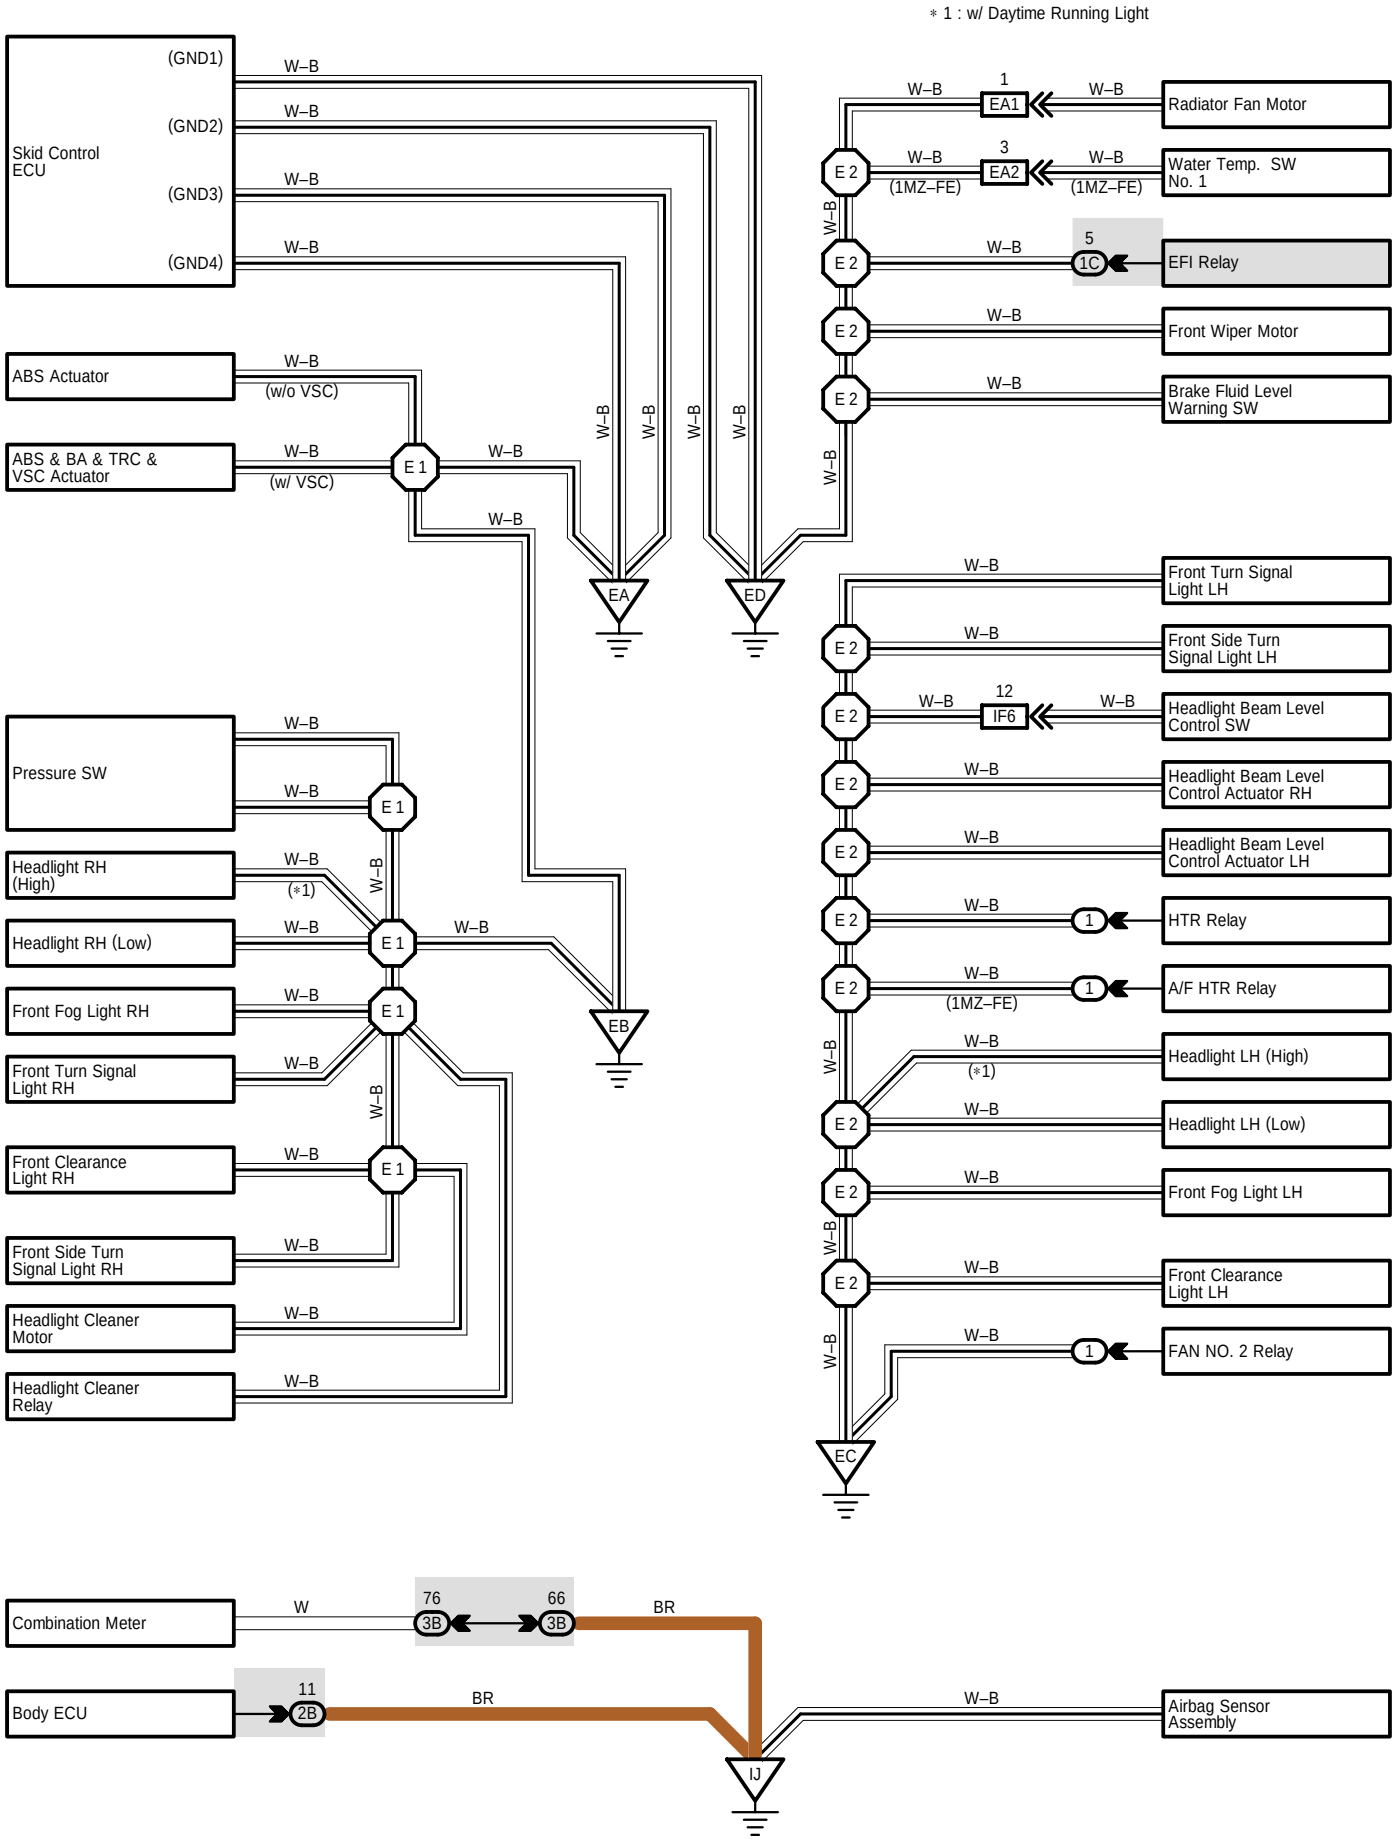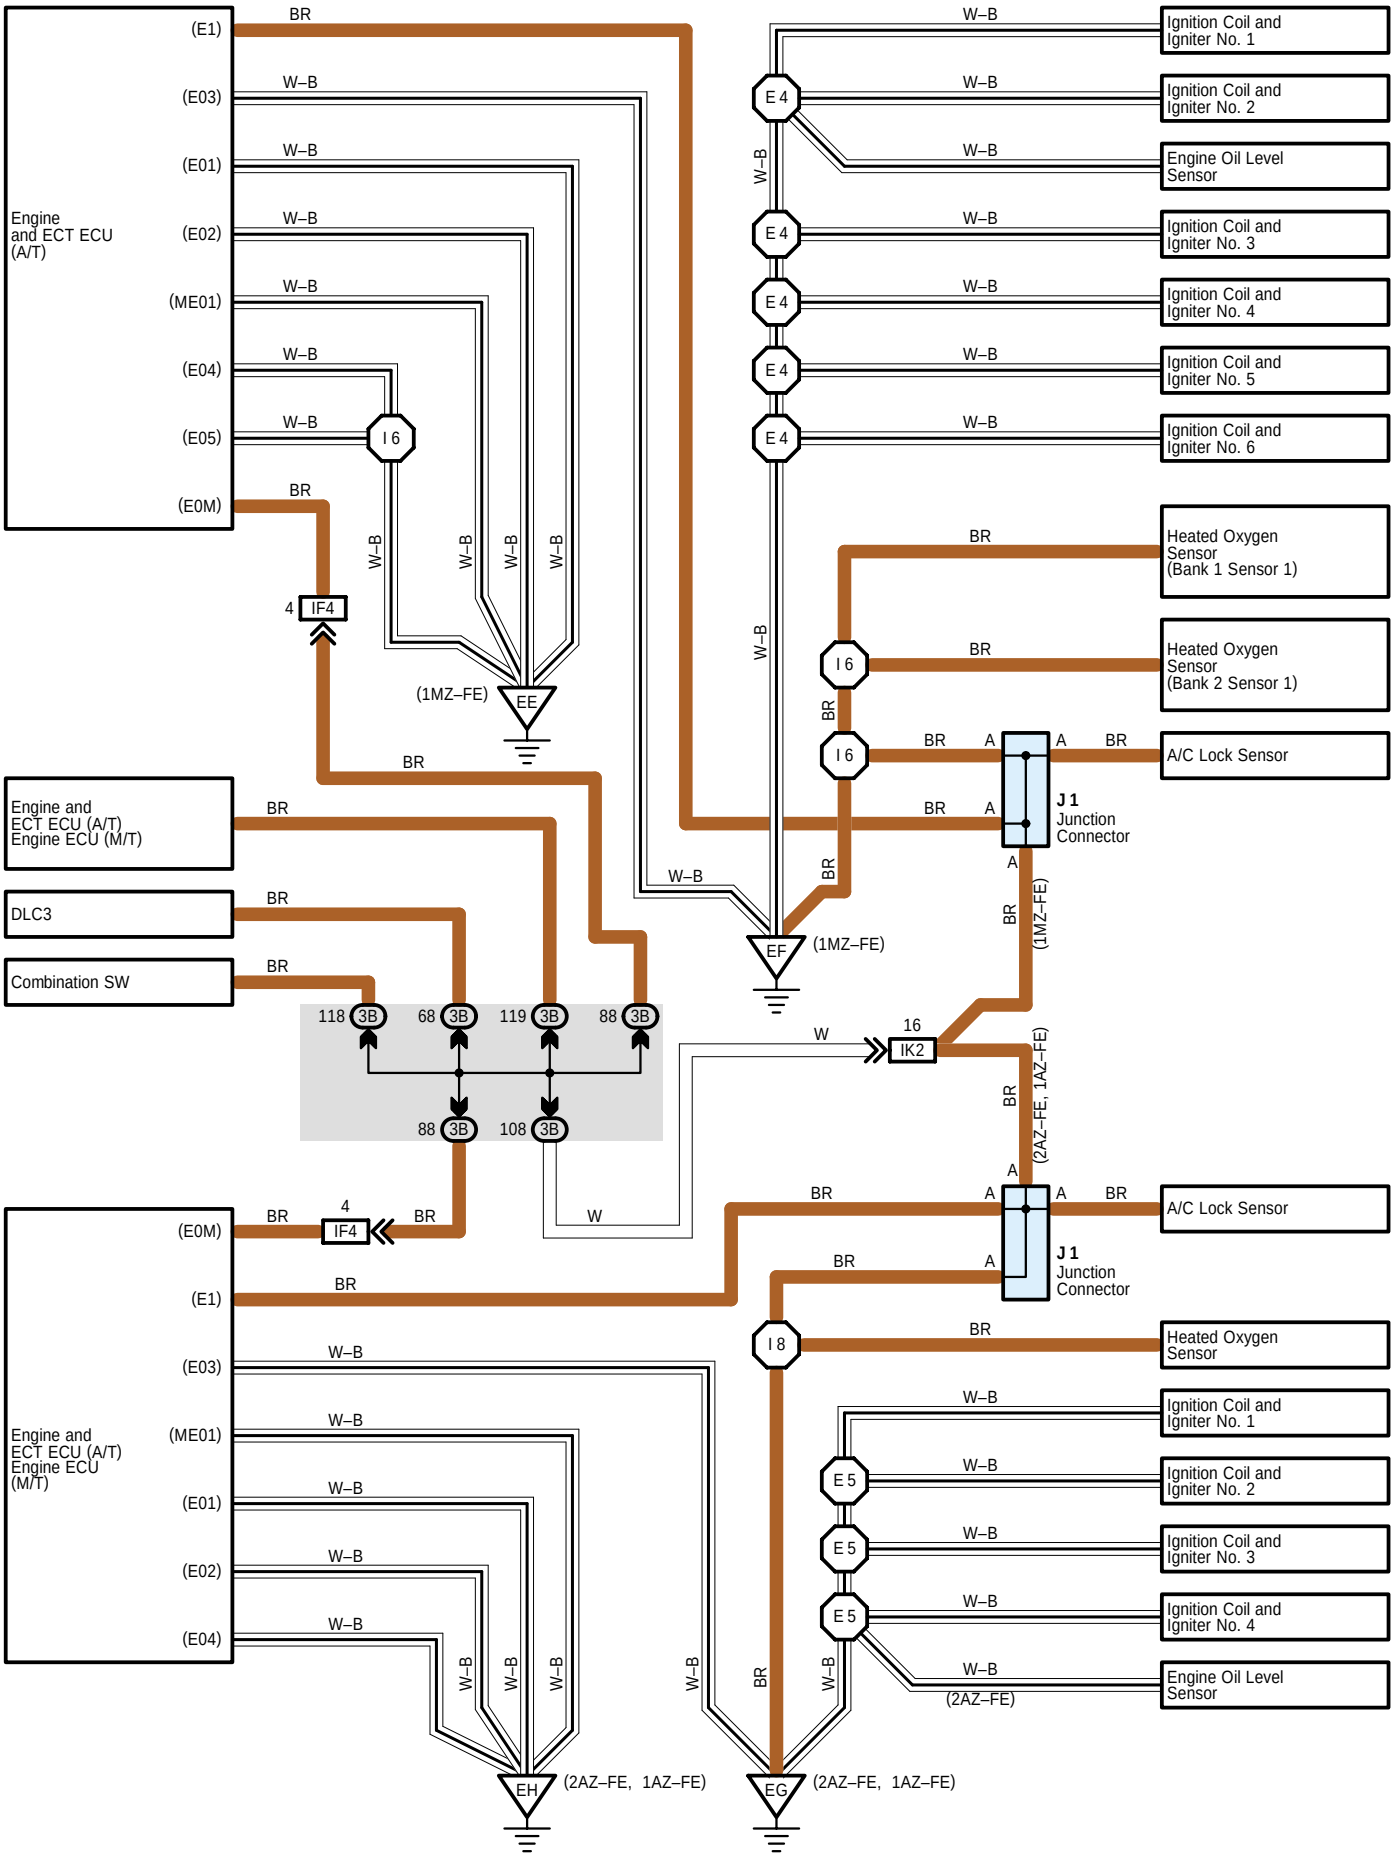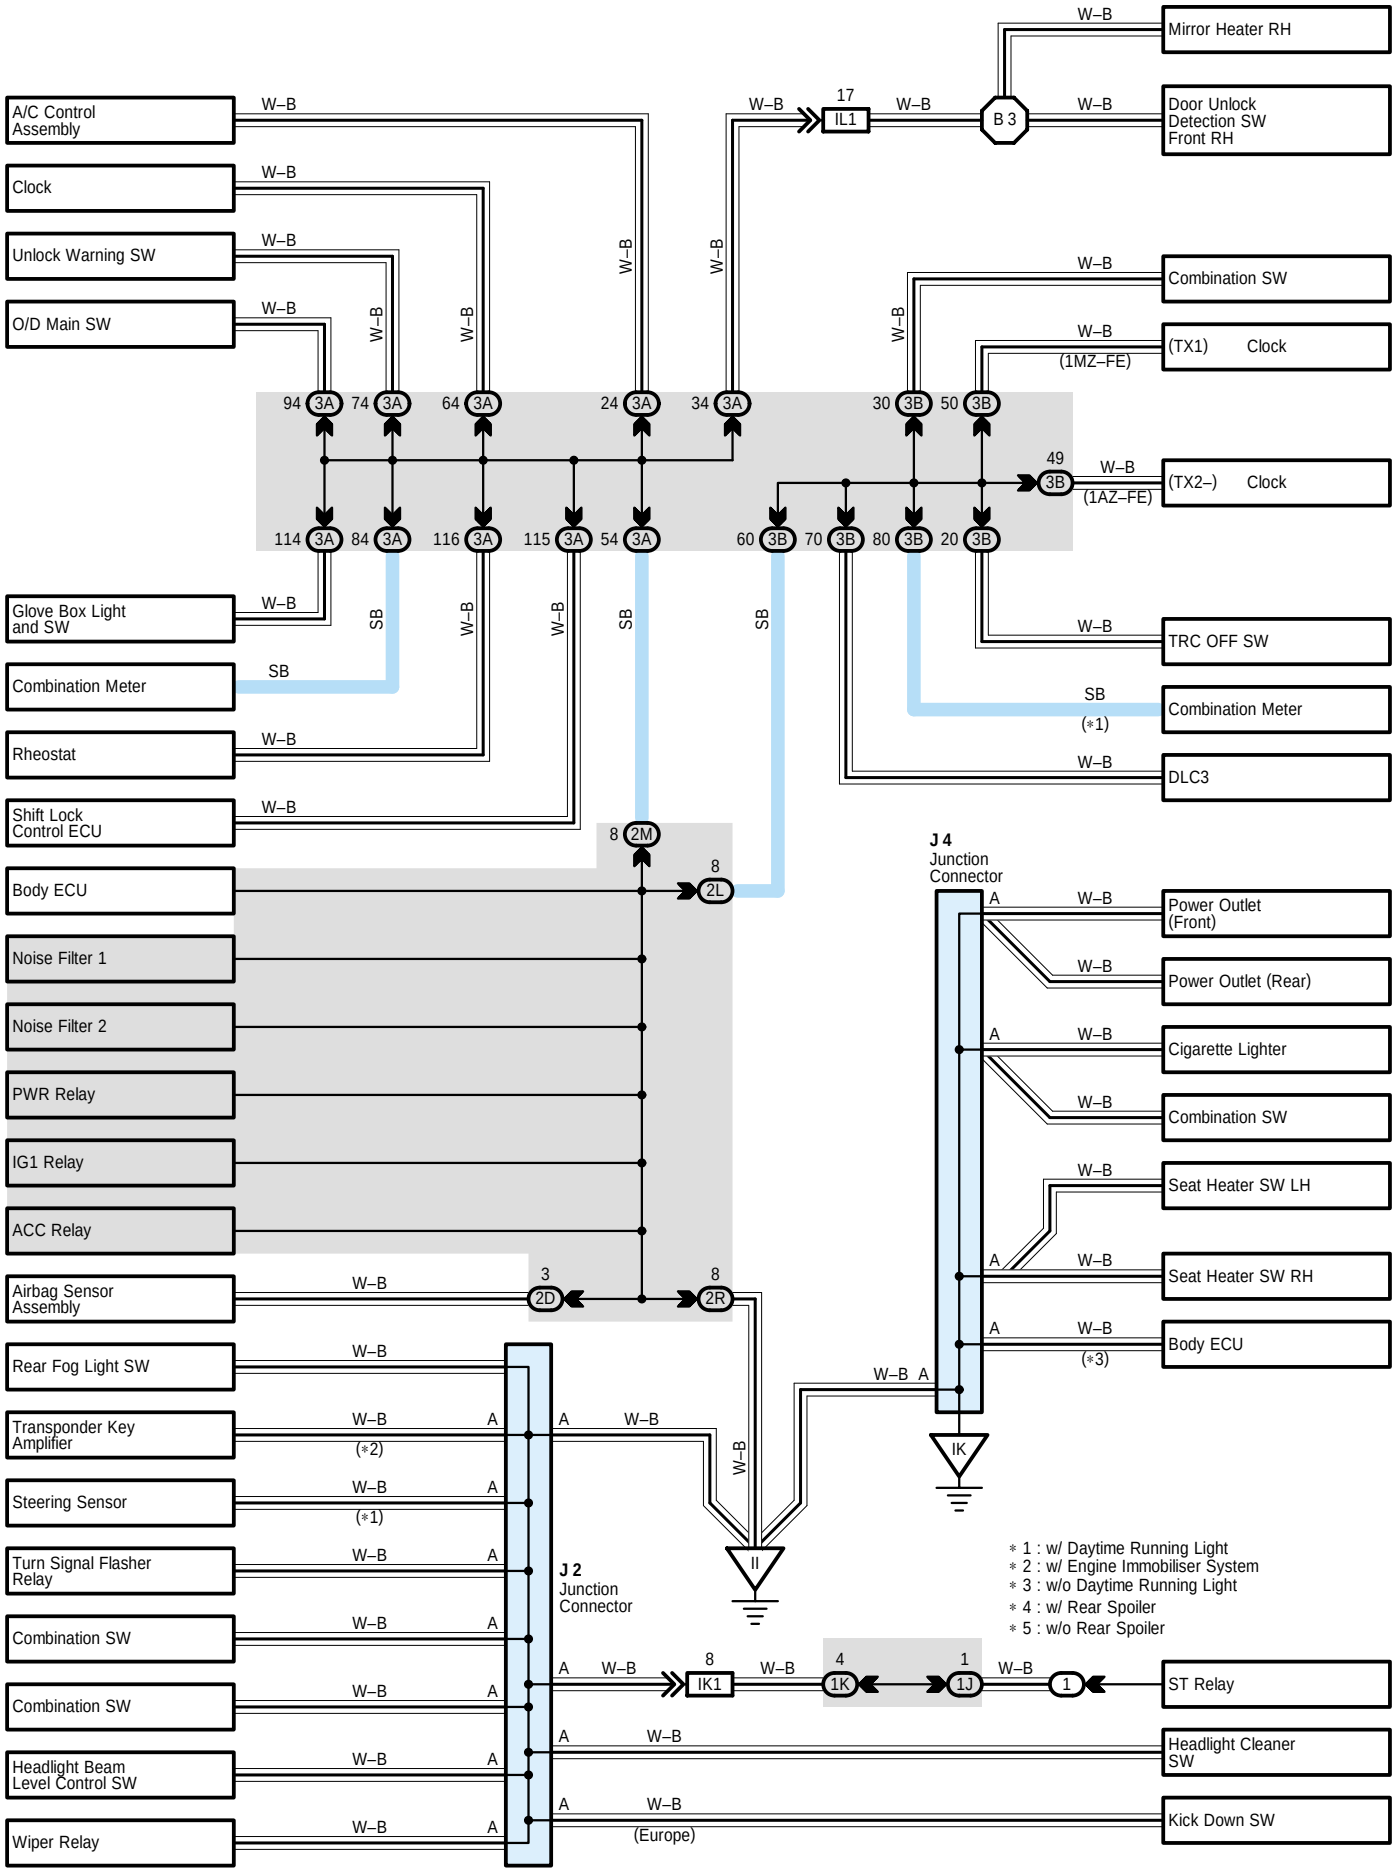


Engine and ECT ECU (A/T)
(E1)
(E03)
(E01)
(E02)
(ME01)
(E04)
(E05)
(E0M)
BR
W–B
I 6
4 IF4
(1MZ–FE) EE
Engine and ECT ECU (A/T) Engine ECU (M/T)
DLC3
Combination SW
118 3B
68 3B
119 3B
88 3B
88 3B
108 3B
W
16 IK2
(2AZ–FE, 1AZ–FE)
(1MZ–FE)
EF (1MZ–FE)
E 4
Ignition Coil and Igniter No. 1
Ignition Coil and Igniter No. 2
Engine Oil Level Sensor
Ignition Coil and Igniter No. 3
Ignition Coil and Igniter No. 4
Ignition Coil and Igniter No. 5
Ignition Coil and Igniter No. 6
Heated Oxygen Sensor (Bank 1 Sensor 1)
Heated Oxygen Sensor (Bank 2 Sensor 1)
A/C Lock Sensor
J 1 Junction Connector
A
Engine and ECT ECU (A/T) Engine ECU (M/T)
I 8
E 5
Heated Oxygen Sensor
(2AZ–FE)
EH (2AZ–FE, 1AZ–FE)
EG (2AZ–FE, 1AZ–FE)

I GROUND POINT (LHD)

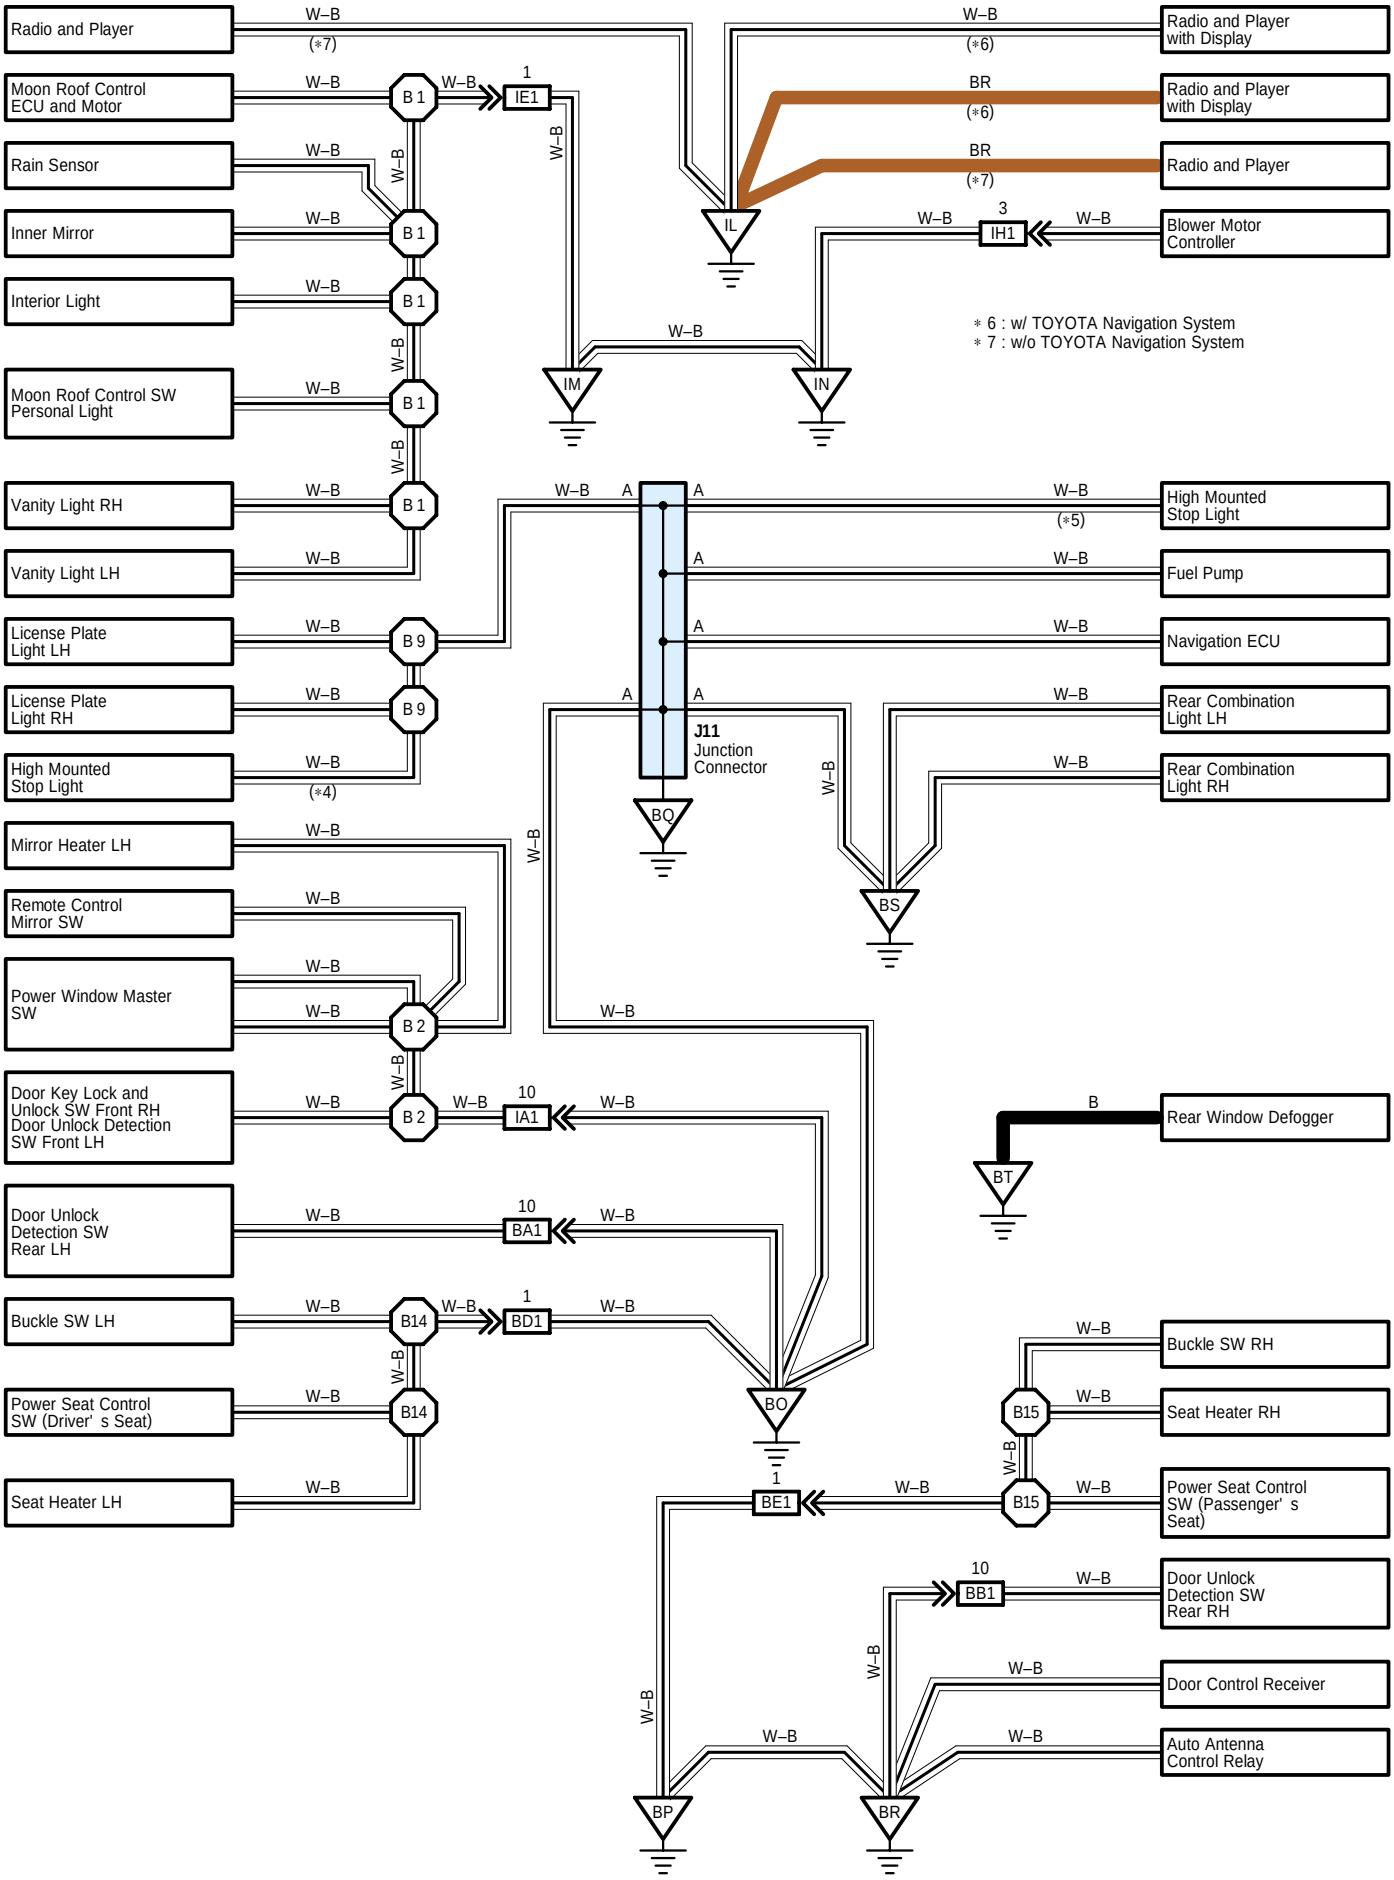


Radio and Player
Moon Roof Control ECU and Motor
Rain Sensor
Inner Mirror
Interior Light
Moon Roof Control SW Personal Light
Vanity Light RH
Vanity Light LH
License Plate Light LH
License Plate Light RH
High Mounted Stop Light
Mirror Heater LH
Remote Control Mirror SW
Power Window Master SW
Door Key Lock and Unlock SW Front RH Door Unlock Detection SW Front LH
Door Unlock Detection SW Rear LH
Buckle SW LH
Power Seat Control SW (Driver' s Seat)
Seat Heater LH
Radio and Player with Display
Radio and Player with Display
Radio and Player
Blower Motor Controller
High Mounted Stop Light
Fuel Pump
Navigation ECU
Rear Combination Light LH
Rear Combination Light RH
Rear Window Defogger
Buckle SW RH
Seat Heater RH
Power Seat Control SW (Passenger' s Seat)
Door Unlock Detection SW Rear RH
Door Control Receiver
Auto Antenna Control Relay
J11 Junction Connector
W–B
BR
B
(*6)
(*7)
(*4)
(*5)
B 1
B 2
B 9
B14
B15
IE1
IA1
BA1
BD1
BE1
BB1
IH1
IL
IM
IN
BO
BP
BQ
BR
BS
BT
* 6 : w/ TOYOTA Navigation System
* 7 : w/o TOYOTA Navigation System