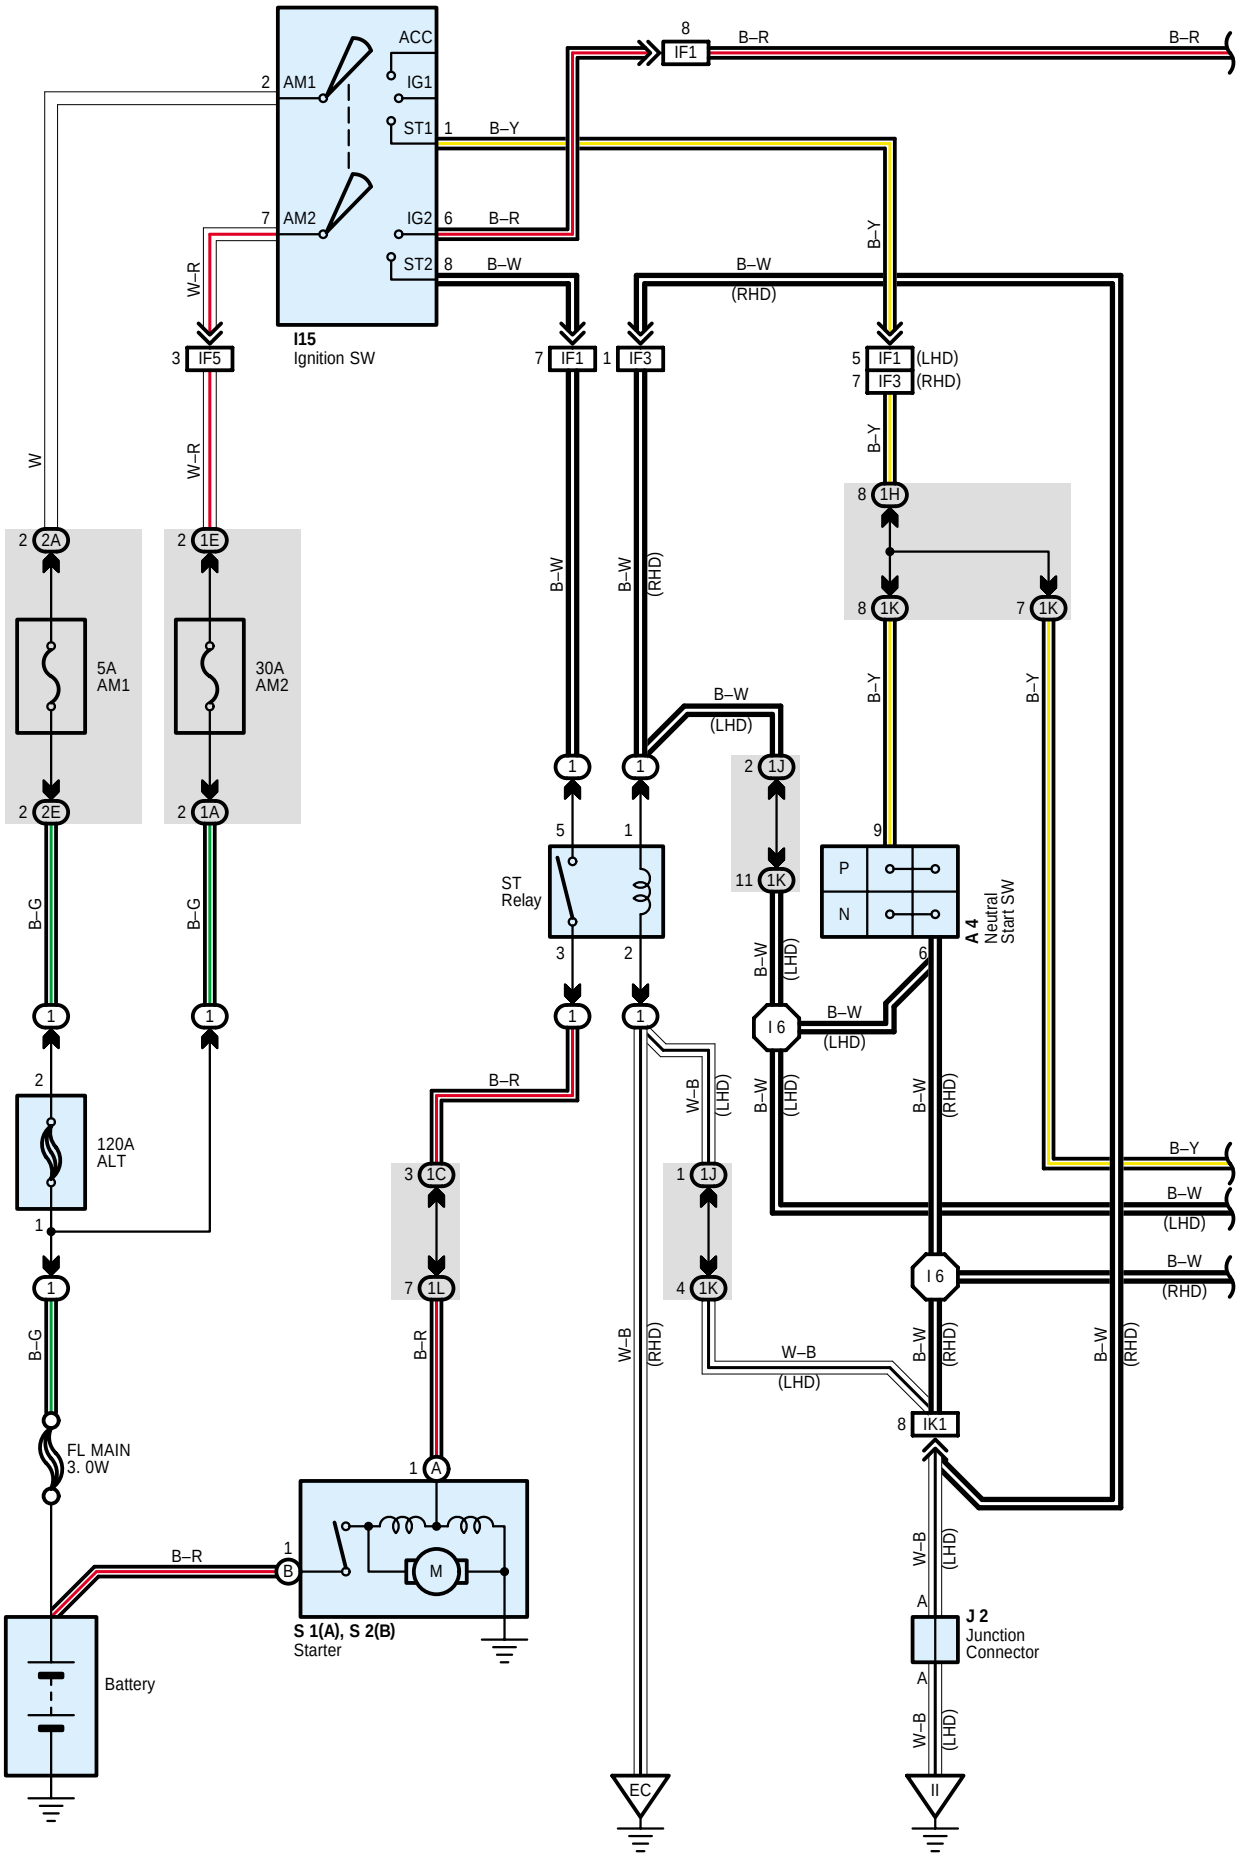
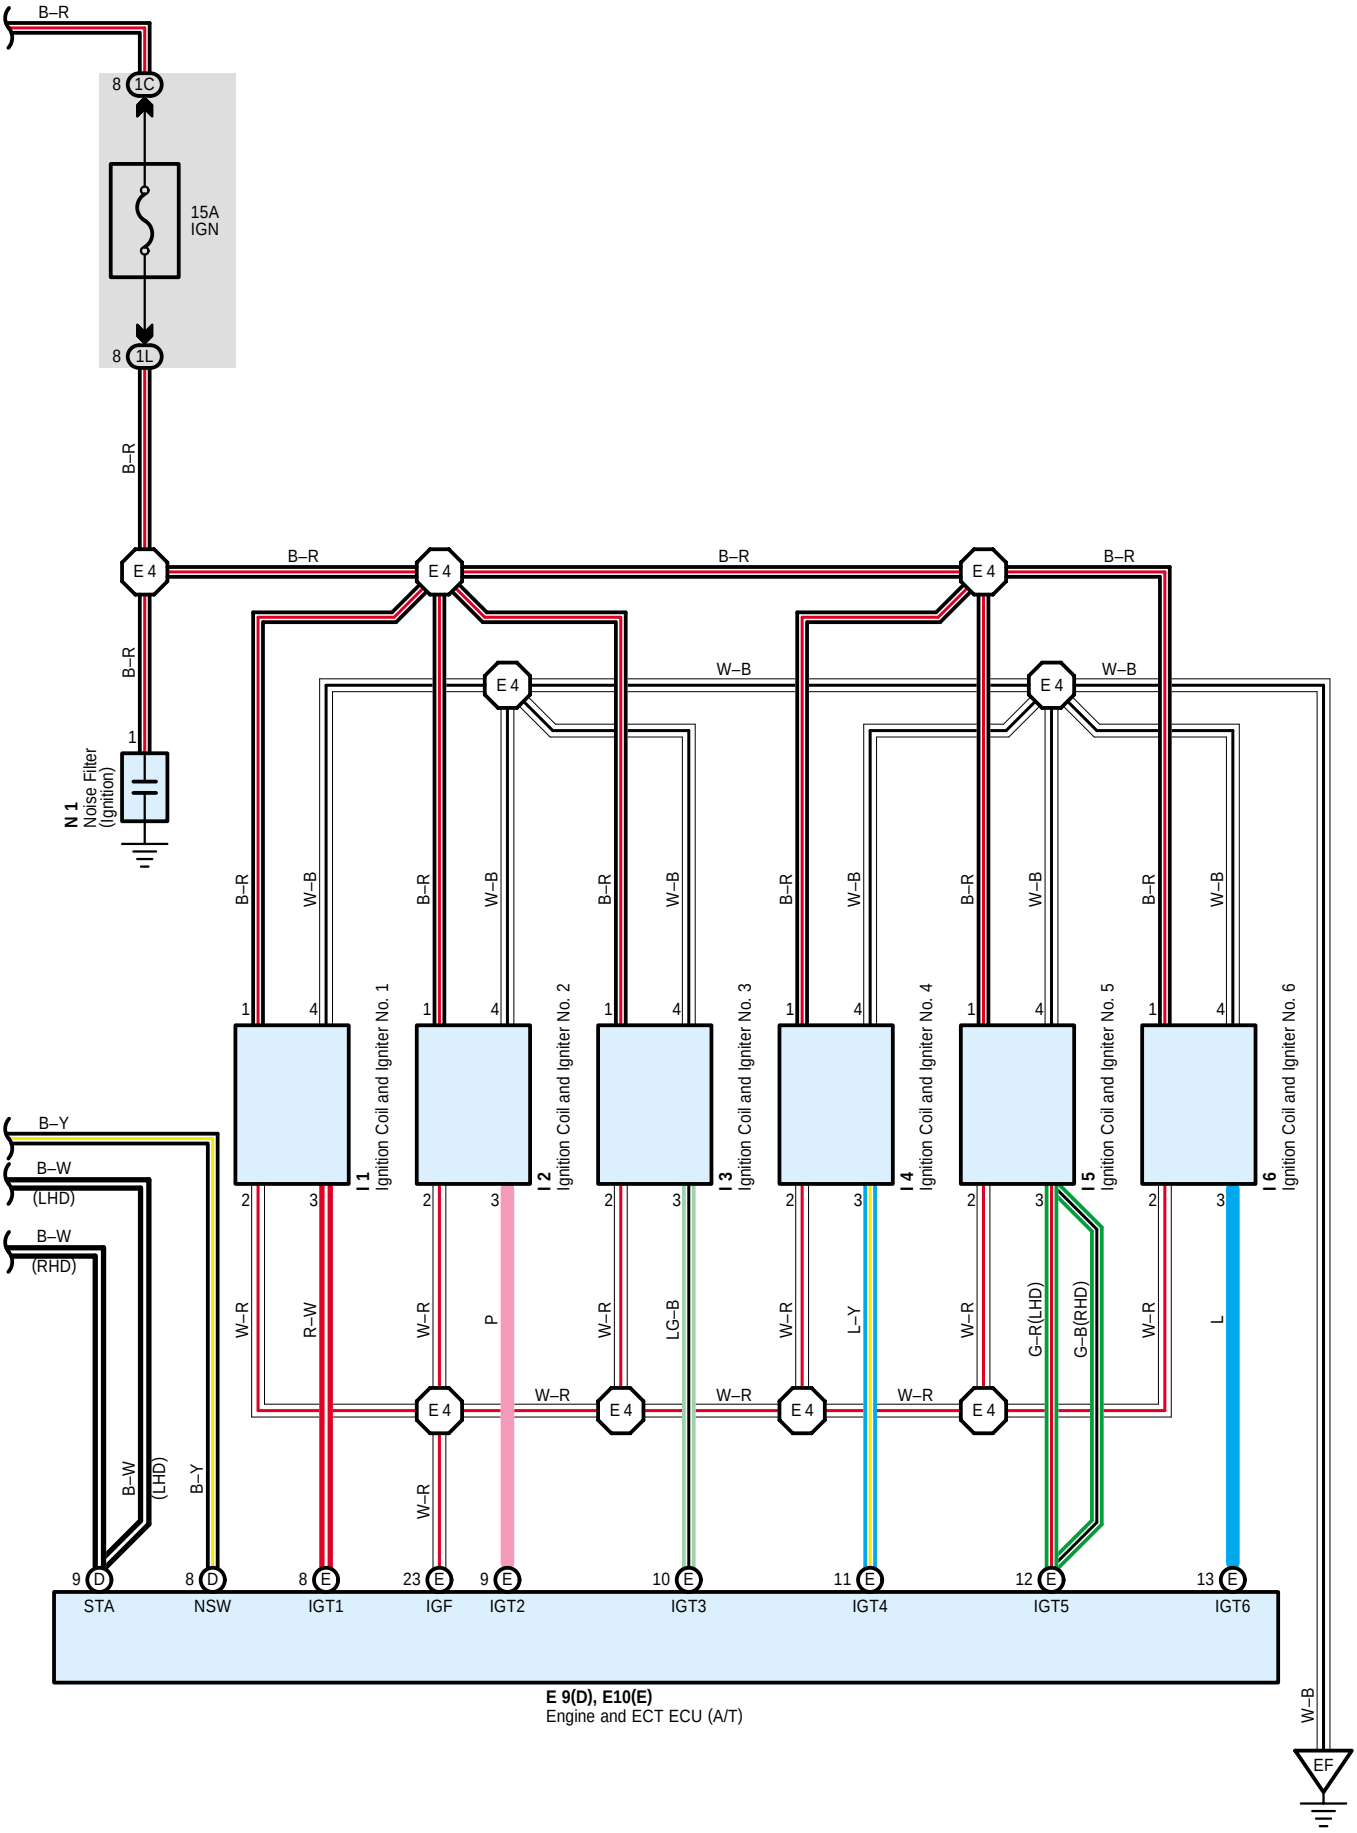

I15
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
IF1
IF3
IF5
1H
1K
1J
1L
1E
1A
2A
2E
1C
1IK1
5A
AM1
30A
AM2
120A
ALT
FL MAIN
3. 0W
ST
Relay
A 4
Neutral
Start SW
P
N
I 6
S 1(A), S 2(B)
Starter
M
Battery
J 2
Junction
Connector
EC
II
B–R
B–Y
B–W
W–R
W
B–G
W–B
(LHD)
(RHD)


B–R
8 1C
15A
IGN
8 1L
B–R
E 4
B–R
B–R
B–R
B–R
1
N 1
Noise Filter
(Ignition)
W–B
W–B
W–B
W–B
1
4
I 1
Ignition Coil and Igniter No. 1
I 2
Ignition Coil and Igniter No. 2
I 3
Ignition Coil and Igniter No. 3
I 4
Ignition Coil and Igniter No. 4
I 5
Ignition Coil and Igniter No. 5
I 6
Ignition Coil and Igniter No. 6
2
3
B–Y
B–W
(LHD)
B–W
(RHD)
W–R
R–W
P
LG–B
L–Y
G–R(LHD)
G–B(RHD)
L
W–R
9 D
STA
8 D
NSW
8 E
IGT1
23 E
IGF
9 E
IGT2
10 E
IGT3
11 E
IGT4
12 E
IGT5
13 E
IGT6
E 9(D), E10(E)
Engine and ECT ECU (A/T)
W–B
EF