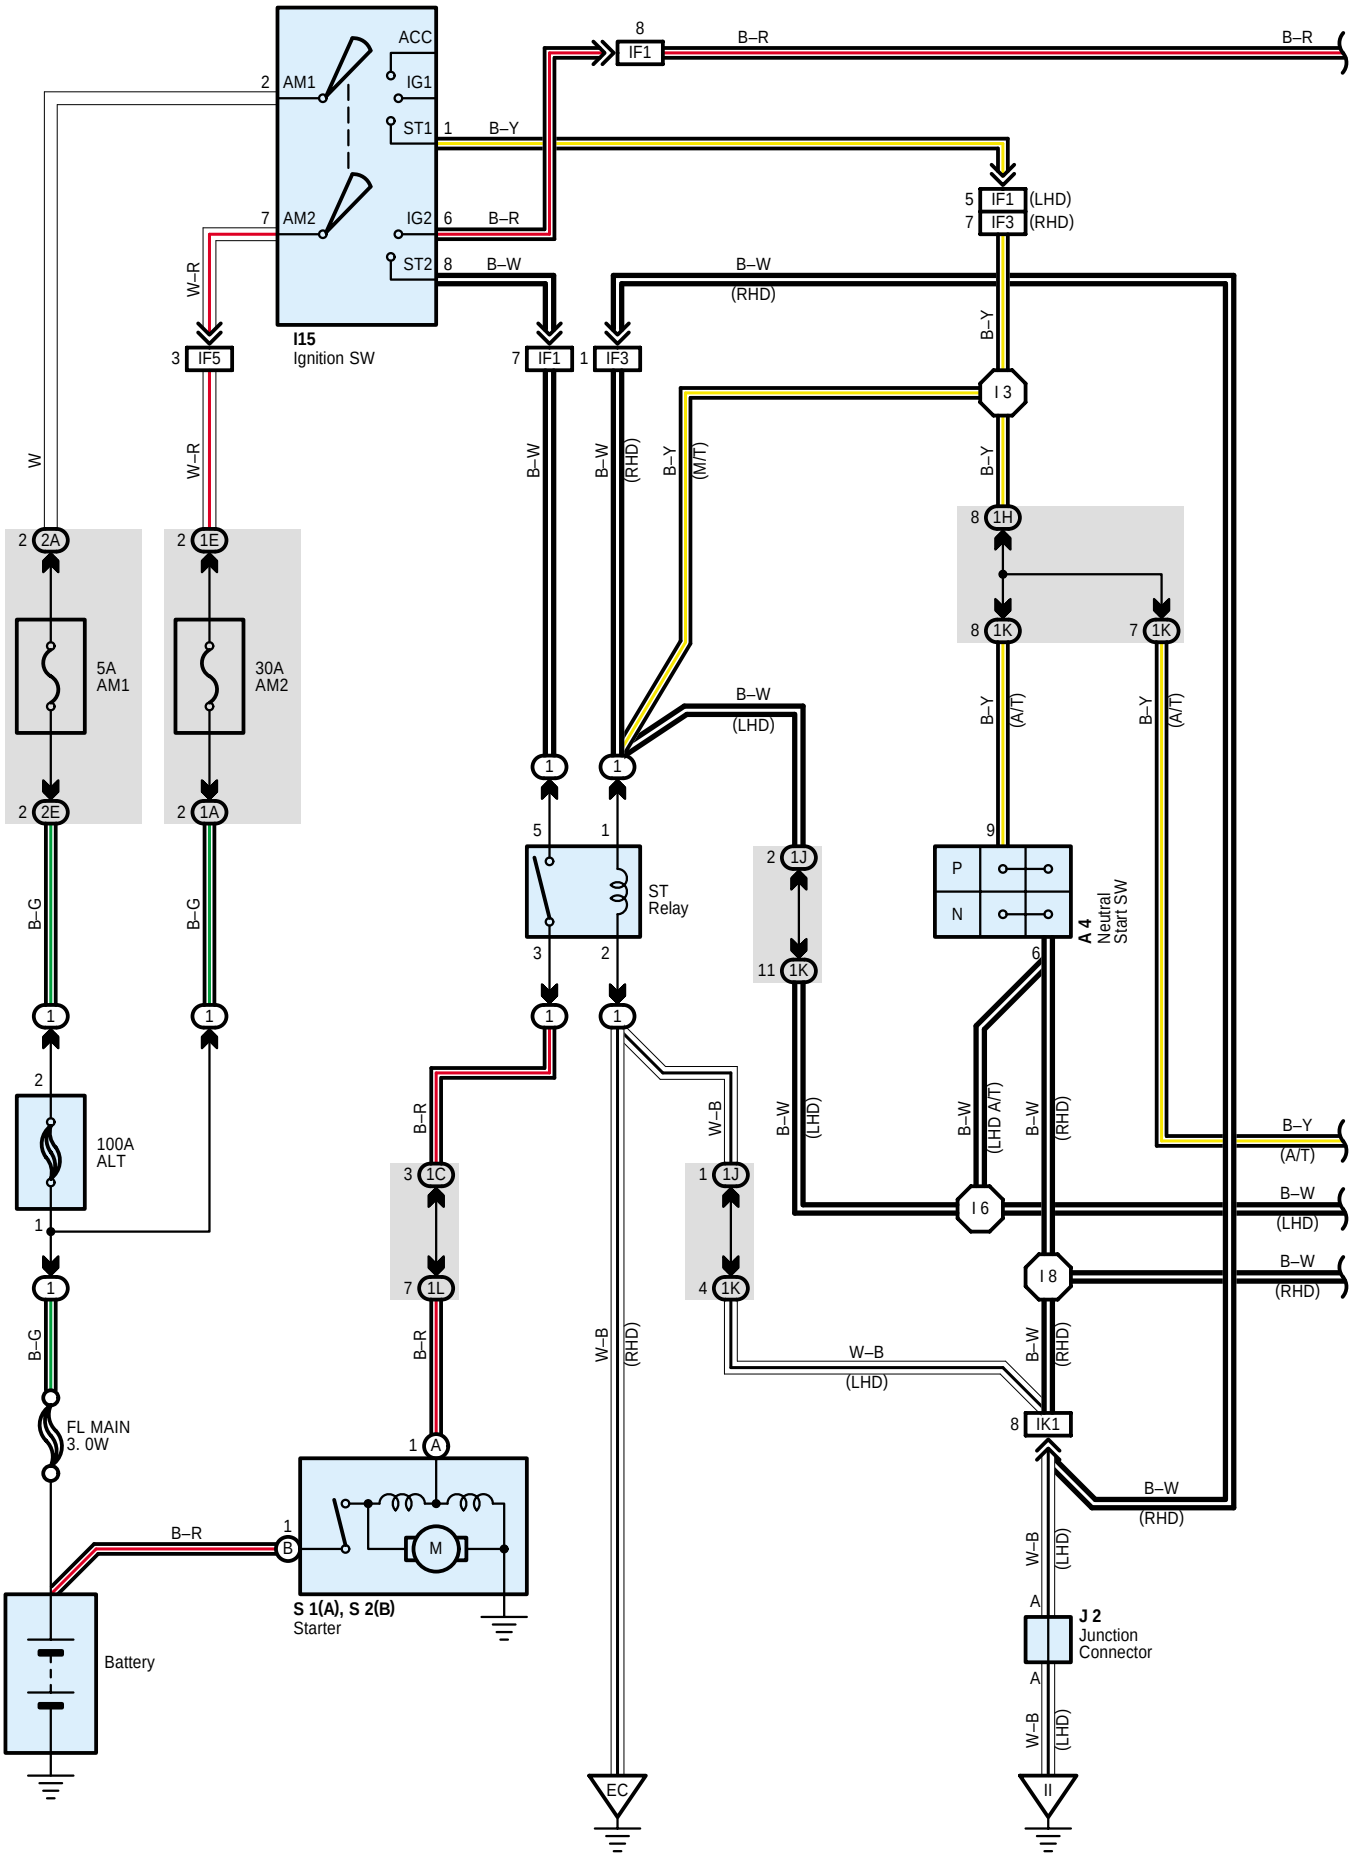
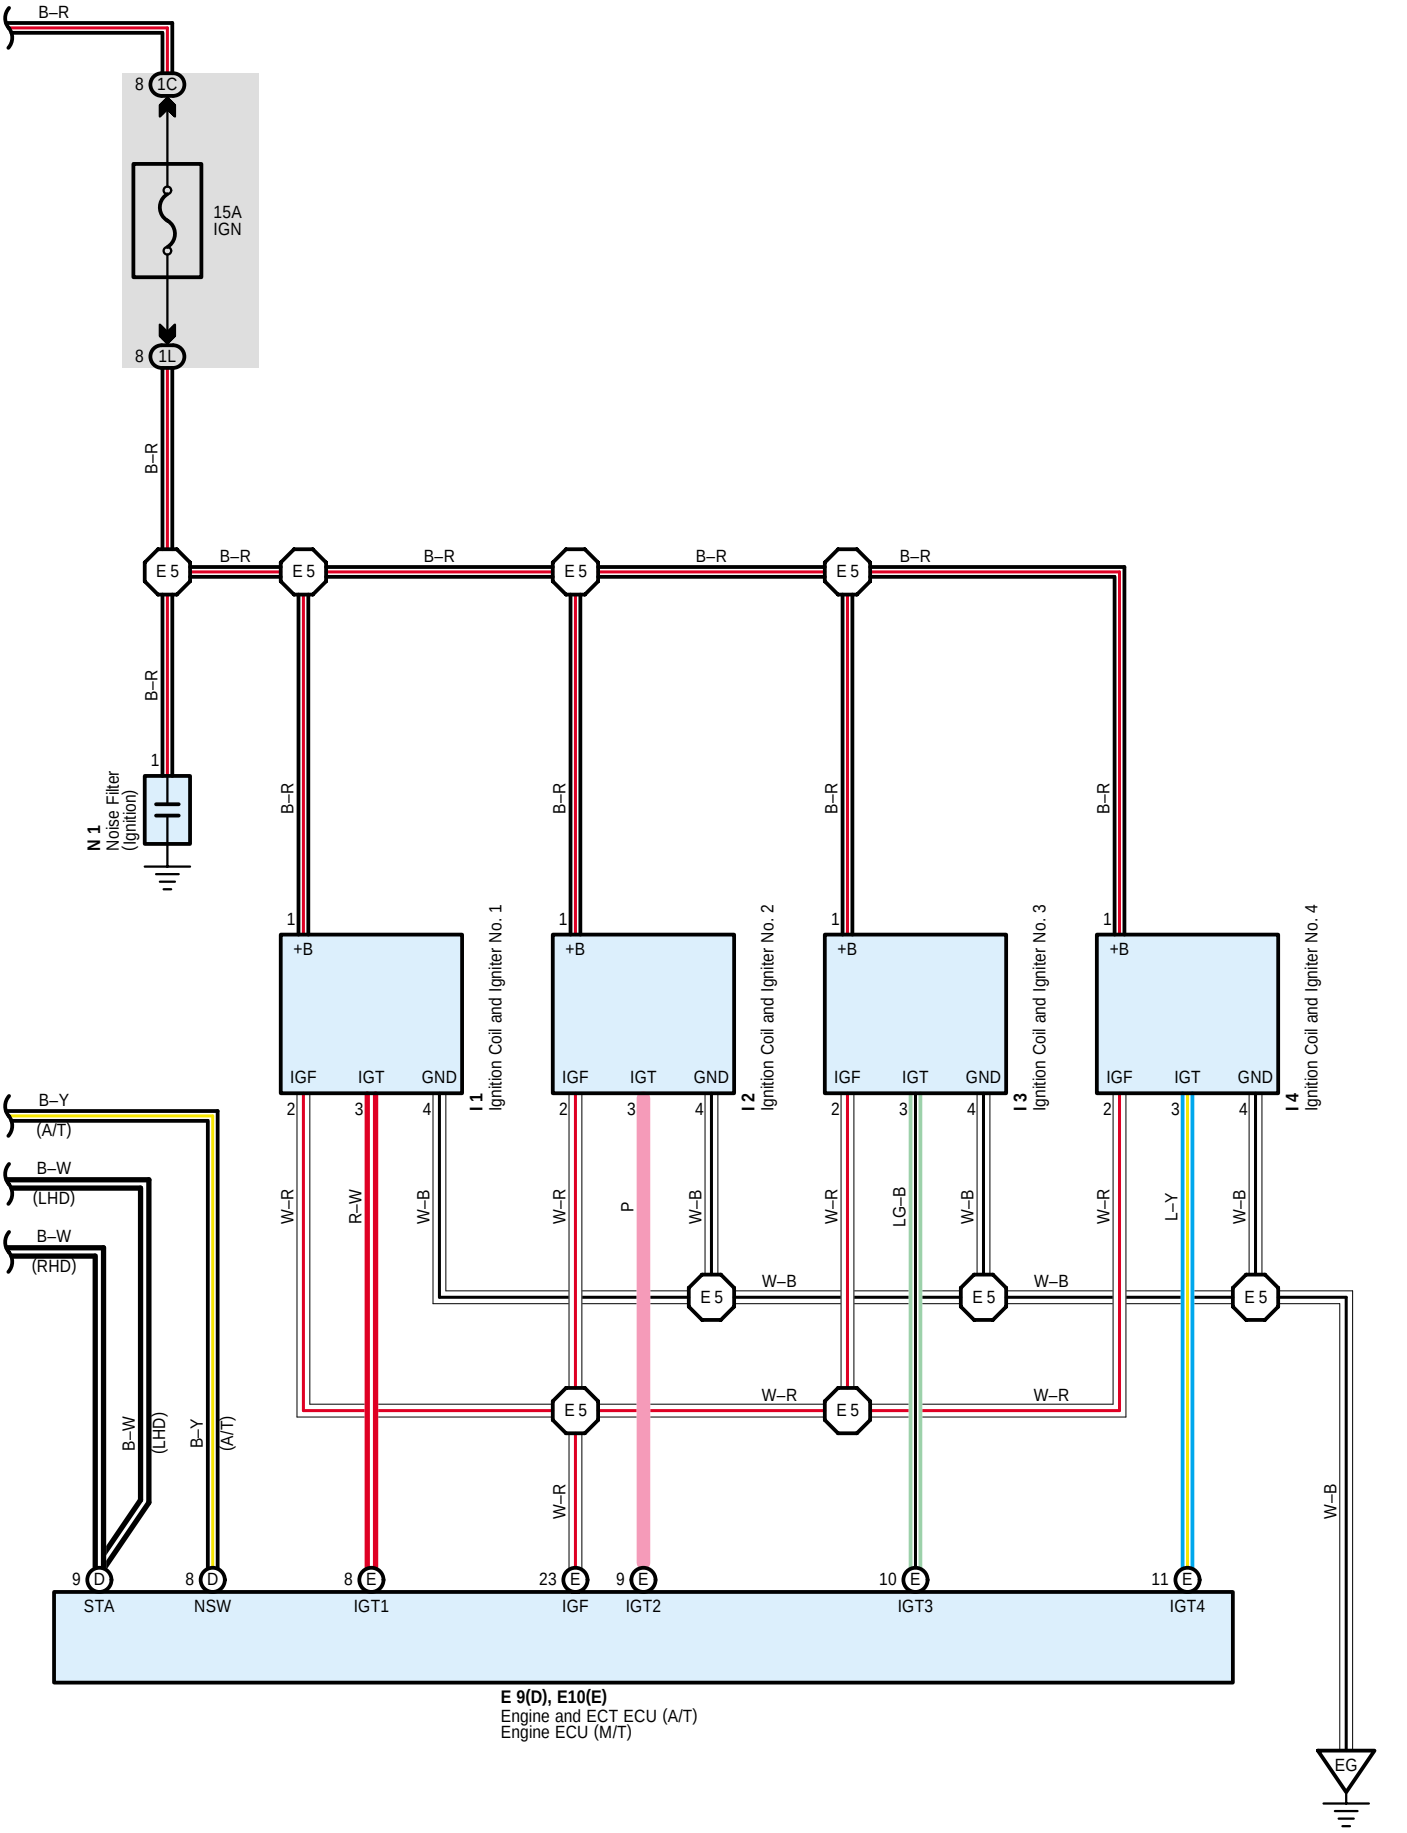

I15
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
IF1
IF3
IF5
5A
AM1
30A
AM2
100A
ALT
FL MAIN
3. 0W
Battery
S 1(A), S 2(B)
Starter
ST
Relay
A 4
Neutral
Start SW
P
N
I 3
I 6
I 8
IK1
J 2
Junction
Connector
EC
(LHD)
(RHD)
(M/T)
(A/T)
(LHD A/T)


B–R
8 1C
15A IGN
8 1L
B–R
E 5
B–R
N 1 Noise Filter (Ignition)
I 1 Ignition Coil and Igniter No. 1
I 2 Ignition Coil and Igniter No. 2
I 3 Ignition Coil and Igniter No. 3
I 4 Ignition Coil and Igniter No. 4
+B
IGF
IGT
GND
B–Y (A/T)
B–W (LHD)
B–W (RHD)
W–R
R–W
W–B
P
LG–B
L–Y
9 D STA
8 D NSW
8 E IGT1
23 E IGF
9 E IGT2
10 E IGT3
11 E IGT4
E 9(D), E10(E)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
EG