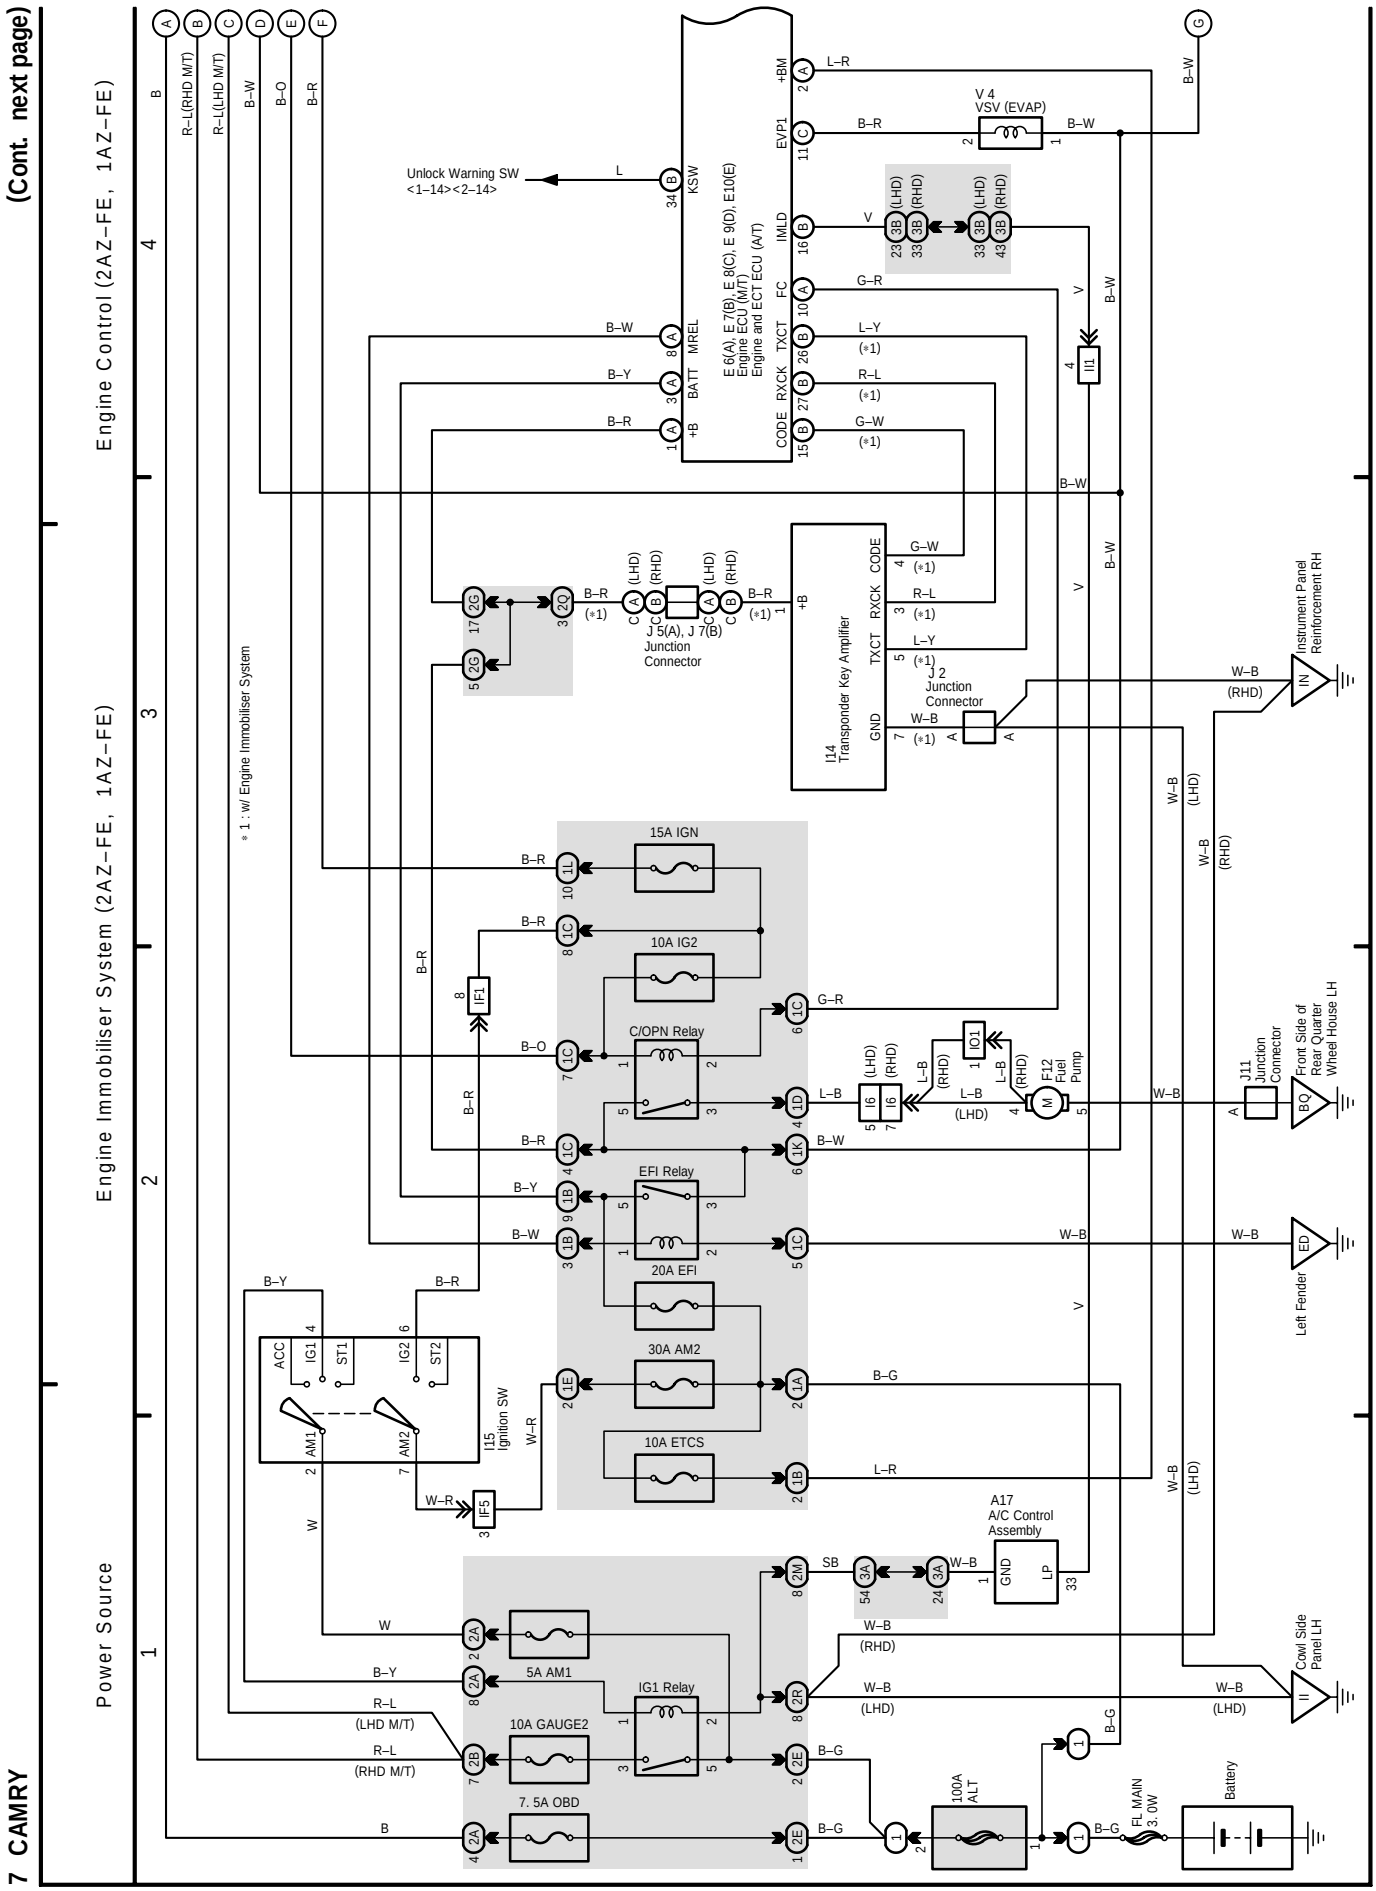
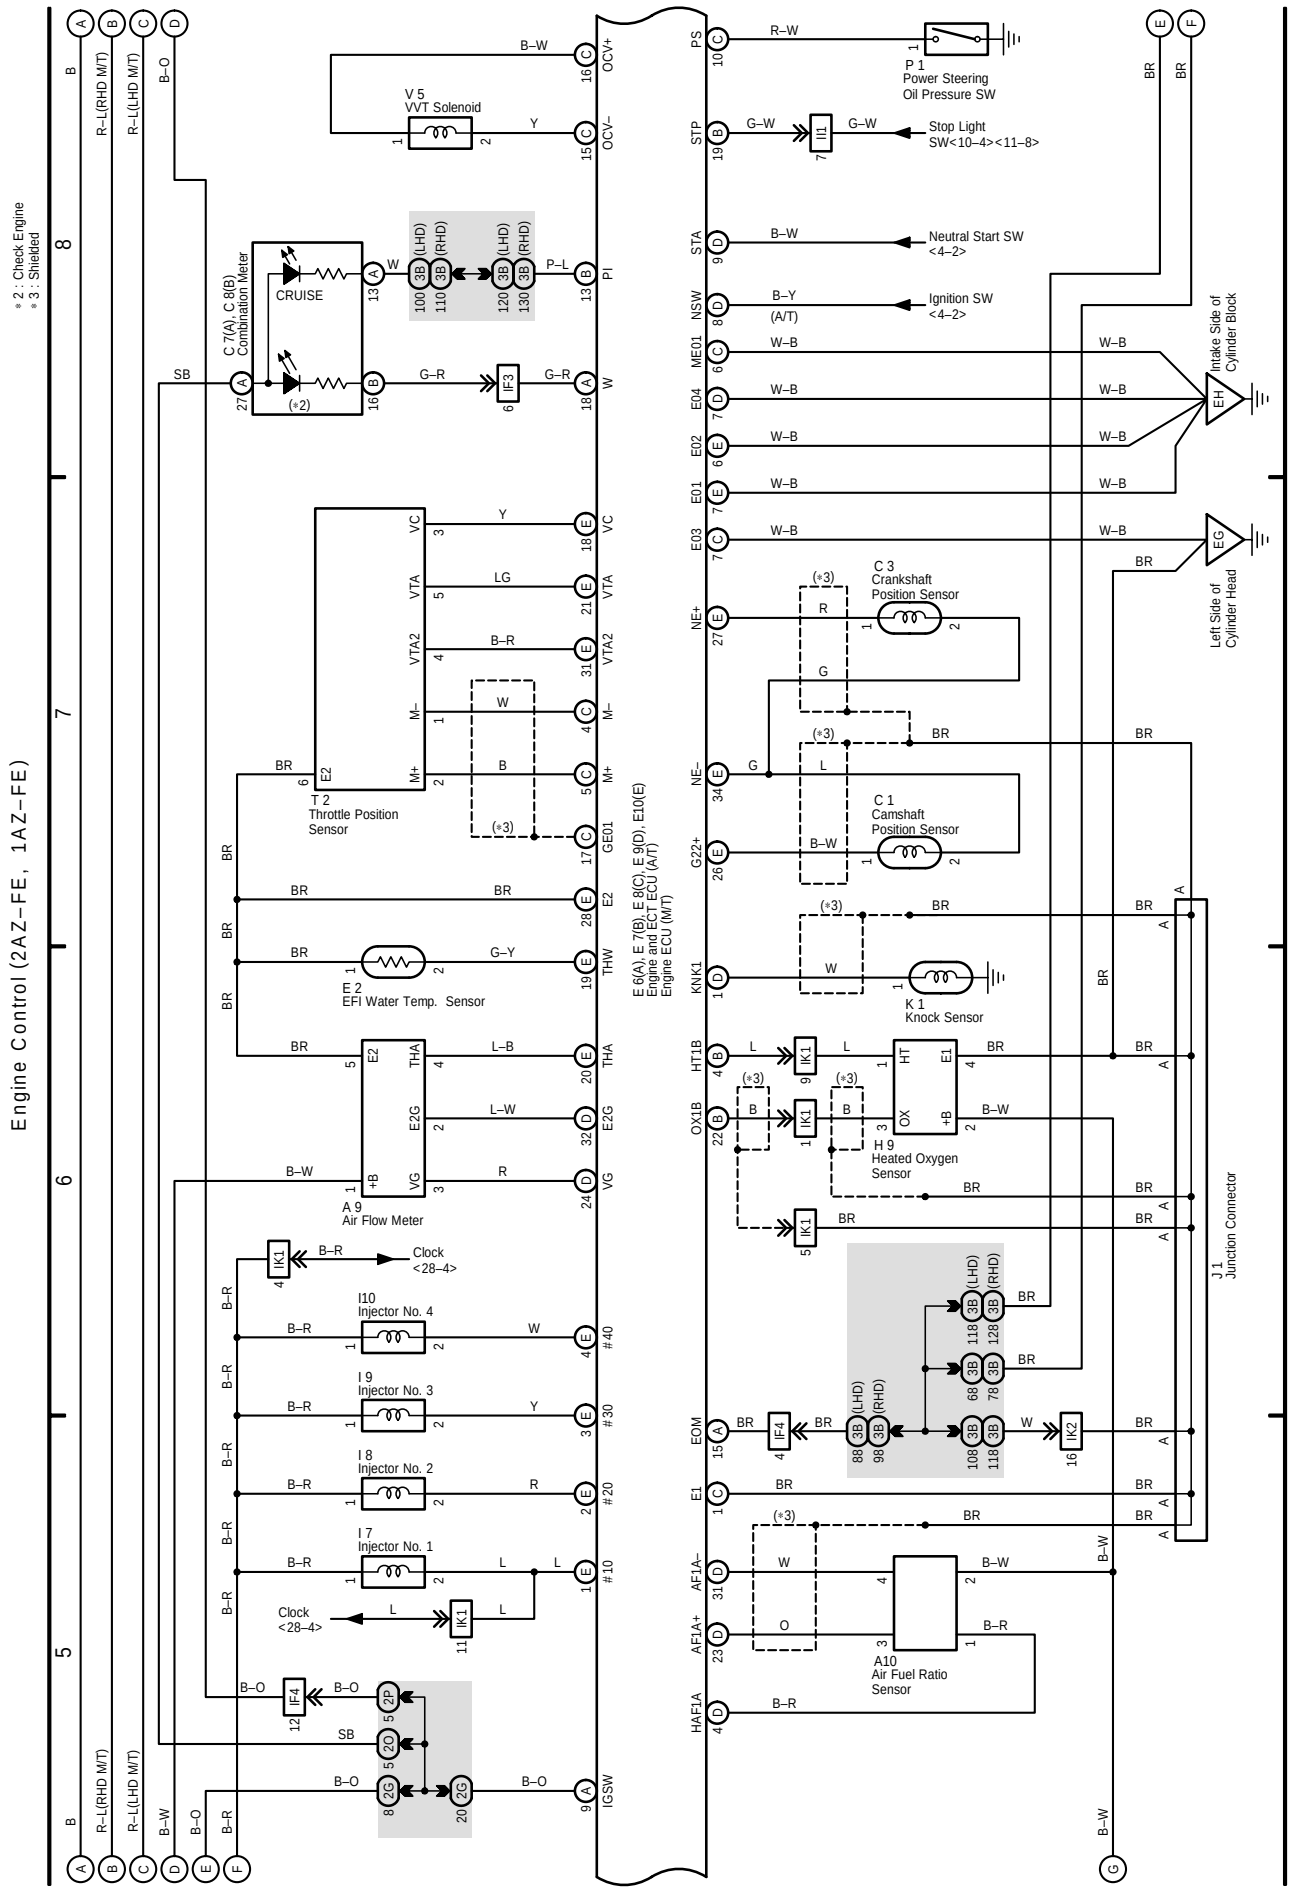
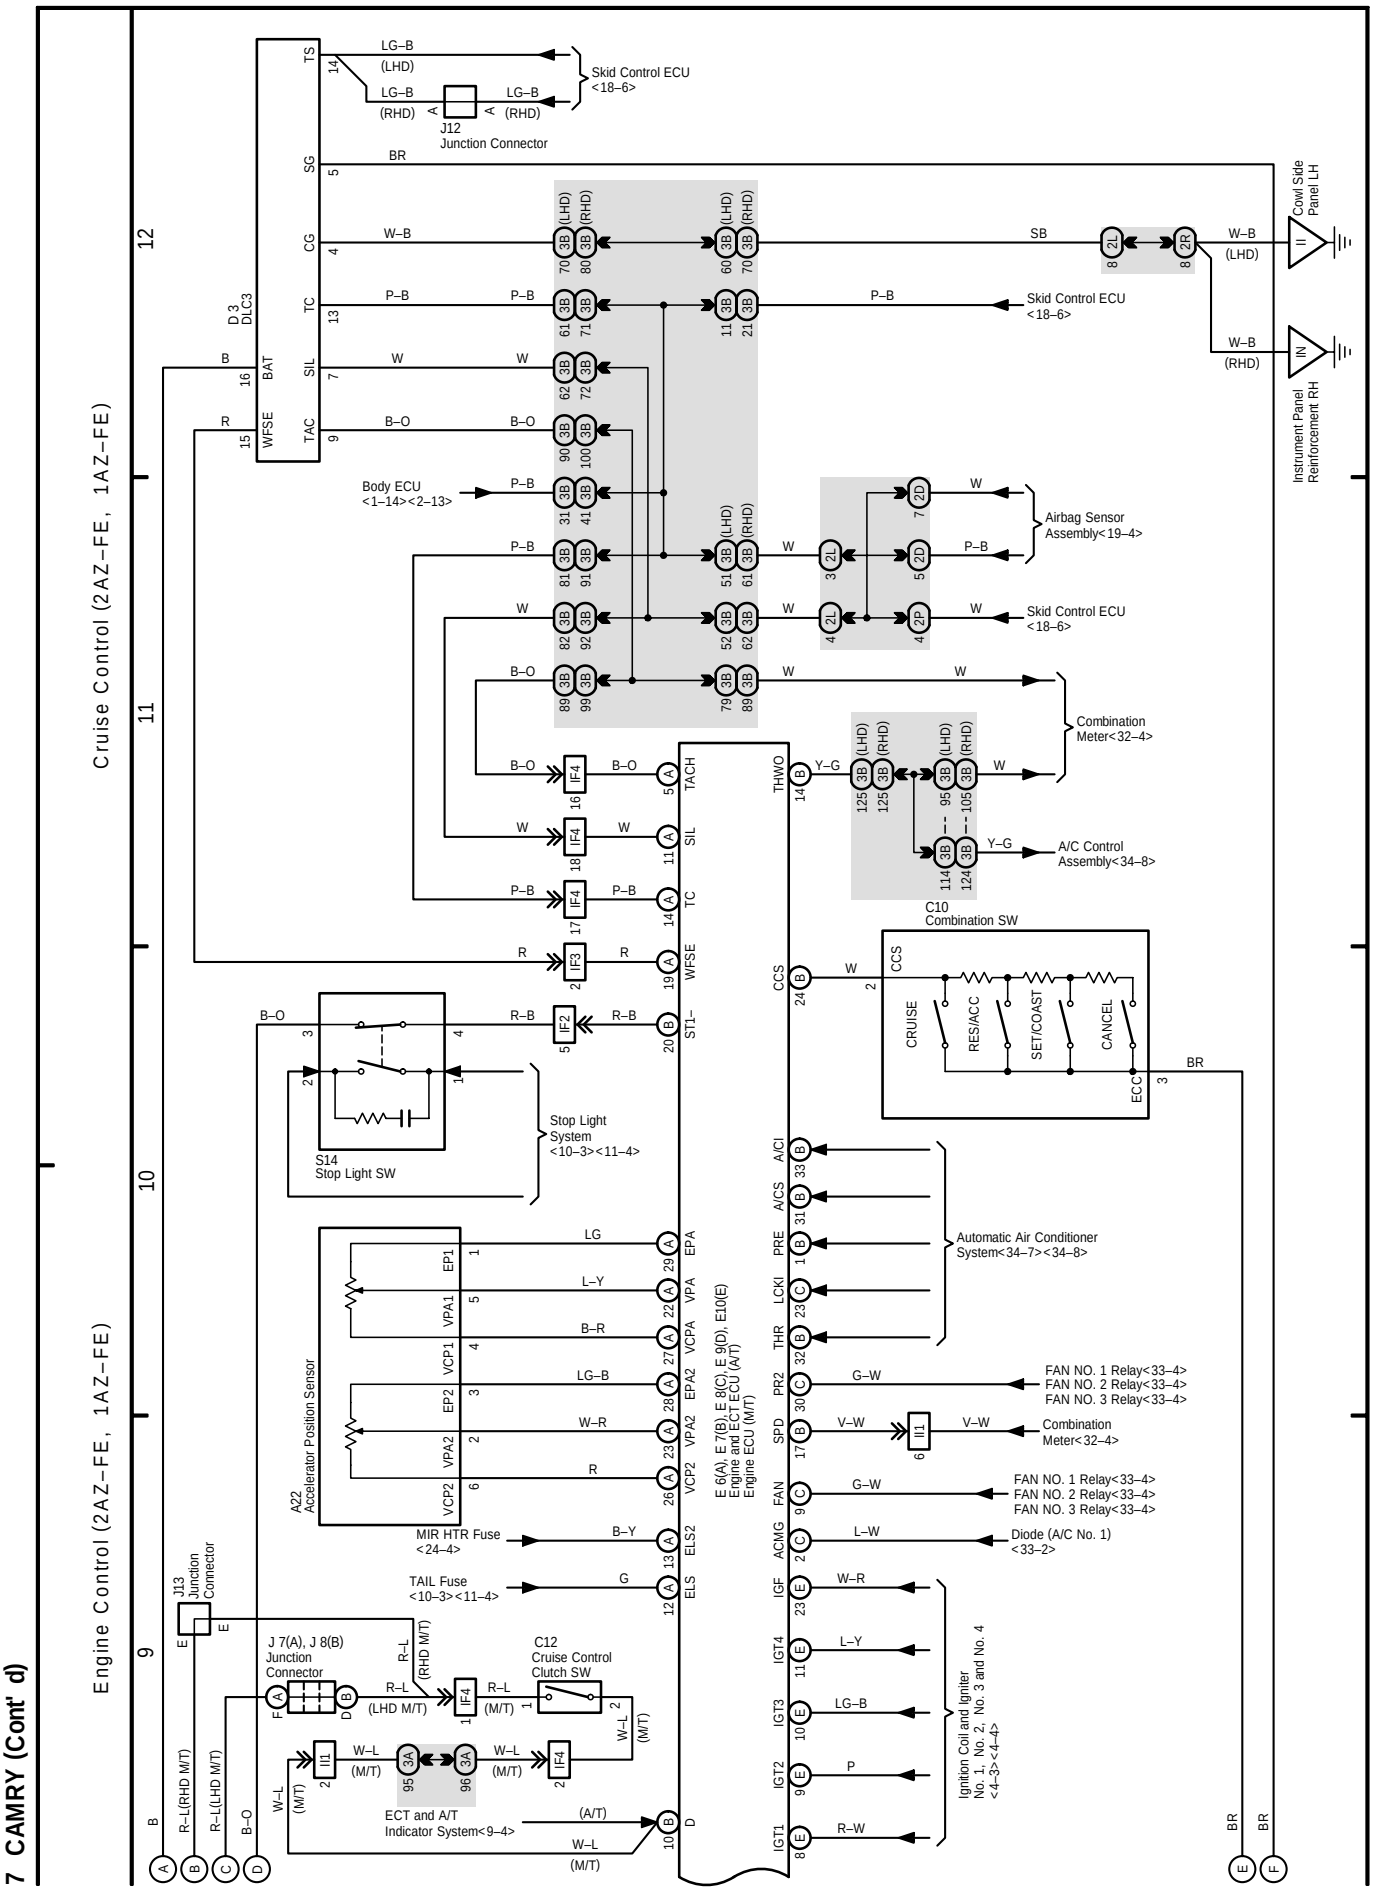

(Cont. next page)
Power Source
Engine Immobiliser System (2AZ–FE, 1AZ–FE)
Engine Control (2AZ–FE, 1AZ–FE)
7 CAMRY
* 1 : w/ Engine Immobiliser System
Unlock Warning SW
<1–14><2–14>
E 6(A), E 7(B), E 8(C), E 9(D), E10(E)
Engine ECU (M/T)
Engine and ECT ECU (A/T)
KSW
IMLD
FC
TXCT
RXCK
CODE
MREL
BATT
+B
+BM
EVP1
V 4
VSV (EVAP)
J 5(A), J 7(B)
Junction
Connector
J 2
Junction
Connector
I14
Transponder Key Amplifier
15A IGN
10A IG2
C/OPN Relay
EFI Relay
20A EFI
30A AM2
10A ETCS
I15
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
A17
A/C Control
Assembly
GND
LP
5A AM1
IG1 Relay
10A GAUGE2
7. 5A OBD
100A
ALT
FL MAIN
3. 0W
Battery
F12
Fuel
Pump
J11
Junction
Connector
Front Side of
Rear Quarter
Wheel House LH
Instrument Panel
Reinforcement RH
Left Fender
Cowl Side
Panel LH
(LHD)
(RHD)
(LHD M/T)
(RHD M/T)

7 CAMRY (Cont' d)

(Cont. next page)




7 CAMRY (Cont' d)
Engine Control (2AZ–FE, 1AZ–FE)
Cruise Control (2AZ–FE, 1AZ–FE)
Skid Control ECU <18–6>
J12 Junction Connector
Cowl Side Panel LH
Instrument Panel Reinforcement RH
D3 DLC3
Body ECU <1–14><2–13>
Airbag Sensor Assembly<19–4>
Combination Meter<32–4>
A/C Control Assembly<34–8>
C10 Combination SW
CRUISE
RES/ACC
SET/COAST
CANCEL
S14 Stop Light SW
Stop Light System <10–3><11–4>
A22 Accelerator Position Sensor
E 6(A), E 7(B), E 8(C), E 9(D), E10(E) Engine and ECT ECU (A/T) Engine ECU (M/T)
MIR HTR Fuse <24–4>
TAIL Fuse <10–3><11–4>
Automatic Air Conditioner System<34–7><34–8>
FAN NO. 1 Relay<33–4>
FAN NO. 2 Relay<33–4>
FAN NO. 3 Relay<33–4>
Diode (A/C No. 1) <33–2>
Ignition Coil and Igniter No. 1, No. 2, No. 3 and No. 4 <4–3><4–4>
J13 Junction Connector
J 7(A), J 8(B) Junction Connector
C12 Cruise Control Clutch SW
ECT and A/T Indicator System<9–4>