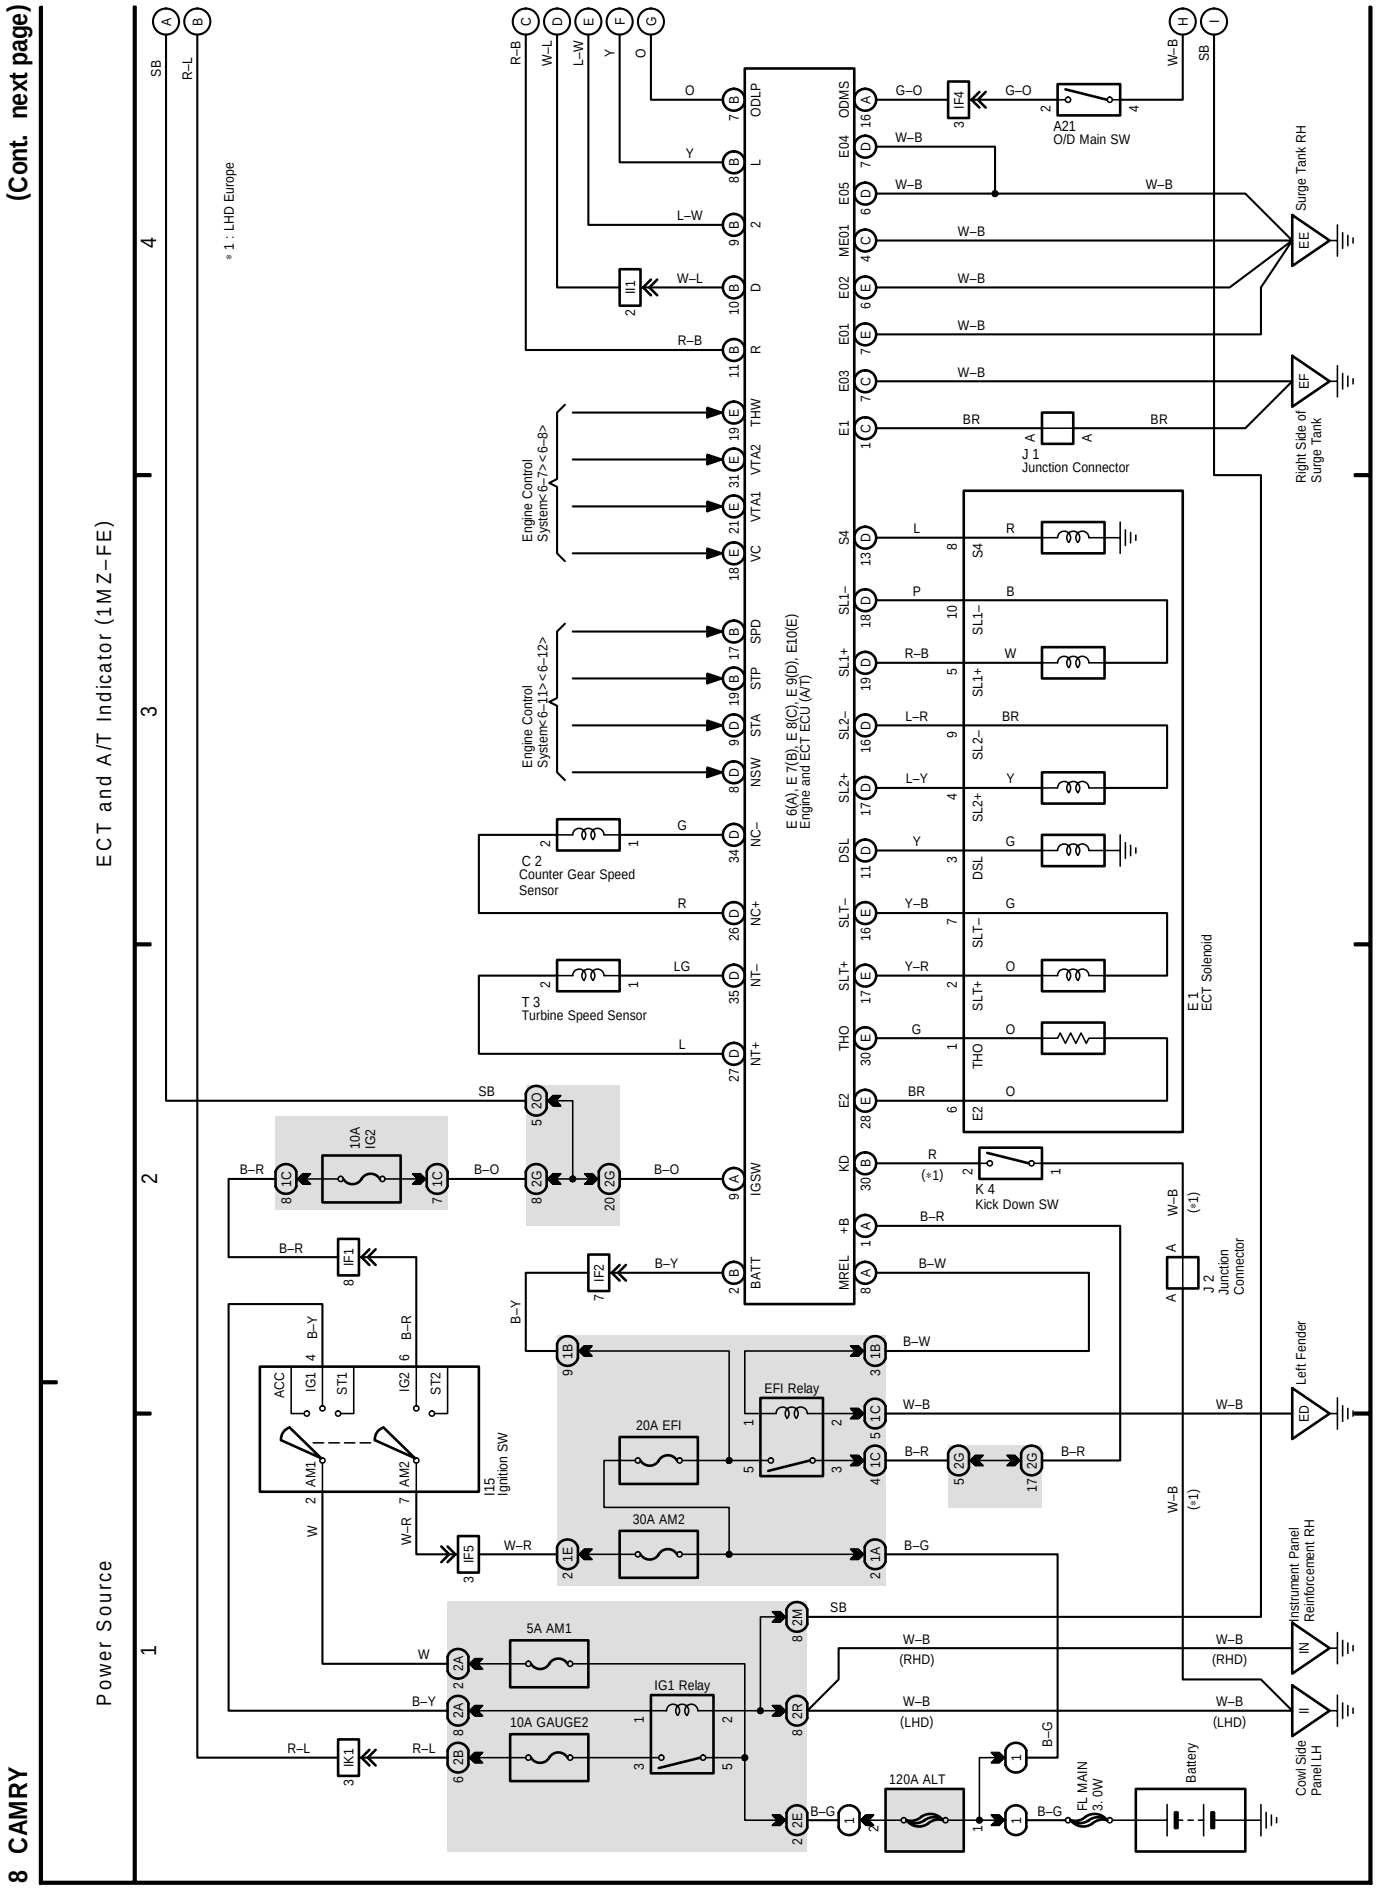

(Cont. next page)
ECT and A/T Indicator (1MZ–FE)
Power Source
8 CAMRY
* 1 : LHD Europe
E 6(A), E 7(B), E 8(C), E 9(D), E10(E)
Engine and ECT ECU (A/T)
C 2
Counter Gear Speed Sensor
T 3
Turbine Speed Sensor
A21
O/D Main SW
K 4
Kick Down SW
E 1
ECT Solenoid
J 1
Junction Connector
J 2
Junction Connector
I15
Ignition SW
EFI Relay
IG1 Relay
10A IG2
20A EFI
30A AM2
5A AM1
10A GAUGE2
120A ALT
Battery
Surge Tank RH
Right Side of Surge Tank
Left Fender
Instrument Panel Reinforcement RH
Cowl Side Panel LH

8 CAMRY (Cont' d)

