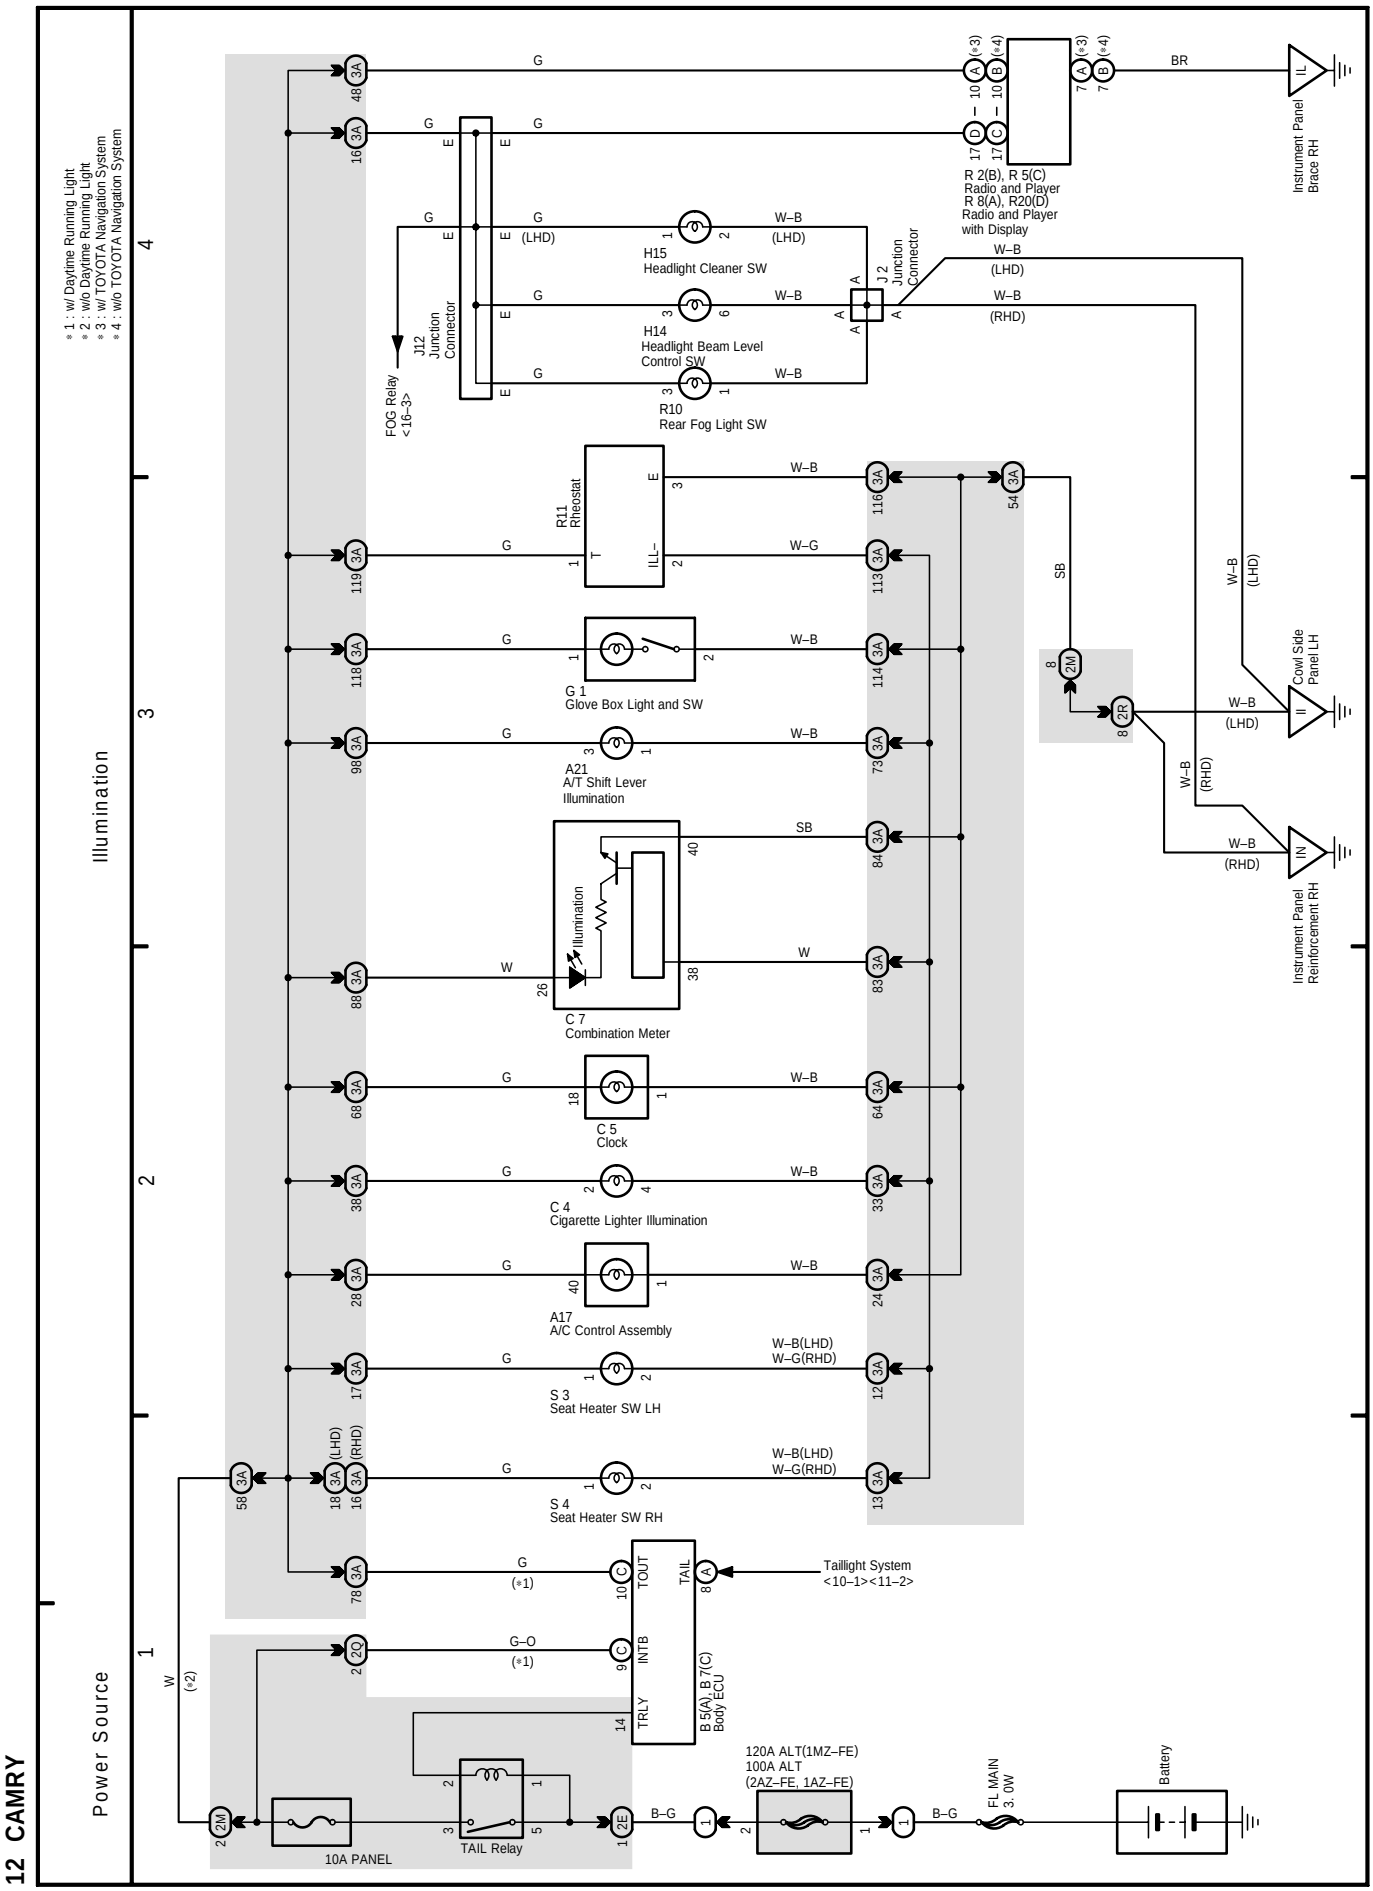

* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : w/ TOYOTA Navigation System
* 4 : w/o TOYOTA Navigation System
Illumination
Power Source
R 2(B), R 5(C)
Radio and Player
R 8(A), R20(D)
Radio and Player
with Display
Instrument Panel
Brace RH
H15
Headlight Cleaner SW
H14
Headlight Beam Level
Control SW
R10
Rear Fog Light SW
J12
Junction
Connector
J2
Junction
Connector
FOG Relay
<16–3>
R11
Rheostat
G 1
Glove Box Light and SW
A21
A/T Shift Lever
Illumination
C 7
Combination Meter
C 5
Clock
C 4
Cigarette Lighter Illumination
A17
A/C Control Assembly
S 3
Seat Heater SW LH
S 4
Seat Heater SW RH
Taillight System
<10–1><11–2>
B 5(A), B 7(C)
Body ECU
TAIL Relay
10A PANEL
120A ALT(1MZ–FE)
100A ALT
(2AZ–FE, 1AZ–FE)
FL MAIN
3. 0W
Battery
Cowl Side
Panel LH
Instrument Panel
Reinforcement RH