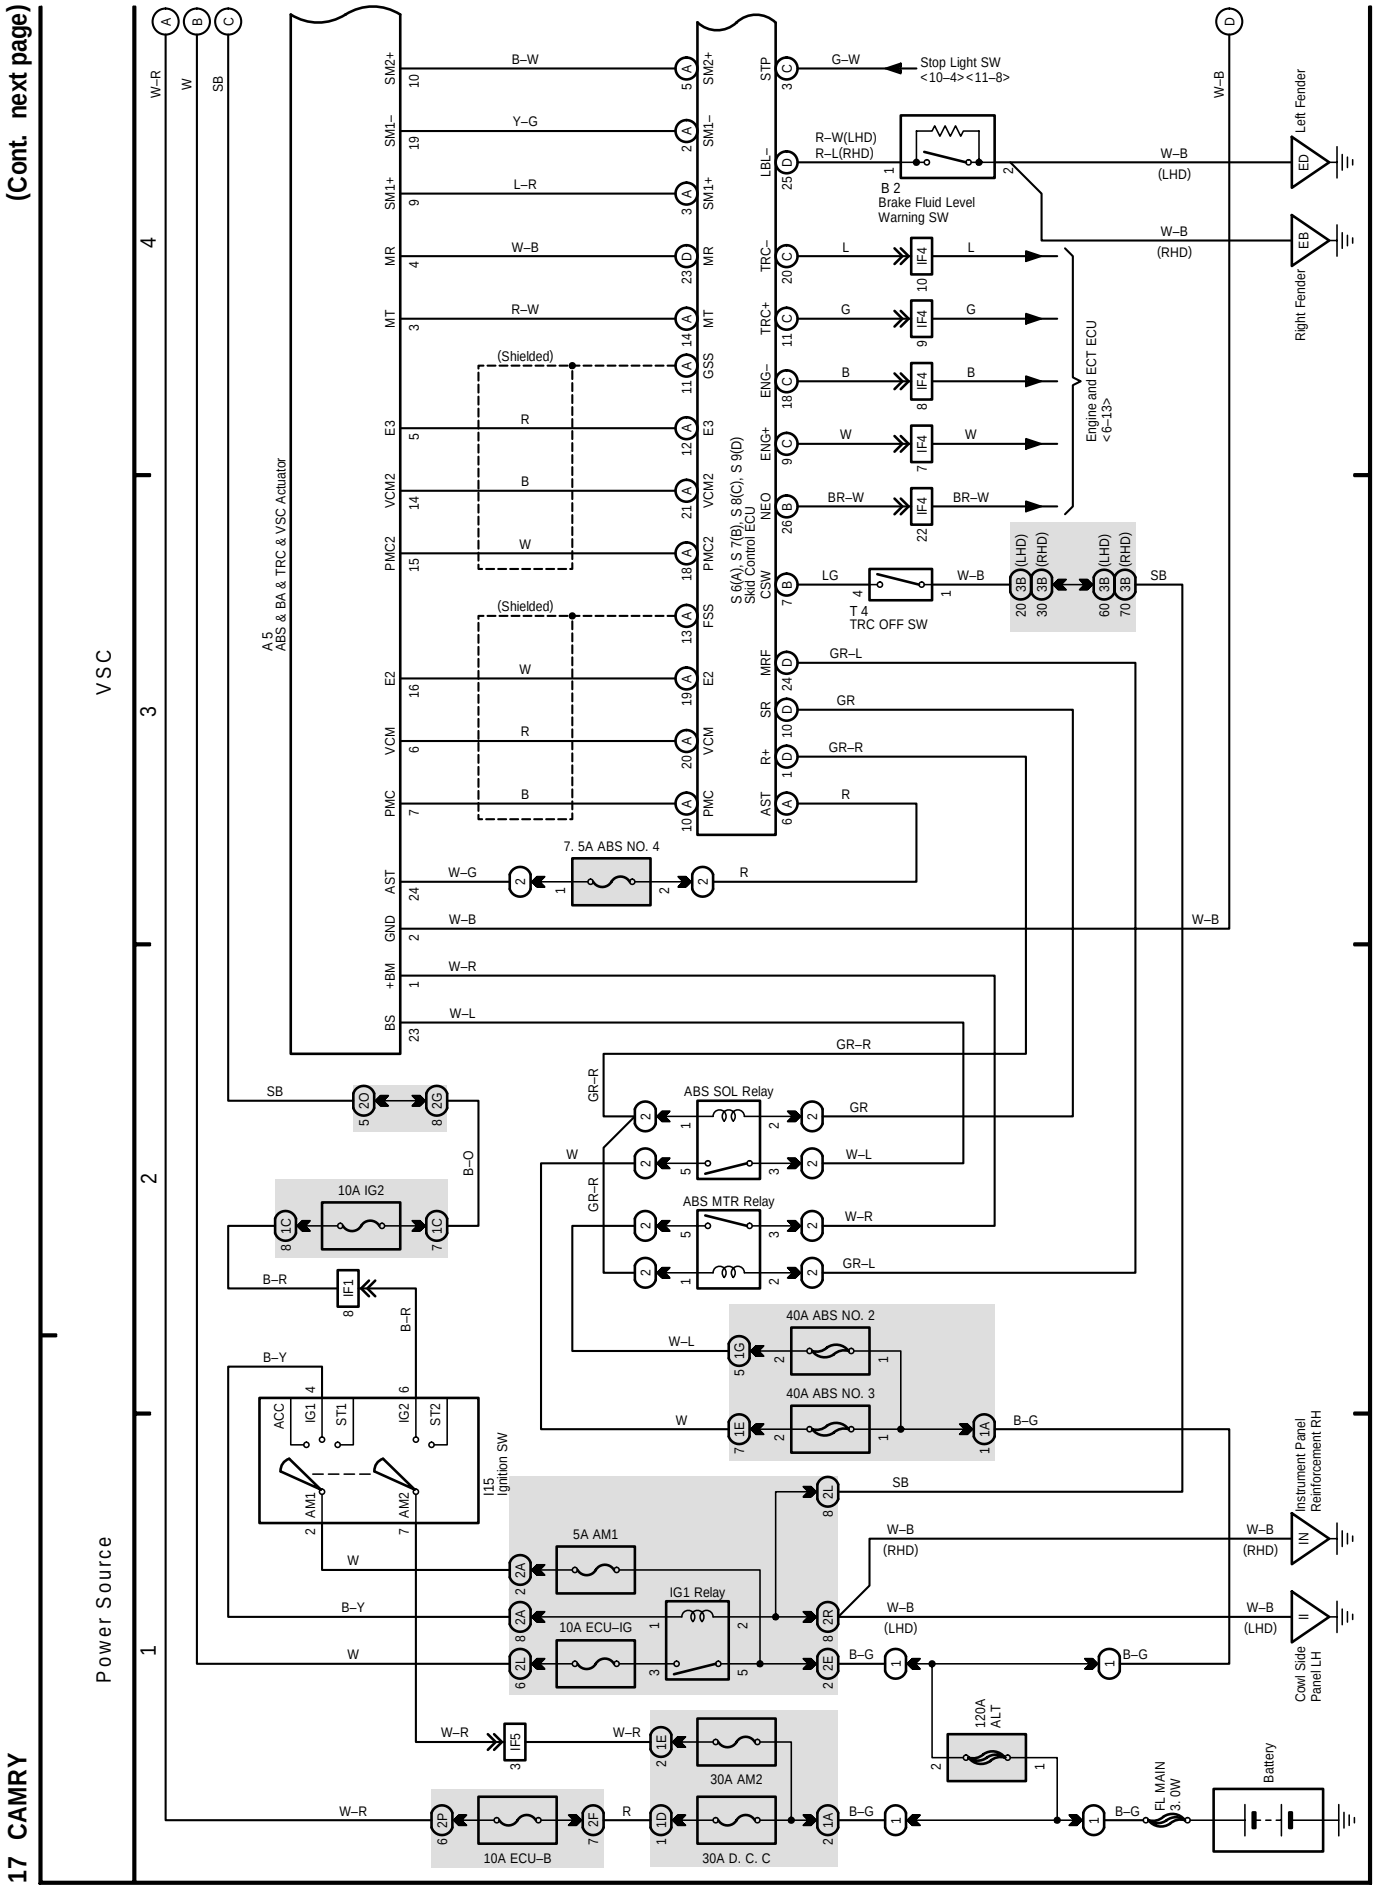
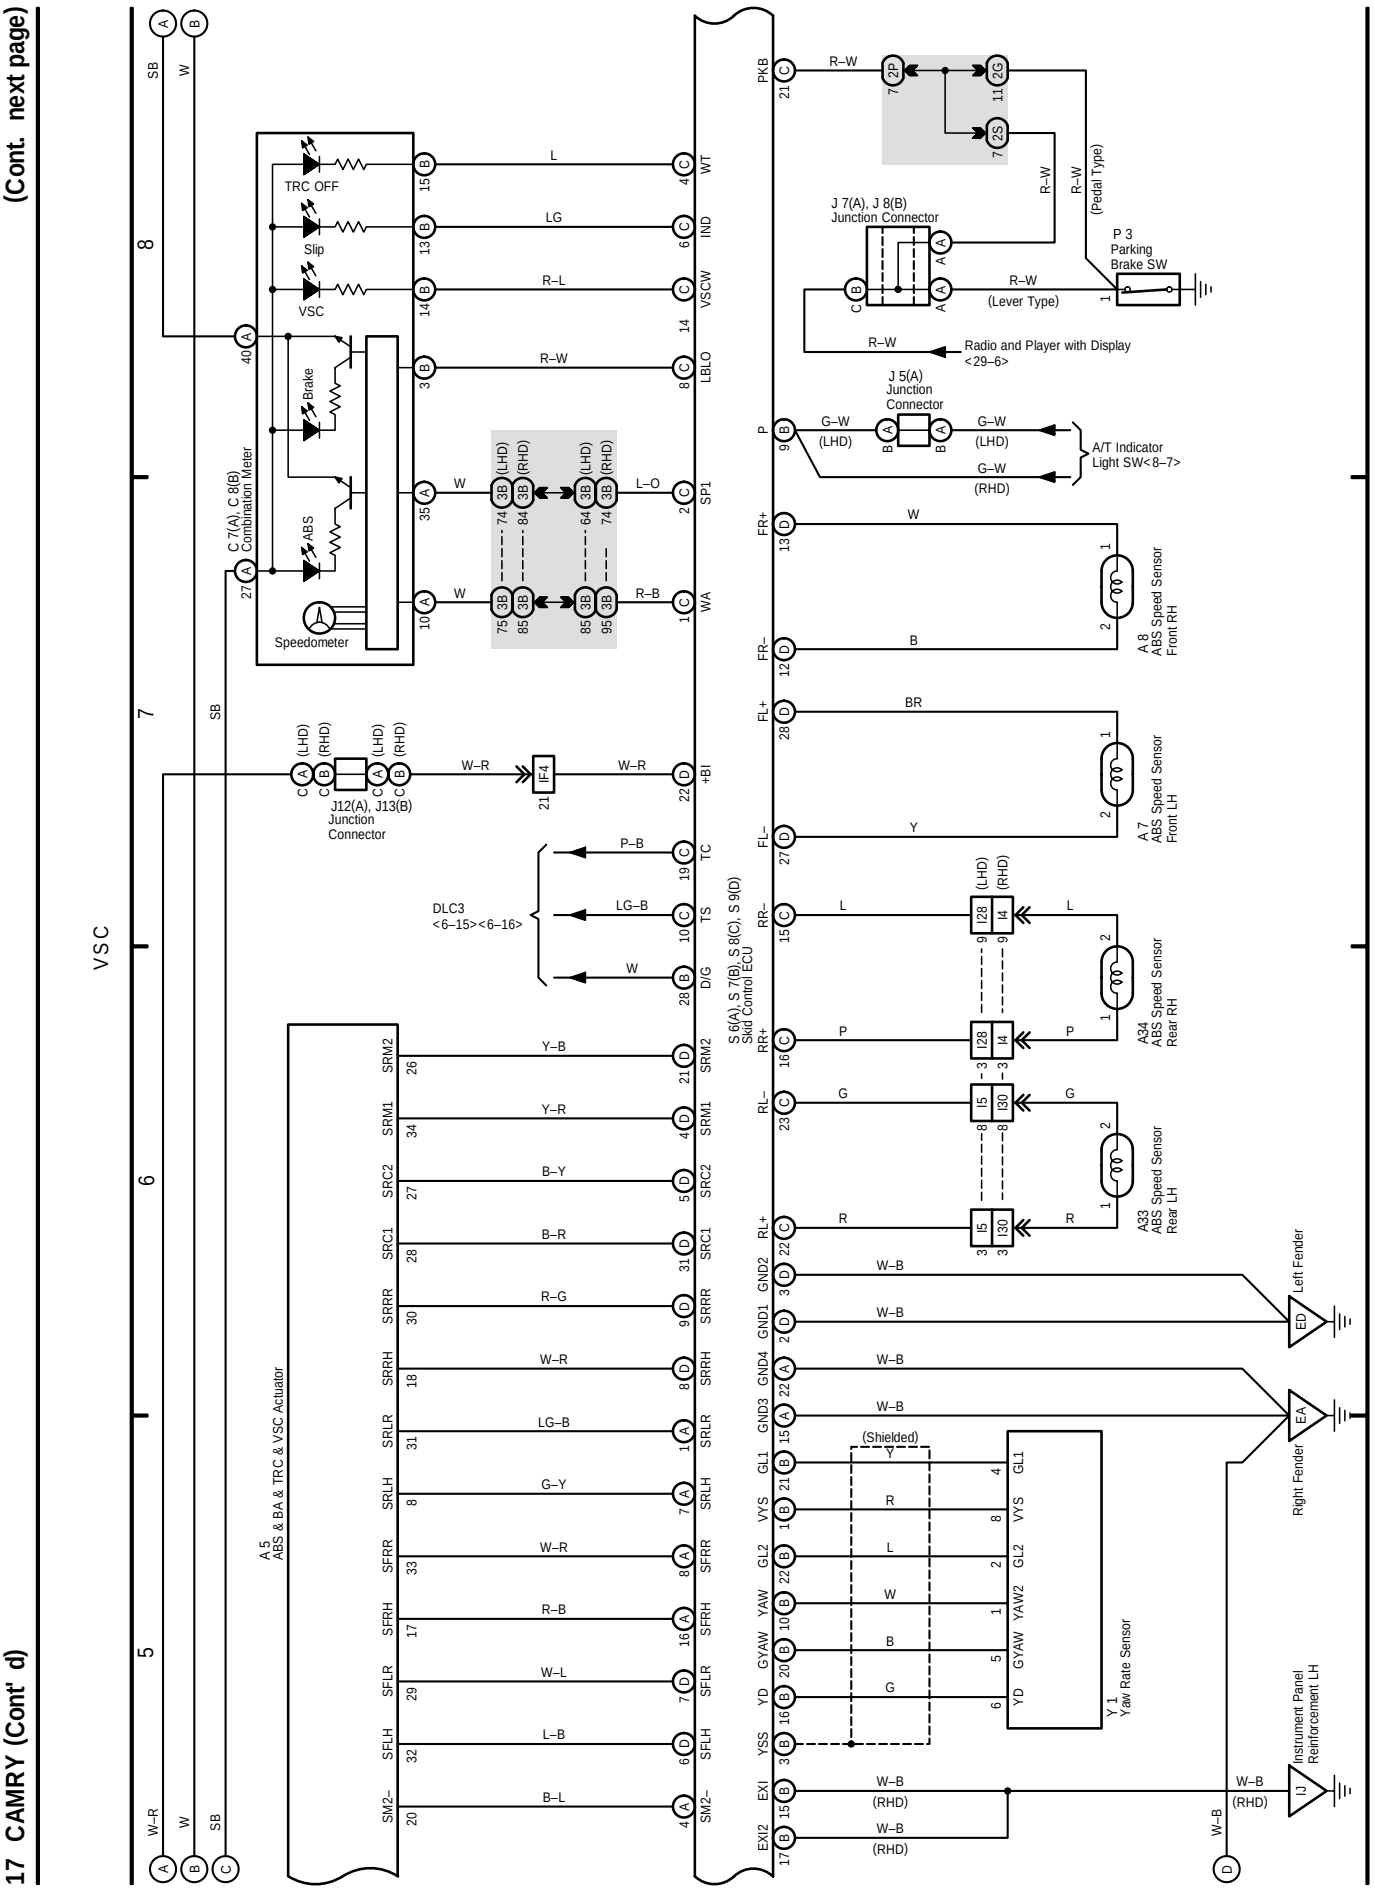

(Cont. next page)
17 CAMRY
VSC
Power Source
A5
ABS & BA & TRC & VSC Actuator
S 6(A), S 7(B), S 8(C), S 9(D)
Skid Control ECU
Engine and ECT ECU
<6–13>
Stop Light SW
<10–4><11–8>
B 2
Brake Fluid Level
Warning SW
T 4
TRC OFF SW
Left Fender
Right Fender
7. 5A ABS NO. 4
ABS SOL Relay
ABS MTR Relay
10A IG2
40A ABS NO. 2
40A ABS NO. 3
I15
Ignition SW
5A AM1
IG1 Relay
10A ECU–IG
30A AM2
10A ECU–B
30A D. C. C
120A
ALT
Battery
FL MAIN
3. 0W
Instrument Panel
Reinforcement RH
Cowl Side
Panel LH
(Shielded)
(Shielded)
(LHD)
(RHD)


(Cont. next page)
17 CAMRY (Cont' d)
VSC
TRC OFF
Slip
VSC
Brake
ABS
Speedometer
C 7(A), C 8(B) Combination Meter
J12(A), J13(B) Junction Connector
IF4
DLC3 <6–15><6–16>
S 6(A), S 7(B), S 8(C), S 9(D) Skid Control ECU
A 5 ABS & BA & TRC & VSC Actuator
J 7(A), J 8(B) Junction Connector
P 3 Parking Brake SW
(Pedal Type)
(Lever Type)
Radio and Player with Display <29–6>
J 5(A) Junction Connector
A/T Indicator Light SW< 8–7>
A 8 ABS Speed Sensor Front RH
A 7 ABS Speed Sensor Front LH
A34 ABS Speed Sensor Rear RH
A33 ABS Speed Sensor Rear LH
Y 1 Yaw Rate Sensor
(Shielded)
Left Fender
Right Fender
Instrument Panel Reinforcement LH
(LHD)
(RHD)

17 CAMRY (Cont' d)

