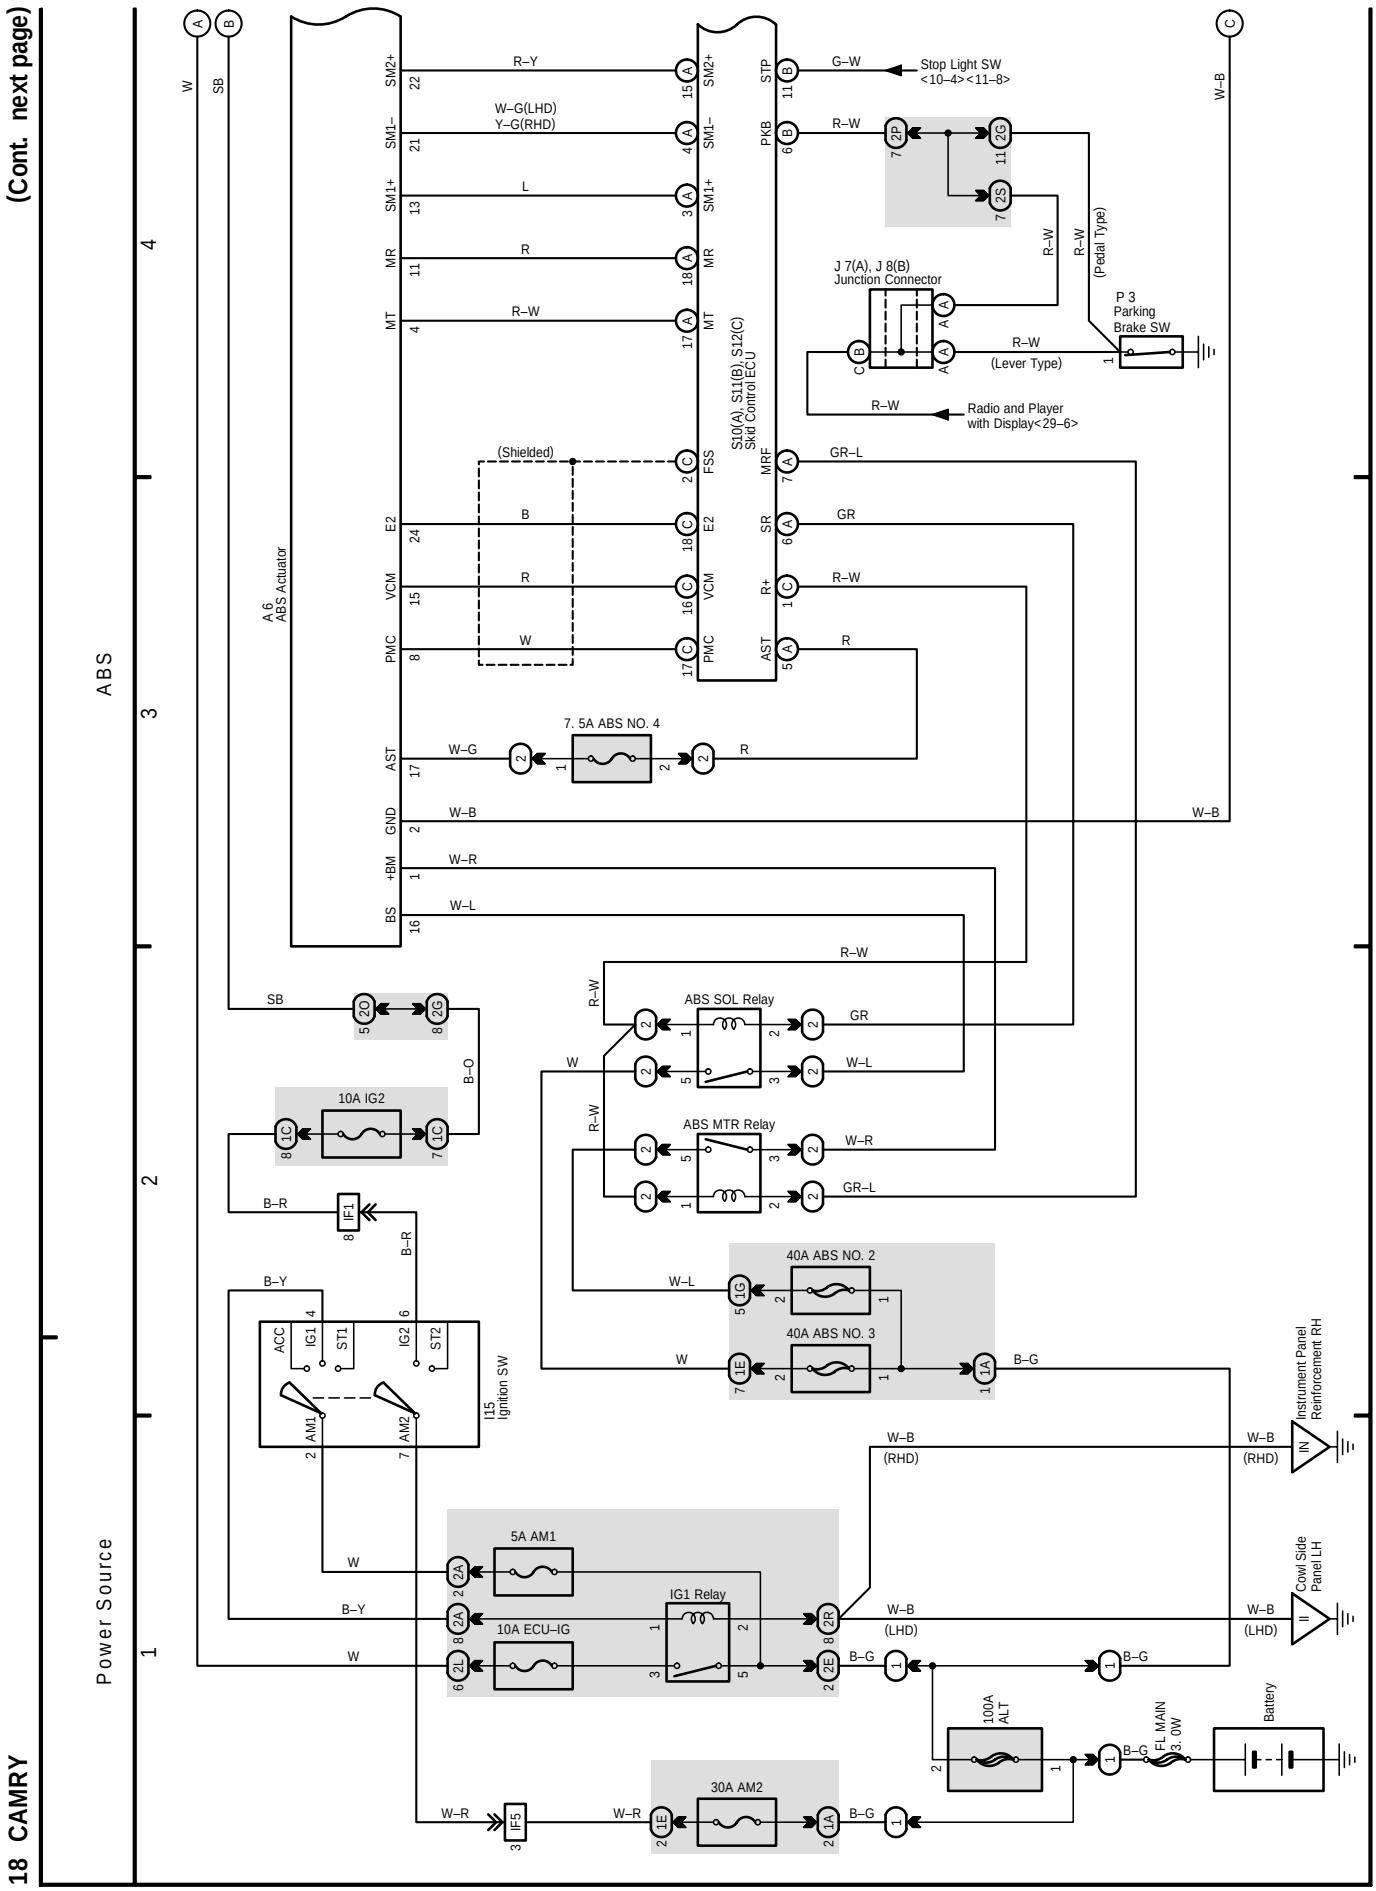
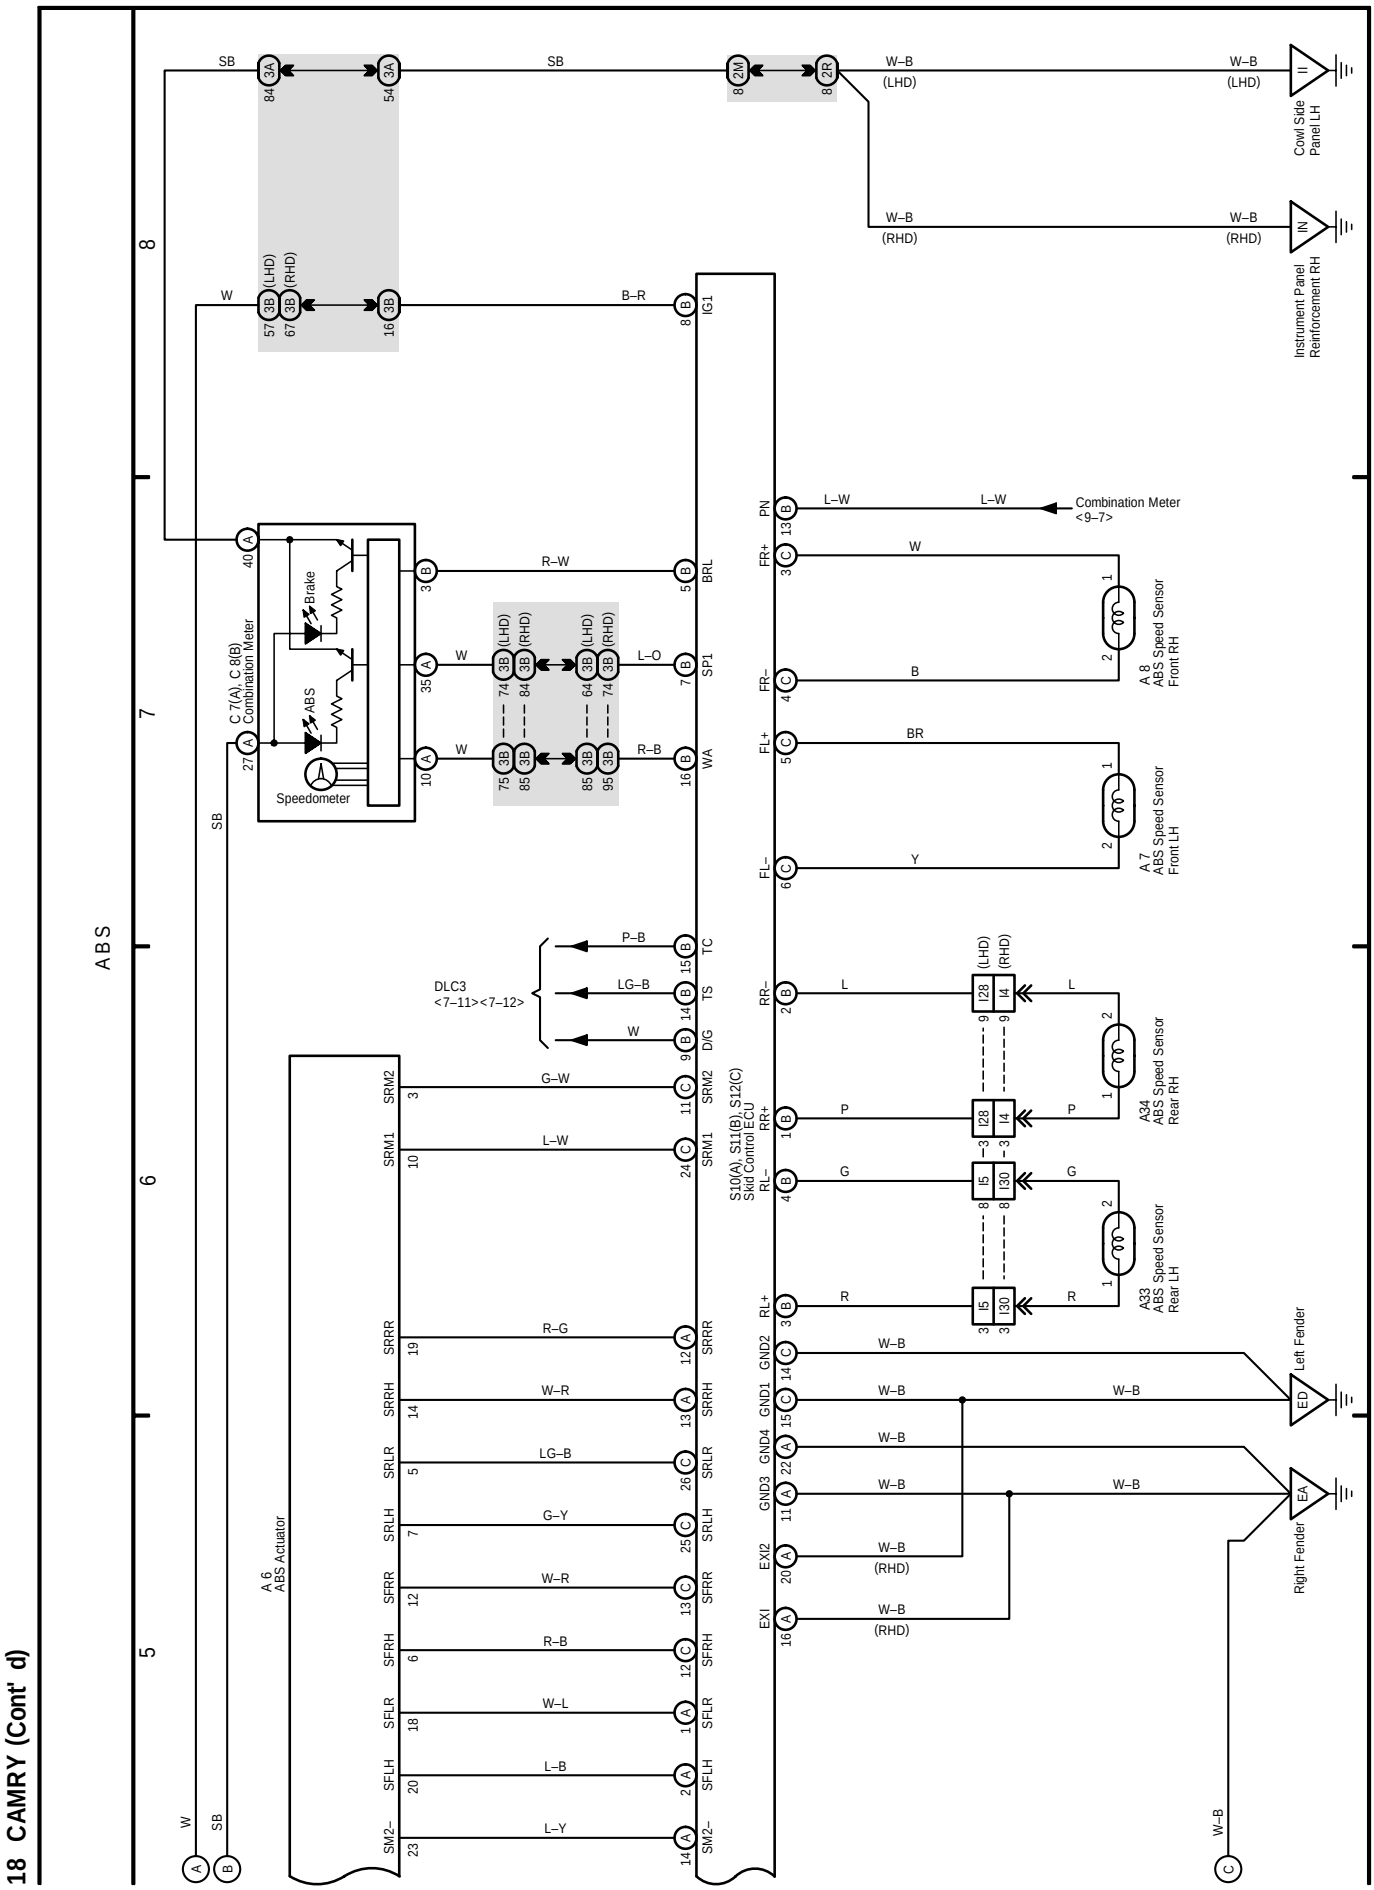

(Cont. next page)
ABS
Power Source
18 CAMRY
A 6
ABS Actuator
S10(A), S11(B), S12(C)
Skid Control ECU
SM2+
SM1–
SM1+
MR
MT
FSS
E2
VCM
PMC
AST
GND
+BM
BS
STP
PKB
MRF
SR
R+
Stop Light SW
<10–4><11–8>
J 7(A), J 8(B)
Junction Connector
P 3
Parking
Brake SW
(Pedal Type)
(Lever Type)
Radio and Player
with Display<29–6>
(Shielded)
7. 5A ABS NO. 4
ABS SOL Relay
ABS MTR Relay
10A IG2
40A ABS NO. 2
40A ABS NO. 3
I15
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
5A AM1
IG1 Relay
10A ECU–IG
30A AM2
100A
ALT
Battery
FL MAIN
3. 0W
Instrument Panel
Reinforcement RH
Cowl Side
Panel LH
(RHD)
(LHD)


18 CAMRY (Cont' d)
ABS
Combination Meter <9–7>
Cowl Side Panel LH
Instrument Panel Reinforcement RH
Left Fender
Right Fender
Brake
ABS
Speedometer
C 7(A), C 8(B) Combination Meter
DLC3 <7–11><7–12>
A 6 ABS Actuator
S10(A), S11(B), S12(C) Skid Control ECU
A 8 ABS Speed Sensor Front RH
A 7 ABS Speed Sensor Front LH
A34 ABS Speed Sensor Rear RH
A33 ABS Speed Sensor Rear LH
(LHD)
(RHD)