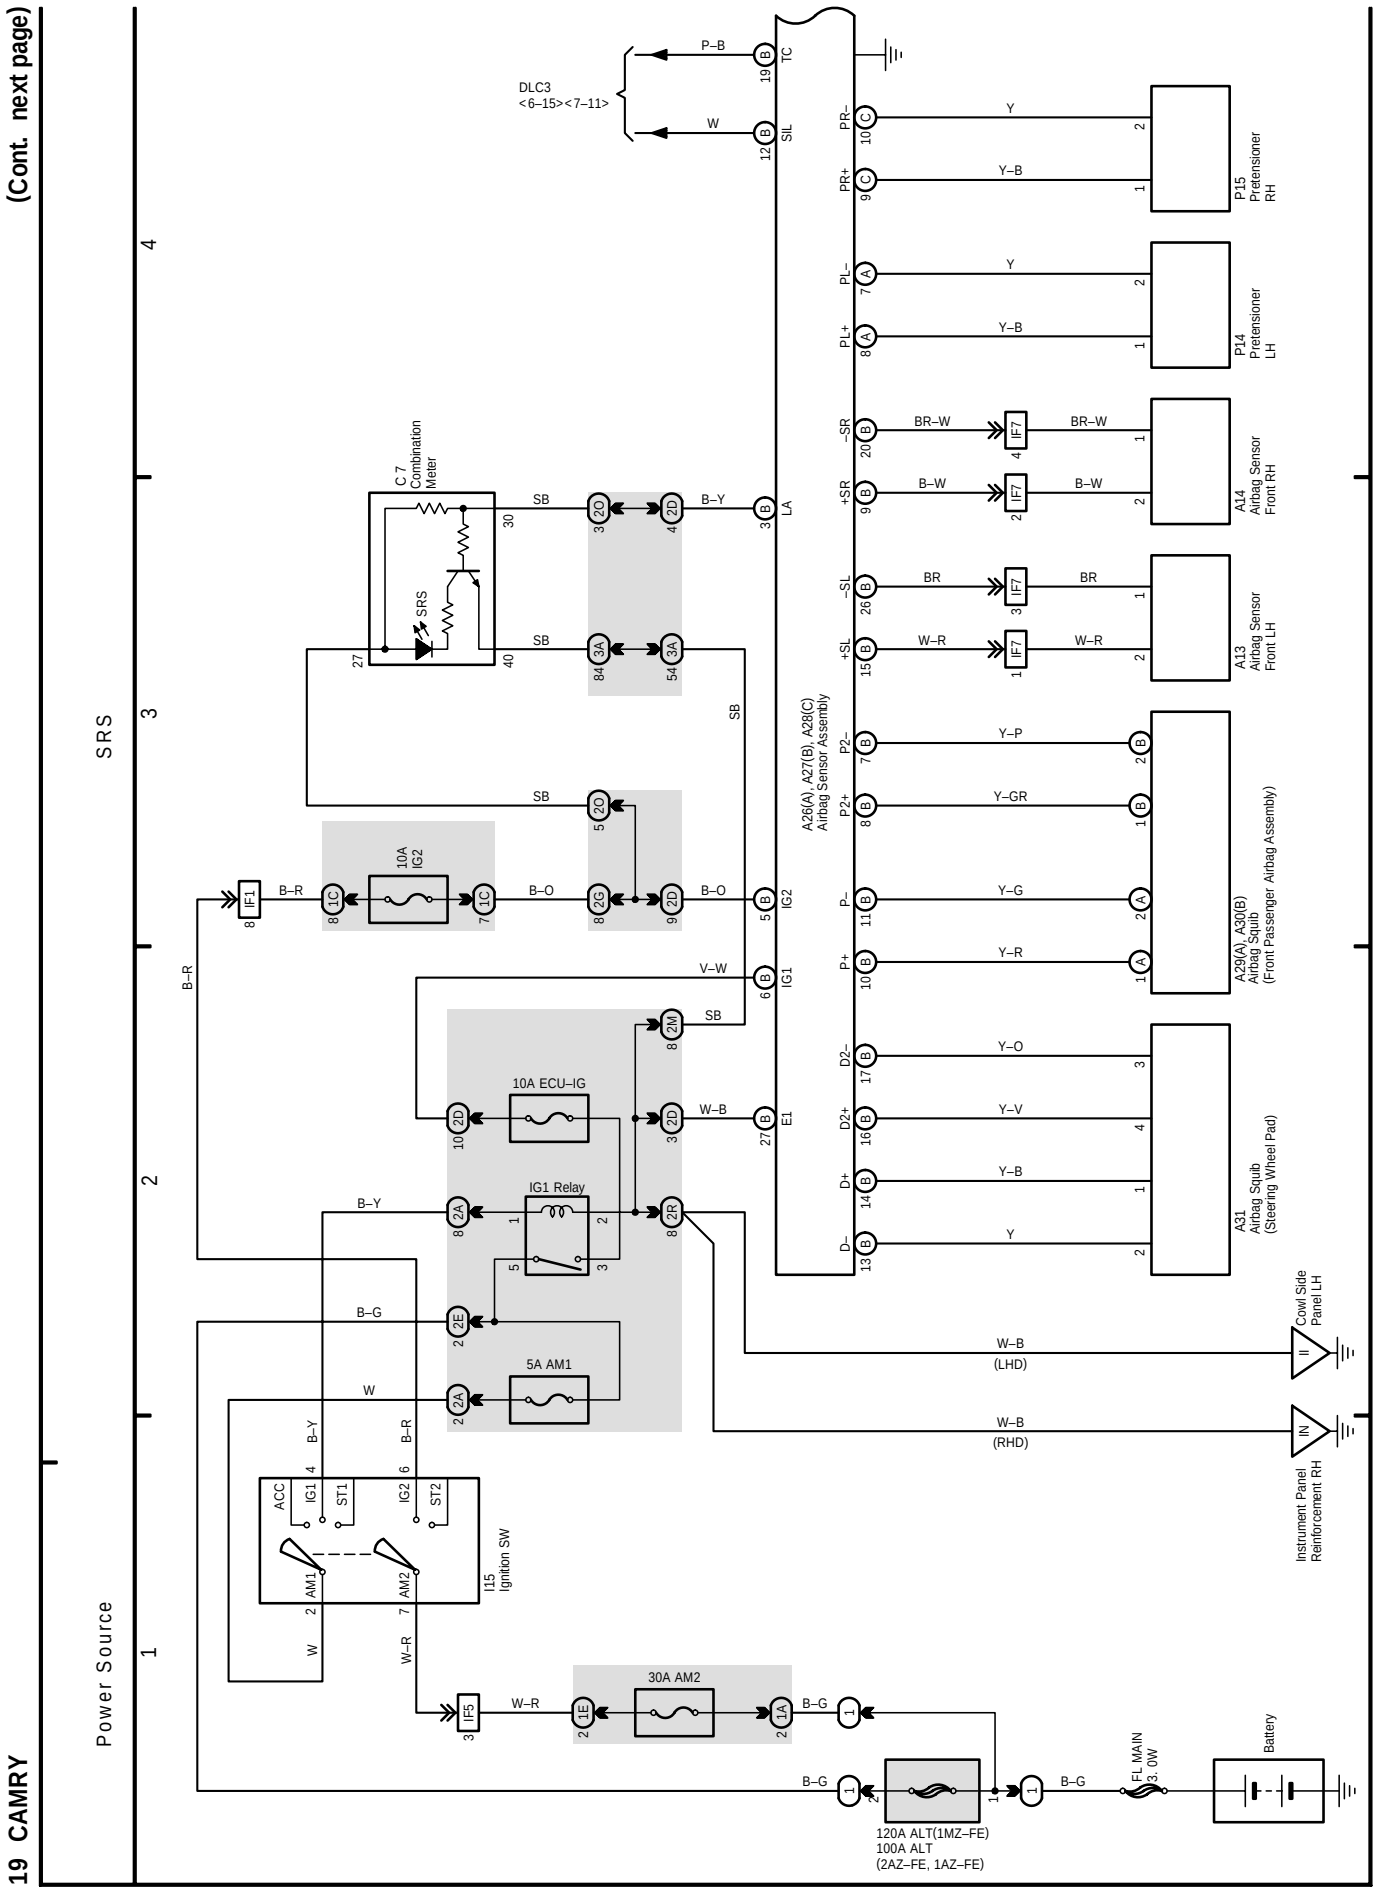
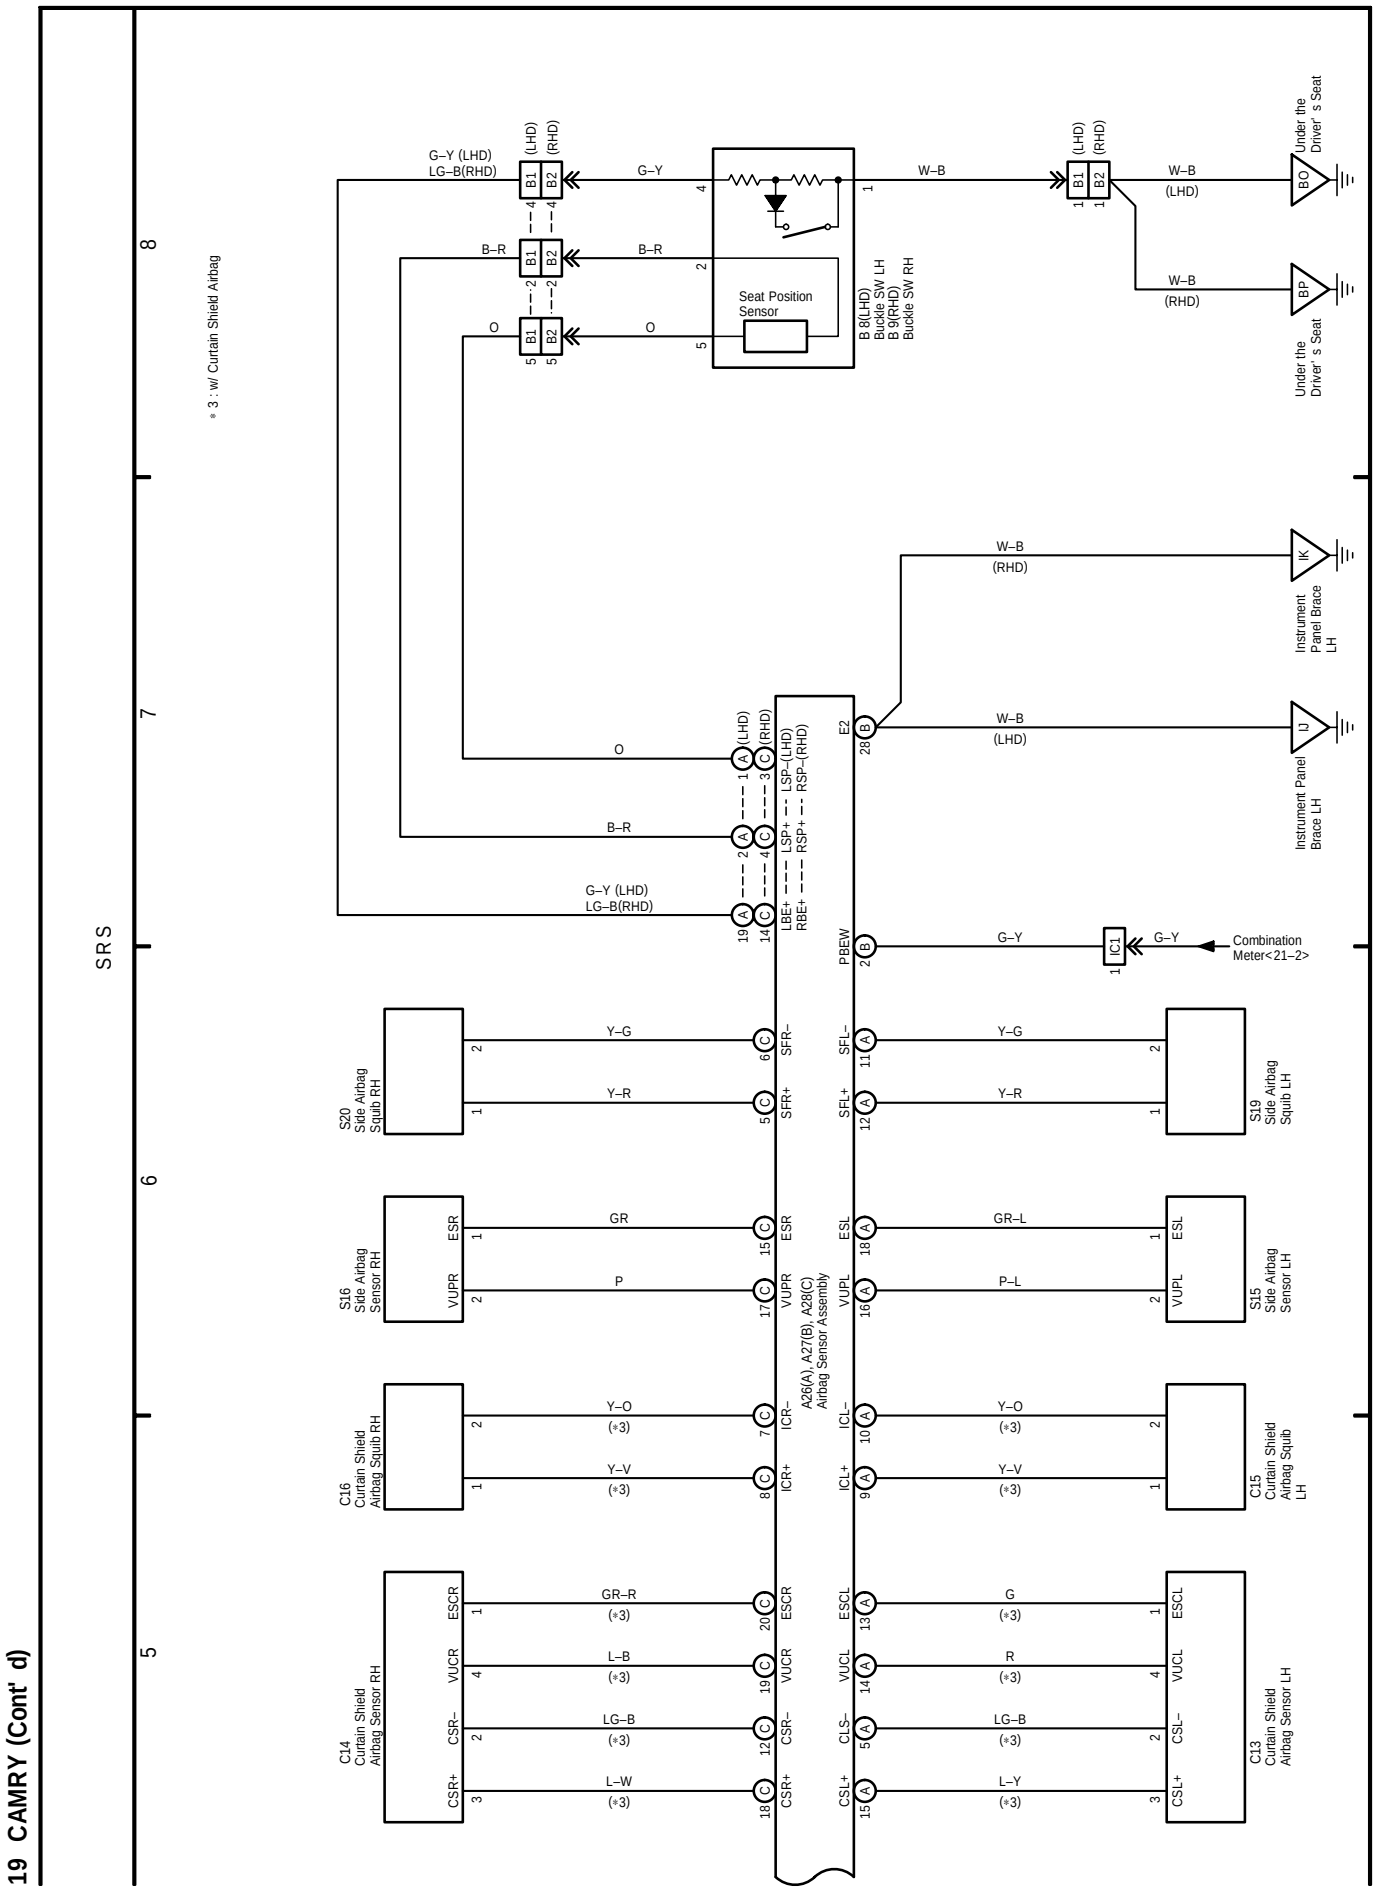

(Cont. next page)
19 CAMRY
Power Source
SRS
1
2
3
4
DLC3
<6–15><7–11>
P–B
W
TC
SIL
C 7
Combination
Meter
SRS
LA
IG2
IG1
E1
A26(A), A27(B), A28(C)
Airbag Sensor Assembly
P15
Pretensioner
RH
P14
Pretensioner
LH
A14
Airbag Sensor
Front RH
A13
Airbag Sensor
Front LH
A29(A), A30(B)
Airbag Squib
(Front Passenger Airbag Assembly)
A31
Airbag Squib
(Steering Wheel Pad)
10A
IG2
10A ECU–IG
IG1 Relay
5A AM1
30A AM2
I15
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
Cowl Side
Panel LH
Instrument Panel
Reinforcement RH
W–B
(LHD)
W–B
(RHD)
120A ALT(1MZ–FE)
100A ALT
(2AZ–FE, 1AZ–FE)
FL MAIN
3. 0W
Battery


19 CAMRY (Cont' d)
SRS
* 3 : w/ Curtain Shield Airbag
Seat Position Sensor
B 8(LHD) Buckle SW LH
B 9(RHD) Buckle SW RH
Under the Driver' s Seat
Instrument Panel Brace LH
Instrument Panel Brace LH
Combination Meter<21–2>
A26(A), A27(B), A28(C) Airbag Sensor Assembly
S20 Side Airbag Squib RH
S19 Side Airbag Squib LH
S16 Side Airbag Sensor RH
S15 Side Airbag Sensor LH
C16 Curtain Shield Airbag Squib RH
C15 Curtain Shield Airbag Squib LH
C14 Curtain Shield Airbag Sensor RH
C13 Curtain Shield Airbag Sensor LH
G–Y (LHD)
LG–B(RHD)
B–R
O
G–Y
W–B
W–B (LHD)
W–B (RHD)
Y–G
Y–R
GR
P
GR–L
P–L
Y–O
Y–V
GR–R
L–B
LG–B
L–W
G
R
L–Y
(∗3)
LSP–(LHD)
LSP+
RSP–(RHD)
RSP+
LBE+
RBE+
PBEW
E2
SFR–
SFR+
SFL–
SFL+
ESR
VUPR
ESL
VUPL
ICR–
ICR+
ICL–
ICL+
ESCR
VUCR
CSR–
CSR+
ESCL
VUCL
CLS–
CSL–
CSL+