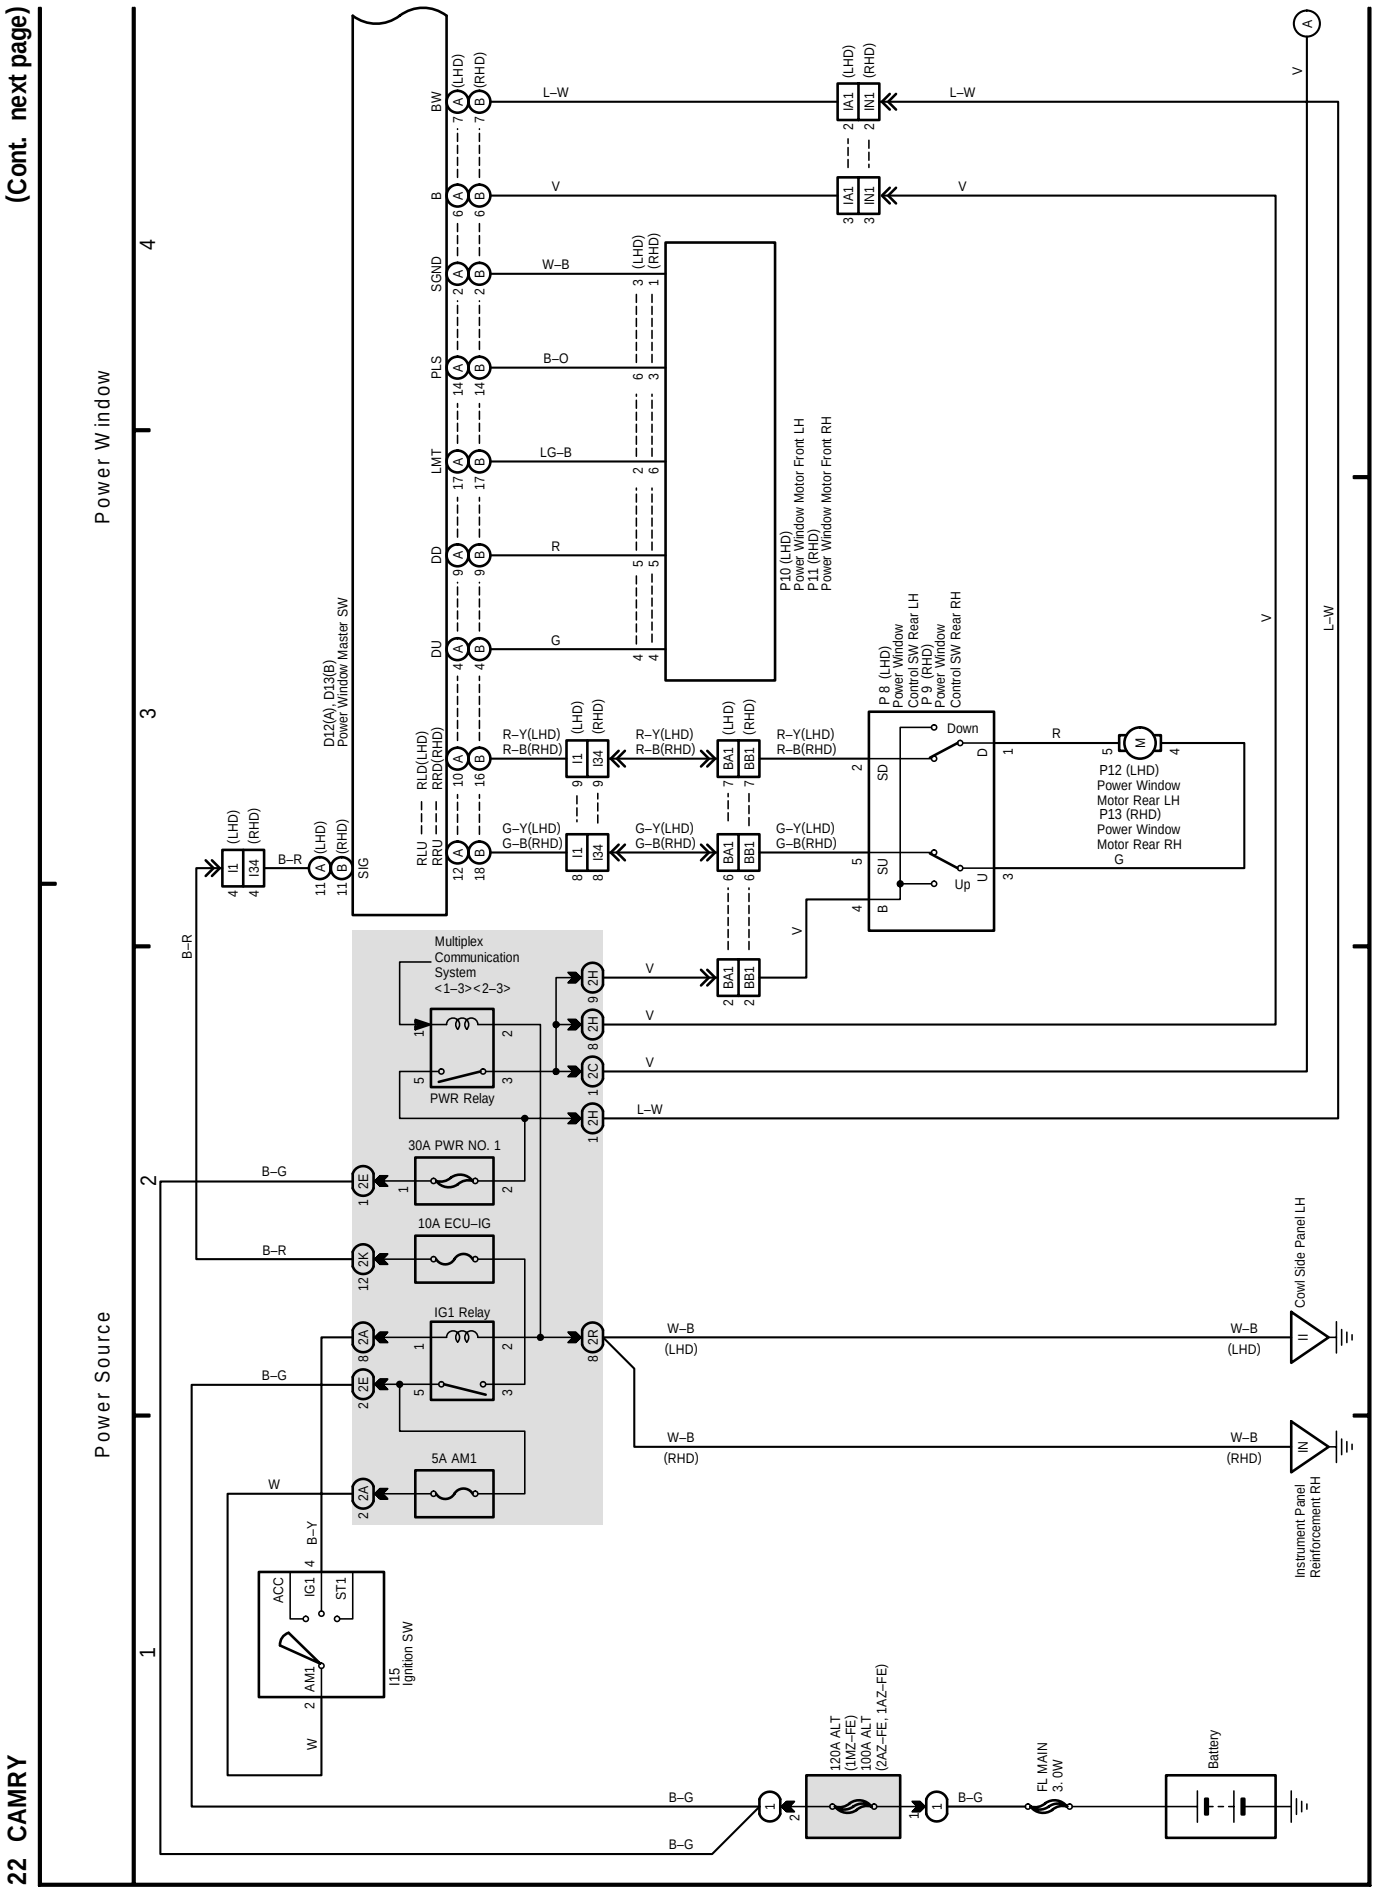
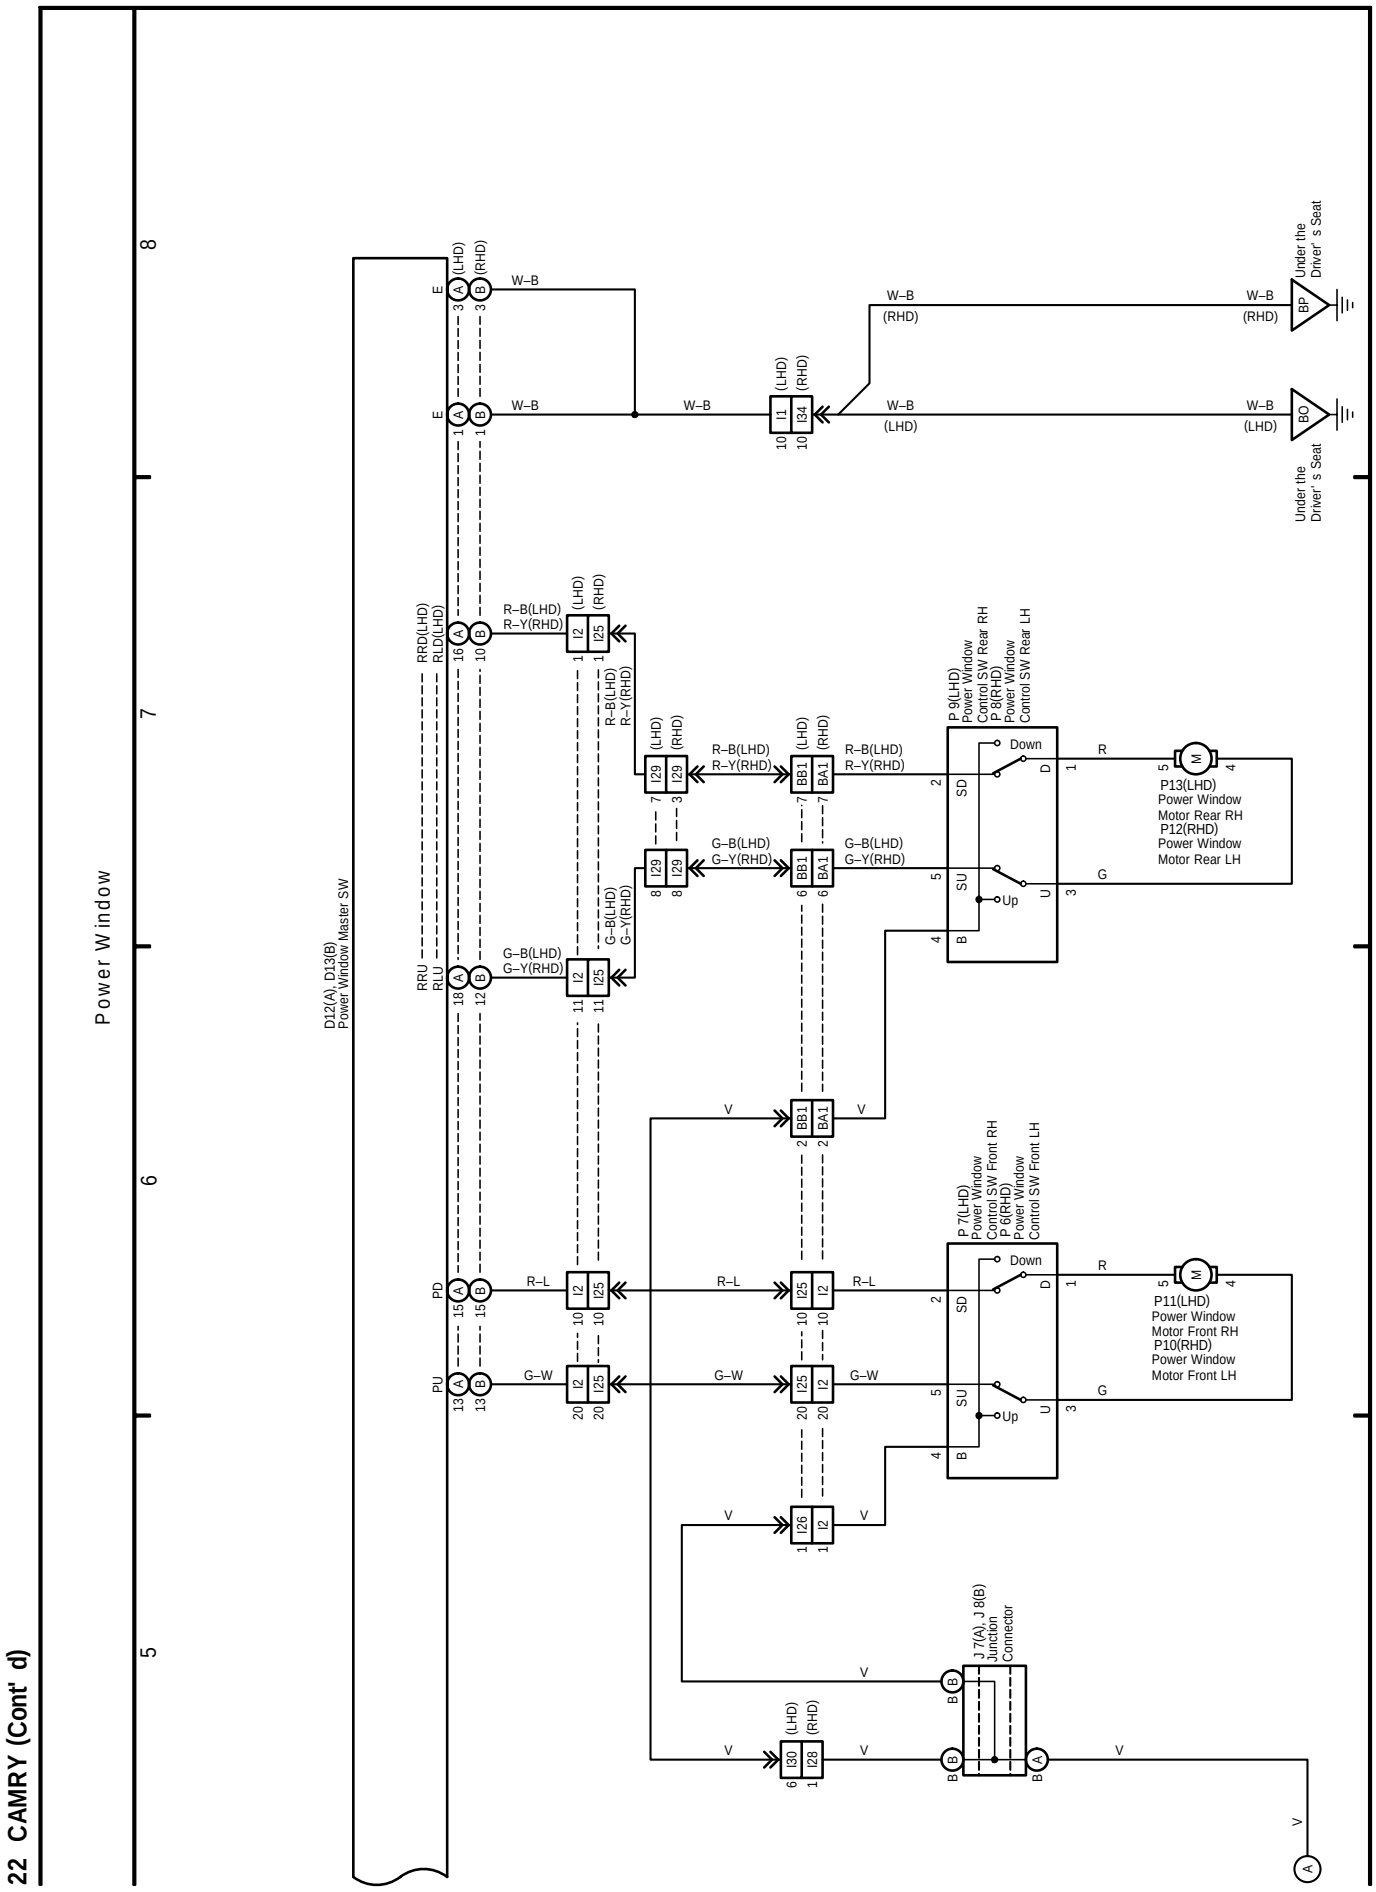

(Cont. next page)
Power Window
Power Source
22 CAMRY
D12(A), D13(B)
Power Window Master SW
P10 (LHD)
Power Window Motor Front LH
P11 (RHD)
Power Window Motor Front RH
P 8 (LHD)
Power Window
Control SW Rear LH
P 9 (RHD)
Power Window
Control SW Rear RH
P12 (LHD)
Power Window
Motor Rear LH
P13 (RHD)
Power Window
Motor Rear RH
Down
Up
Multiplex
Communication
System
<1–3><2–3>
PWR Relay
30A PWR NO. 1
10A ECU–IG
IG1 Relay
5A AM1
I15
Ignition SW
ACC
IG1
ST1
AM1
120A ALT
(1MZ–FE)
100A ALT
(2AZ–FE, 1AZ–FE)
FL MAIN
3. 0W
Battery
Cowl Side Panel LH
Instrument Panel
Reinforcement RH
L–W
V
B–R
B–G
W–B
(LHD)
W–B
(RHD)
R–Y(LHD)
R–B(RHD)
G–Y(LHD)
G–B(RHD)
B–O
W
B–Y
R
G


22 CAMRY (Cont' d)
Power Window
D12(A), D13(B)
Power Window Master SW
P 9(LHD)
Power Window
Control SW Rear RH
P 8(RHD)
Power Window
Control SW Rear LH
P13(LHD)
Power Window
Motor Rear RH
P12(RHD)
Power Window
Motor Rear LH
P 7(LHD)
Power Window
Control SW Front RH
P 6(RHD)
Power Window
Control SW Front LH
P11(LHD)
Power Window
Motor Front RH
P10(RHD)
Power Window
Motor Front LH
J 7(A), J 8(B)
Junction
Connector
Under the
Driver' s Seat
Down
Up
W–B
R–B(LHD)
R–Y(RHD)
G–B(LHD)
G–Y(RHD)
R–L
G–W
V
RRD(LHD)
RLD(LHD)
RRU
RLU
PD
PU