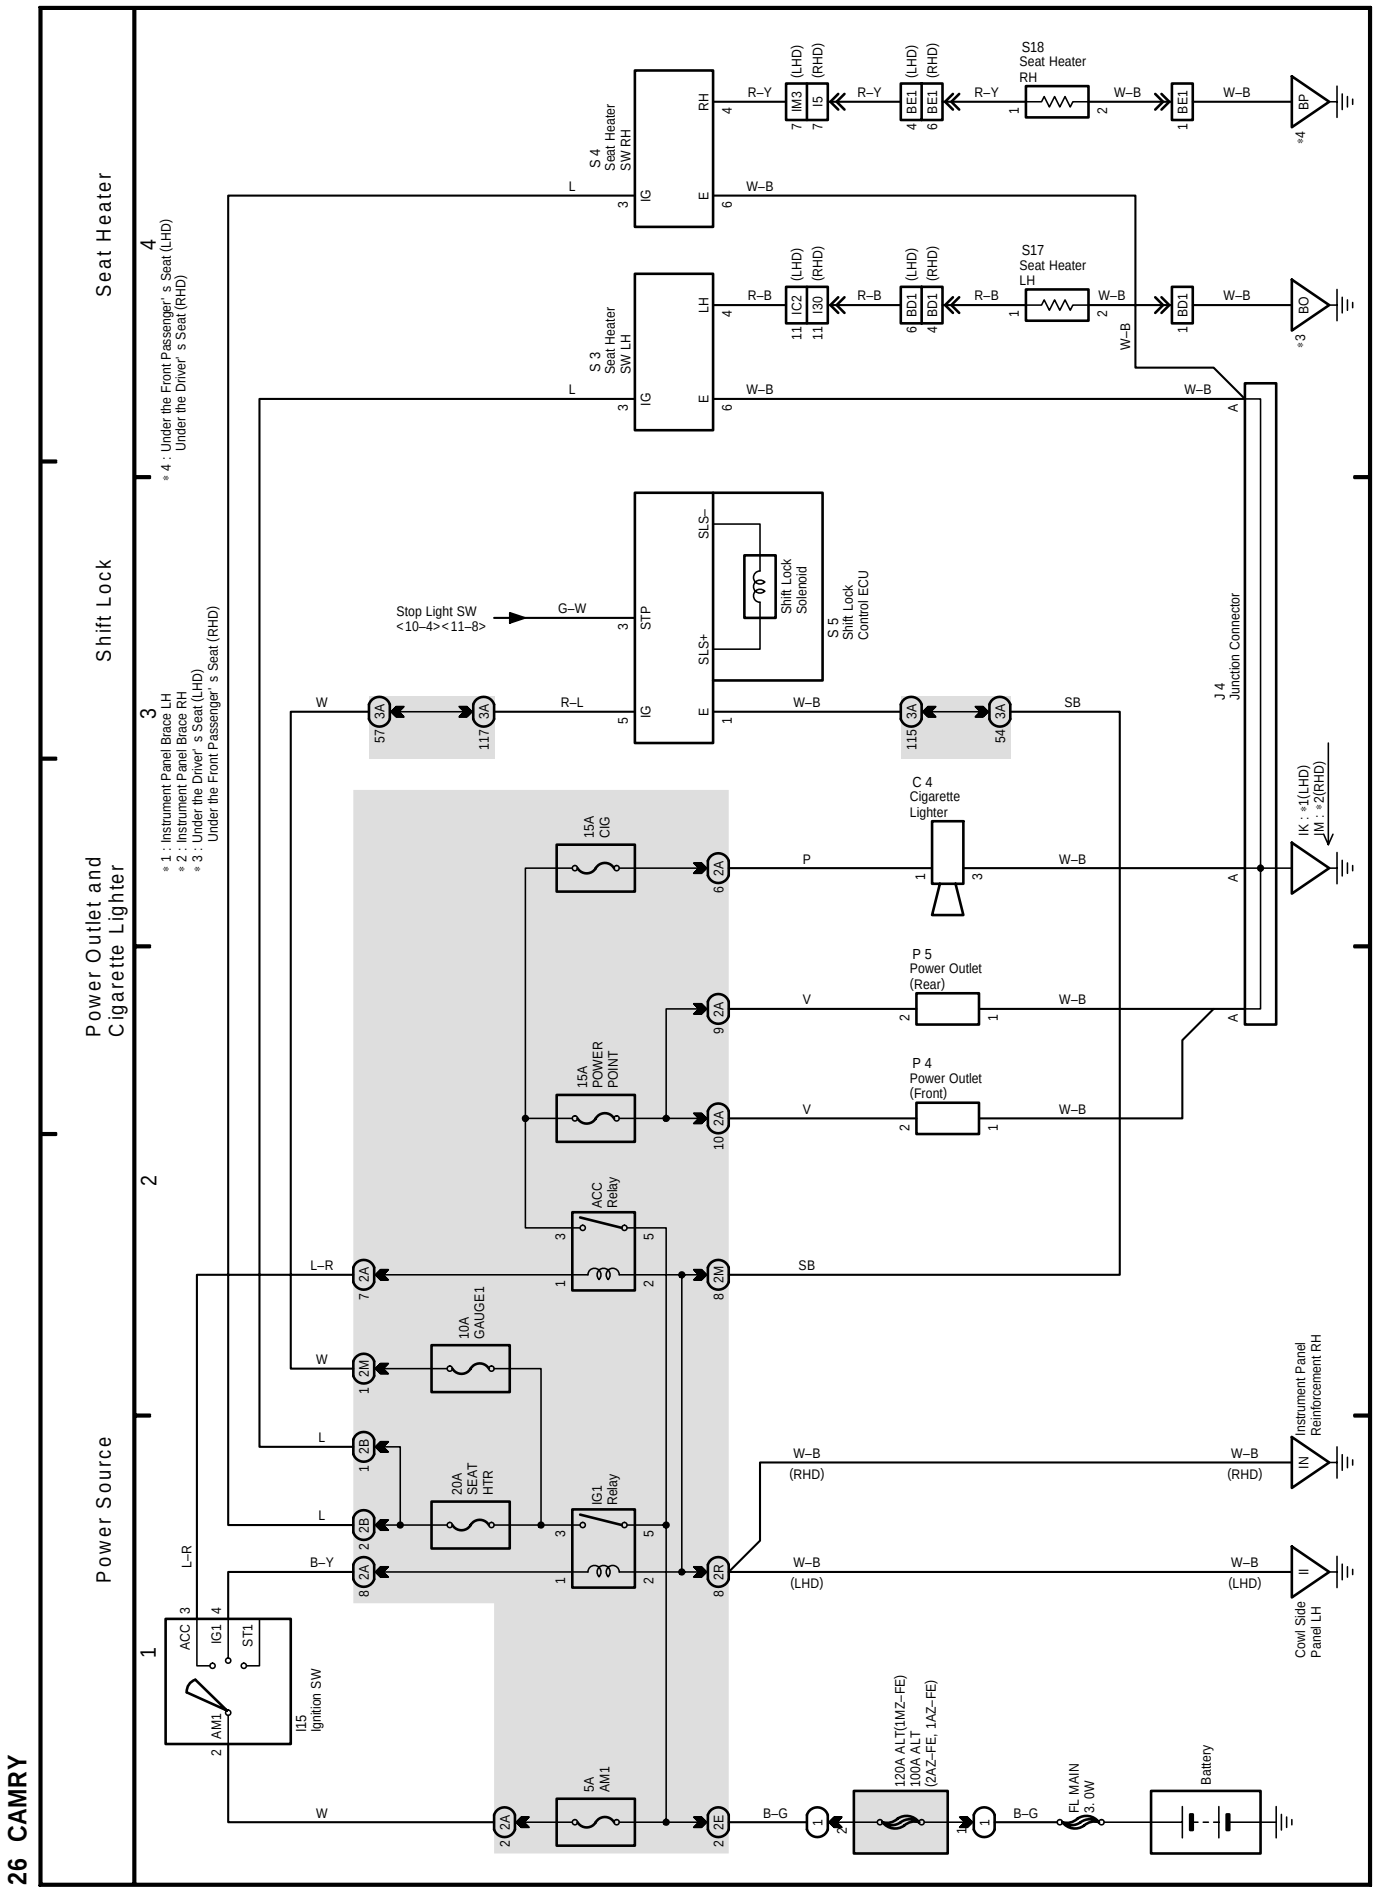

Power Source
Power Outlet and Cigarette Lighter
Shift Lock
Seat Heater
1
2
3
4
* 1 : Instrument Panel Brace LH
* 2 : Instrument Panel Brace RH
* 3 : Under the Driver' s Seat (LHD)
Under the Front Passenger' s Seat (RHD)
* 4 : Under the Front Passenger' s Seat (LHD)
Under the Driver' s Seat (RHD)
I15 Ignition SW
ACC
IG1
ST1
AM1
5A AM1
15A CIG
15A POWER POINT
10A GAUGE1
20A SEAT HTR
ACC Relay
IG1 Relay
120A ALT(1MZ-FE)
100A ALT
(2AZ-FE, 1AZ-FE)
FL MAIN
3. 0W
Battery
Cowl Side Panel LH
Instrument Panel Reinforcement RH
J 4 Junction Connector
C 4 Cigarette Lighter
P 5 Power Outlet (Rear)
P 4 Power Outlet (Front)
S 3 Seat Heater SW LH
S 4 Seat Heater SW RH
S17 Seat Heater LH
S18 Seat Heater RH
S 5 Shift Lock Control ECU
Shift Lock Solenoid
Stop Light SW
<10–4><11–8>
(LHD)
(RHD)
W–B
(RHD)
W–B
(LHD)