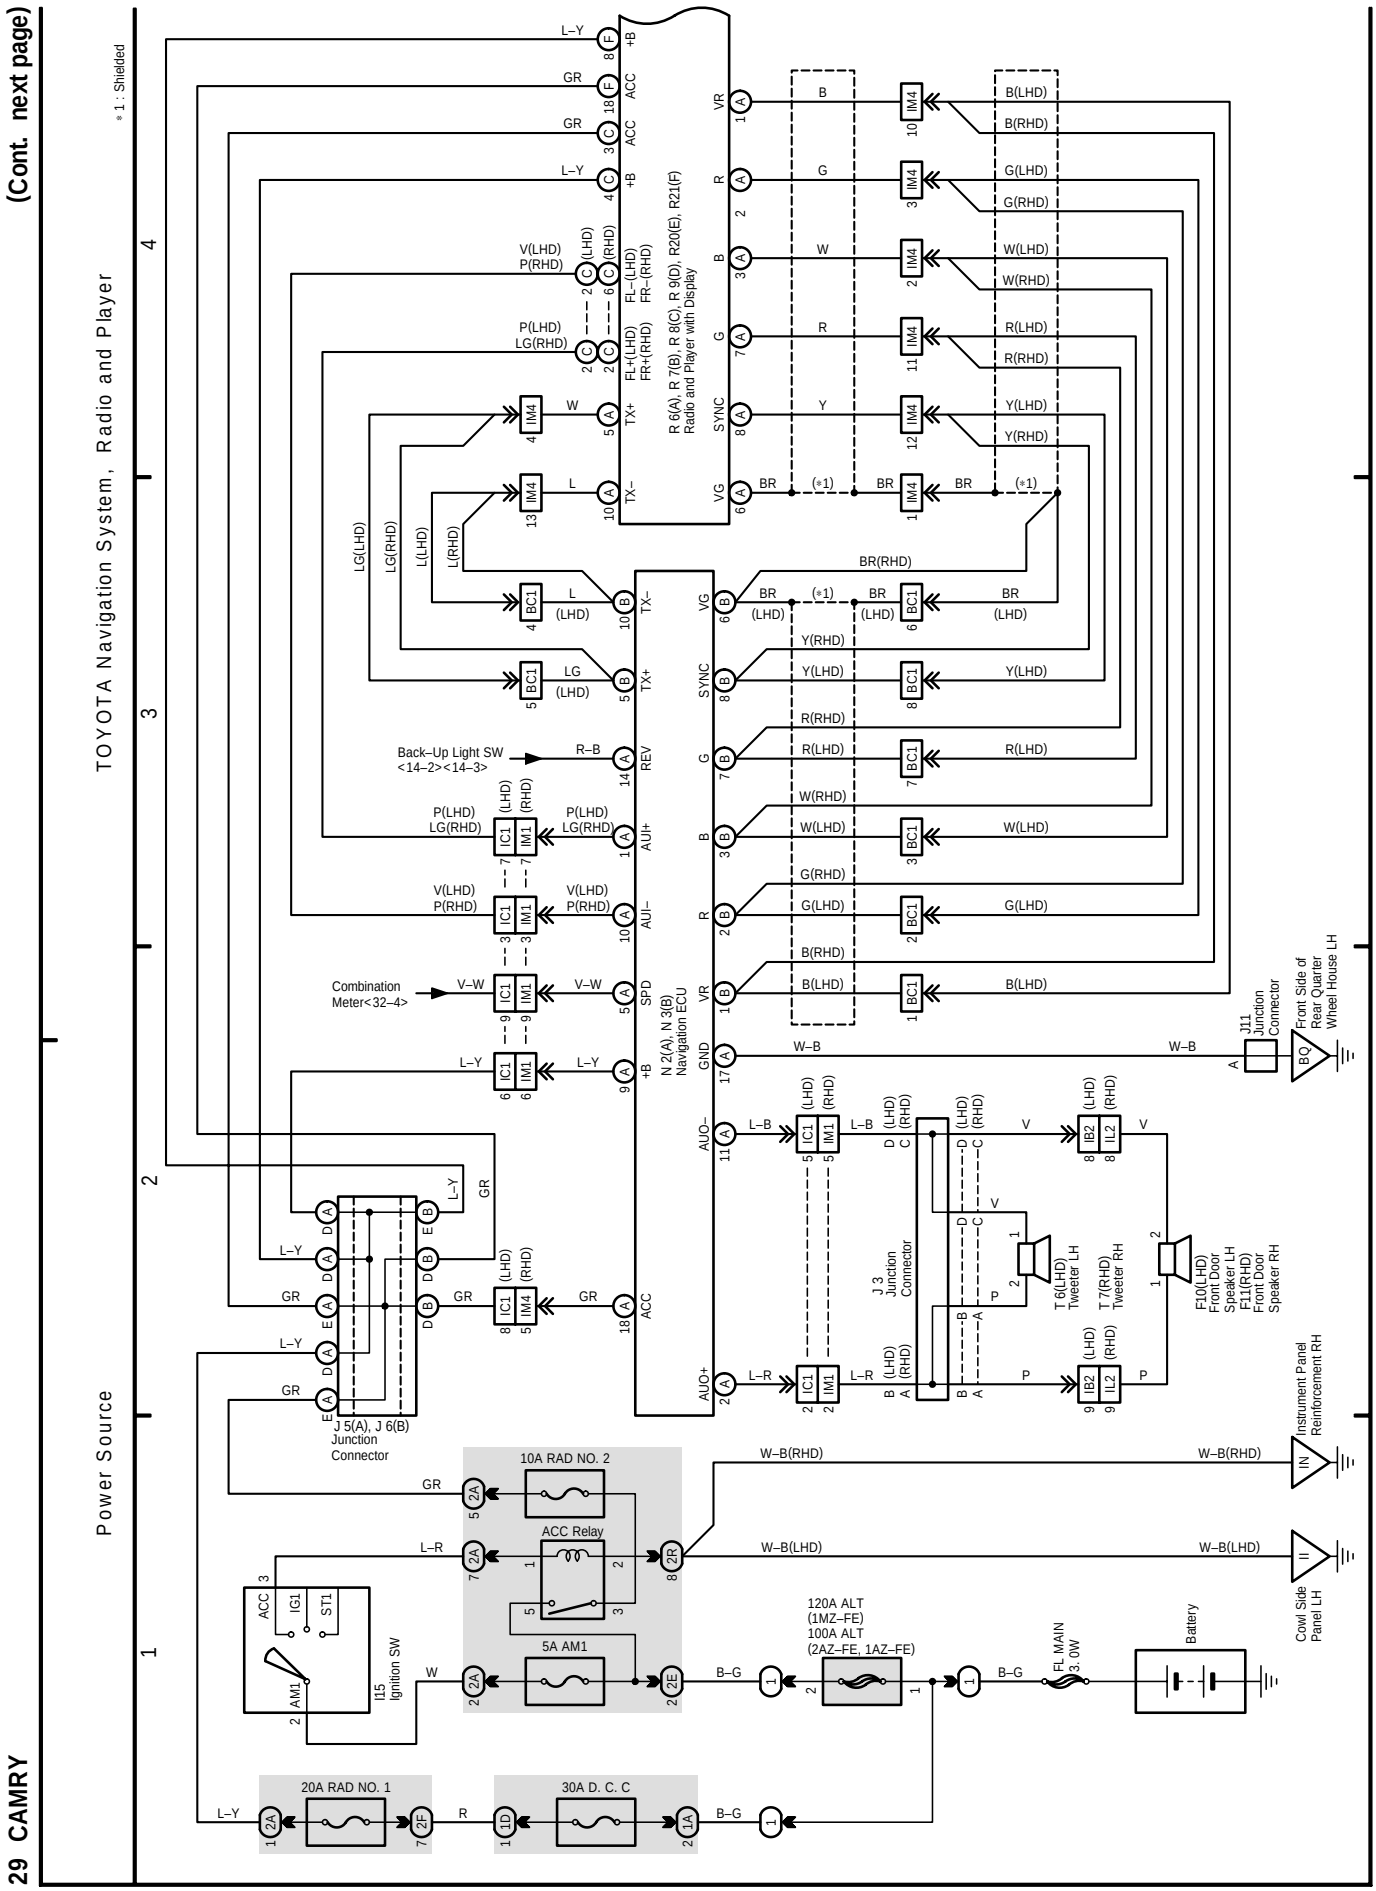
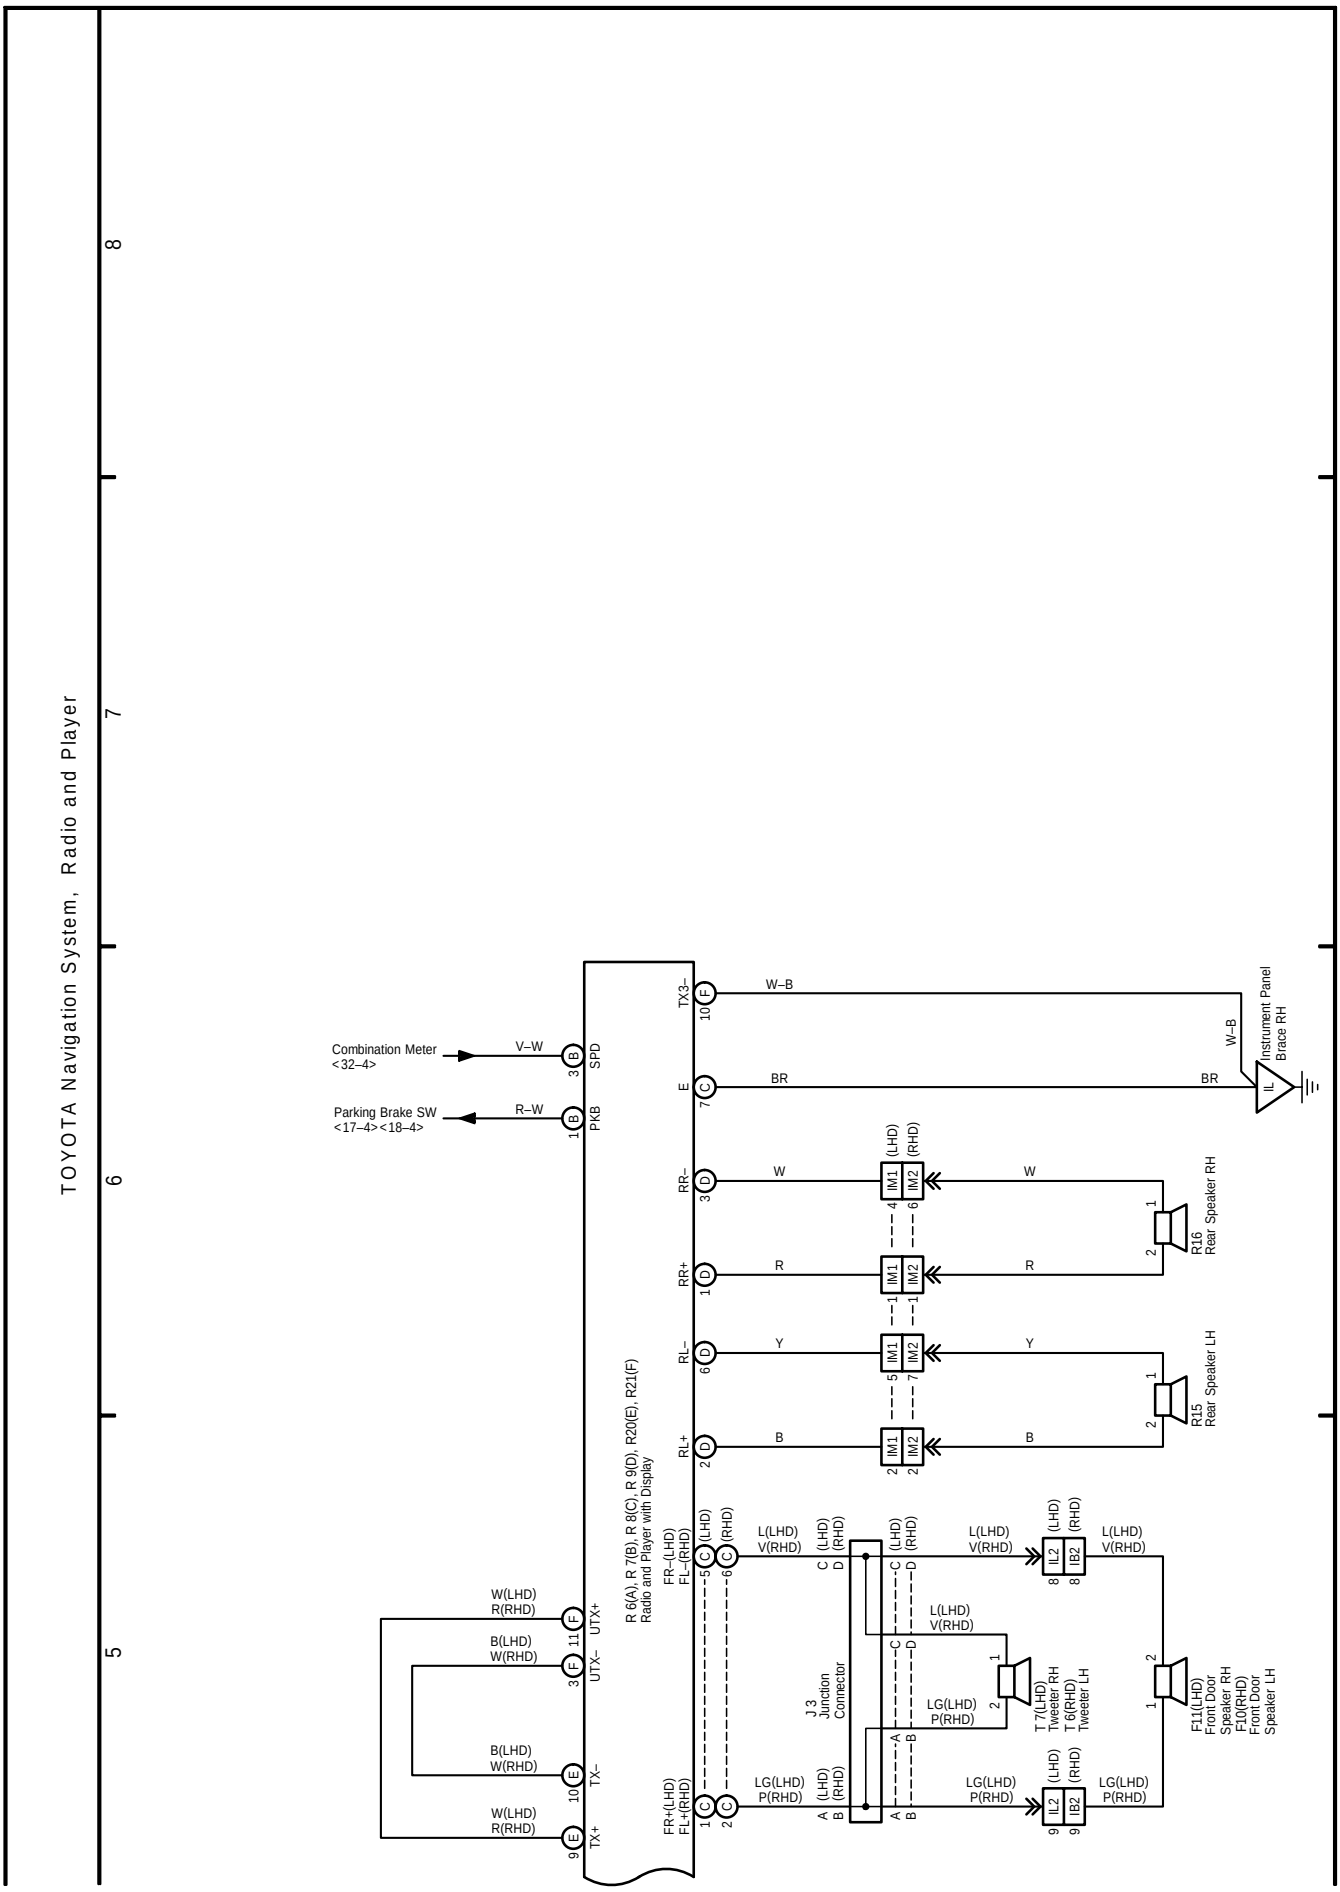

(Cont. next page)
TOYOTA Navigation System, Radio and Player
Power Source
29 CAMRY
*1 : Shielded
R 6(A), R 7(B), R 8(C), R 9(D), R20(E), R21(F)
Radio and Player with Display
N 2(A), N 3(B)
Navigation ECU
J 3
Junction
Connector
J 5(A), J 6(B)
Junction
Connector
J11
Junction
Connector
Front Side of
Rear Quarter
Wheel House LH
Back–Up Light SW
<14–2><14–3>
Combination
Meter<32–4>
T 6(LHD)
Tweeter LH
T 7(RHD)
Tweeter RH
F10(LHD)
Front Door
Speaker LH
F11(RHD)
Front Door
Speaker RH
Instrument Panel
Reinforcement RH
Cowl Side
Panel LH
10A RAD NO. 2
ACC Relay
5A AM1
I15
Ignition SW
120A ALT
(1MZ–FE)
100A ALT
(2AZ–FE, 1AZ–FE)
FL MAIN
3. 0W
Battery
20A RAD NO. 1
30A D. C. C


29 CAMRY (Cont' d)
TOYOTA Navigation System, Radio and Player
5
6
7
8
Combination Meter
<32–4>
V–W
SPD
Parking Brake SW
<17–4><18–4>
R–W
PKB
R 6(A), R 7(B), R 8(C), R 9(D), R20(E), R21(F)
Radio and Player with Display
TX3–
W–B
Instrument Panel
Brace RH
BR
RR–
RR+
RL–
RL+
W
R
Y
B
IM1
IM2
R16
Rear Speaker RH
R15
Rear Speaker LH
FR–(LHD)
FL–(RHD)
FR+(LHD)
FL+(RHD)
L(LHD)
V(RHD)
LG(LHD)
P(RHD)
J3
Junction
Connector
IL2
IB2
T 7(LHD)
Tweeter RH
T 6(RHD)
Tweeter LH
F11(LHD)
Front Door
Speaker RH
F10(RHD)
Front Door
Speaker LH
W(LHD)
R(RHD)
B(LHD)
W(RHD)
UTX+
UTX–
TX–
TX+