
Position of Parts in Engine Compartment

[LHD : 1MZ–FE]

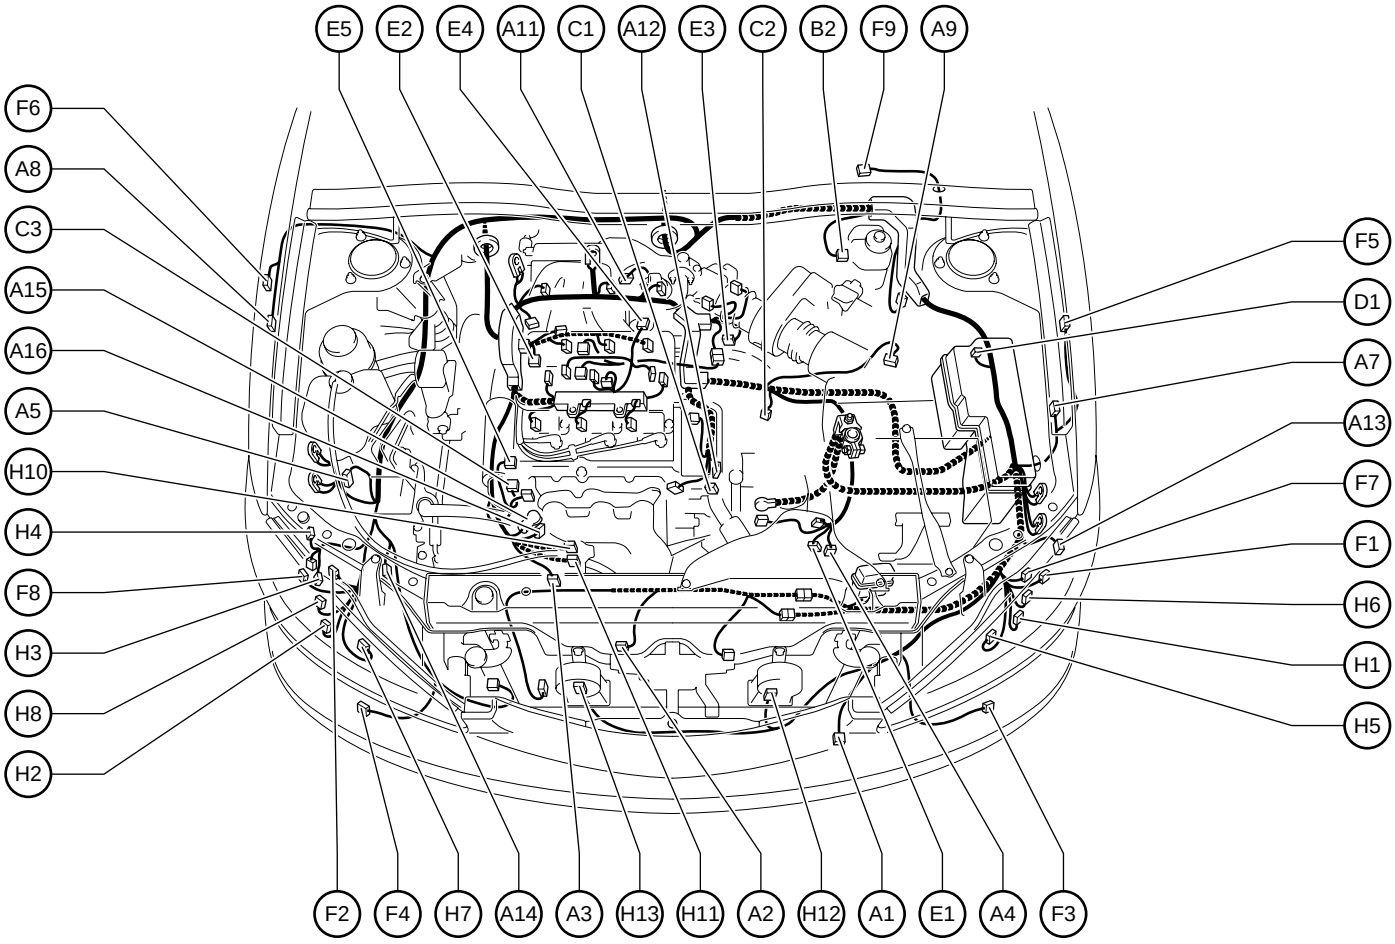

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Lock Sensor
A/C Magnetic Clutch
A 4 A/T Indicator Light SW
Back–Up Light SW
Neutral Start SW
A 5 ABS & BA & TRC & VSC Actuator
A 7 ABS Speed Sensor Front LH
A 8 ABS Speed Sensor Front RH
A 9 Air Flow Meter
A 11 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A 12 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
A 13 Airbag Sensor Front LH
A 14 Airbag Sensor Front RH
A 15 Alternator
A 16 Alternator

B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Counter Gear Speed Sensor
C 3 Crankshaft Position Sensor

D 1 Diode (A/C No.1)

E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 3 EGR Gas Temp. Sensor
E 4 EGR Valve Position Sensor
E 5 Engine Oil Level Sensor

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Cleaner Motor
H 4 Headlight Cleaner Relay
H 5 Headlight LH (High)
H 6 Headlight LH (Low)
H 7 Headlight RH (High)
H 8 Headlight RH (Low)
H 10 Heated Oxygen Sensor (Bank 1 Sensor 1)
H 11 Heated Oxygen Sensor (Bank 2 Sensor 1)
H 12 Horn (High)
H 13 Horn (Low)