
Position of Parts in Seat

[RHD]

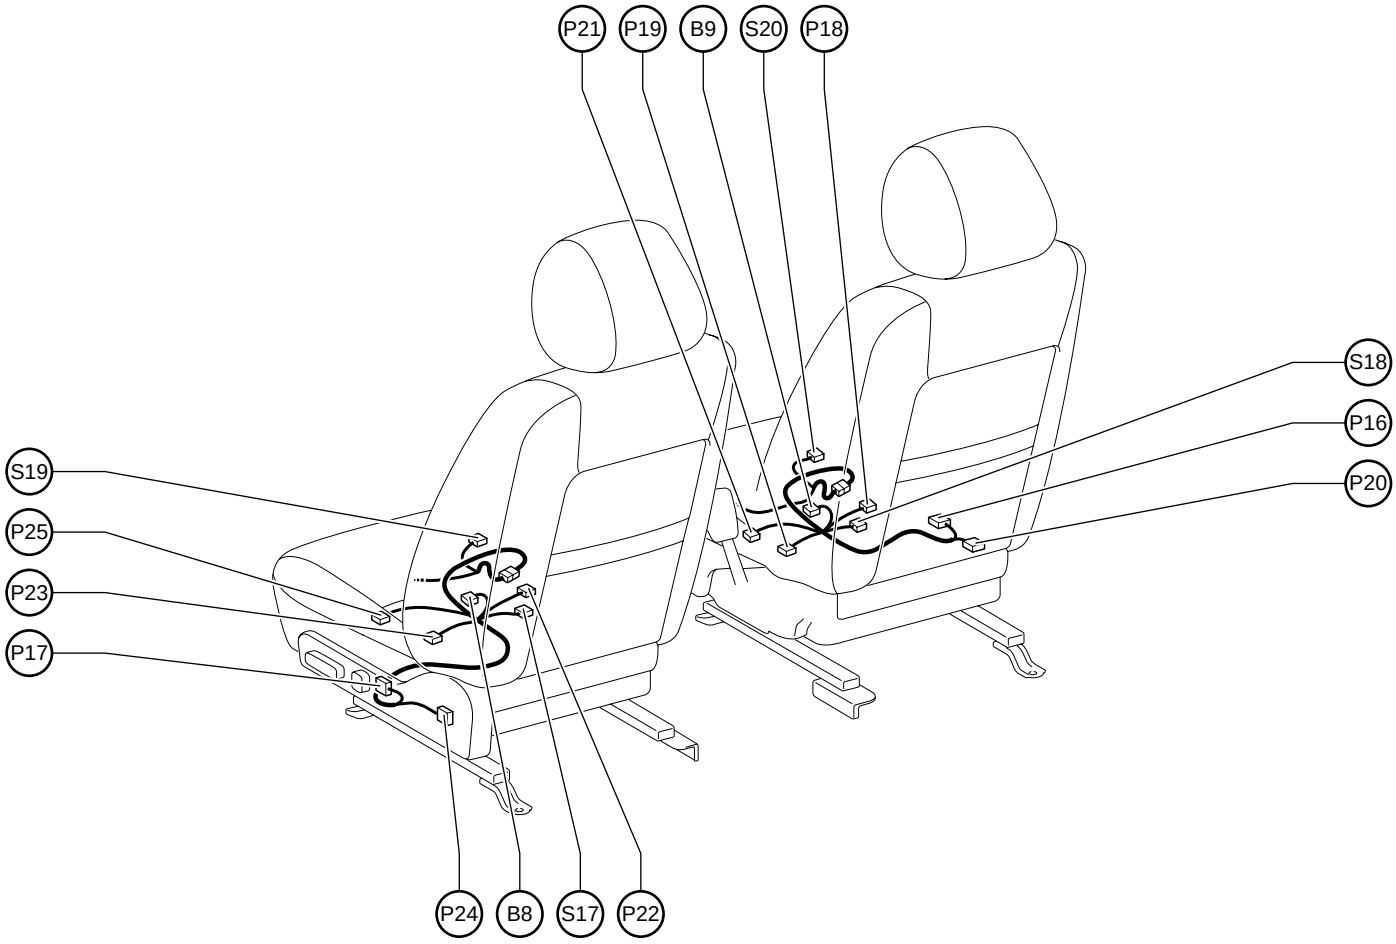

B 8 Buckle SW LH
Occupant Detection Sensor
B 9 Buckle SW RH

P16 Power Seat Control SW (Driver's Seat)
P17 Power Seat Control SW (Front Passenger's Seat)
P18 Power Seat Motor (Driver's Seat Front Vertical Control)
P19 Power Seat Motor (Driver's Seat Lifter Control)
P20 Power Seat Motor (Driver's Seat Reclining Control)
P21 Power Seat Motor (Driver's Seat Slide Control)
P22 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P23 Power Seat Motor
(Front Passenger's Seat Lifter Control)
P24 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P25 Power Seat Motor
(Front Passenger's Seat Slide Control)

S17 Seat Heater LH
S18 Seat Heater RH
S19 Side Airbag Squib LH
S20 Side Airbag Squib RH