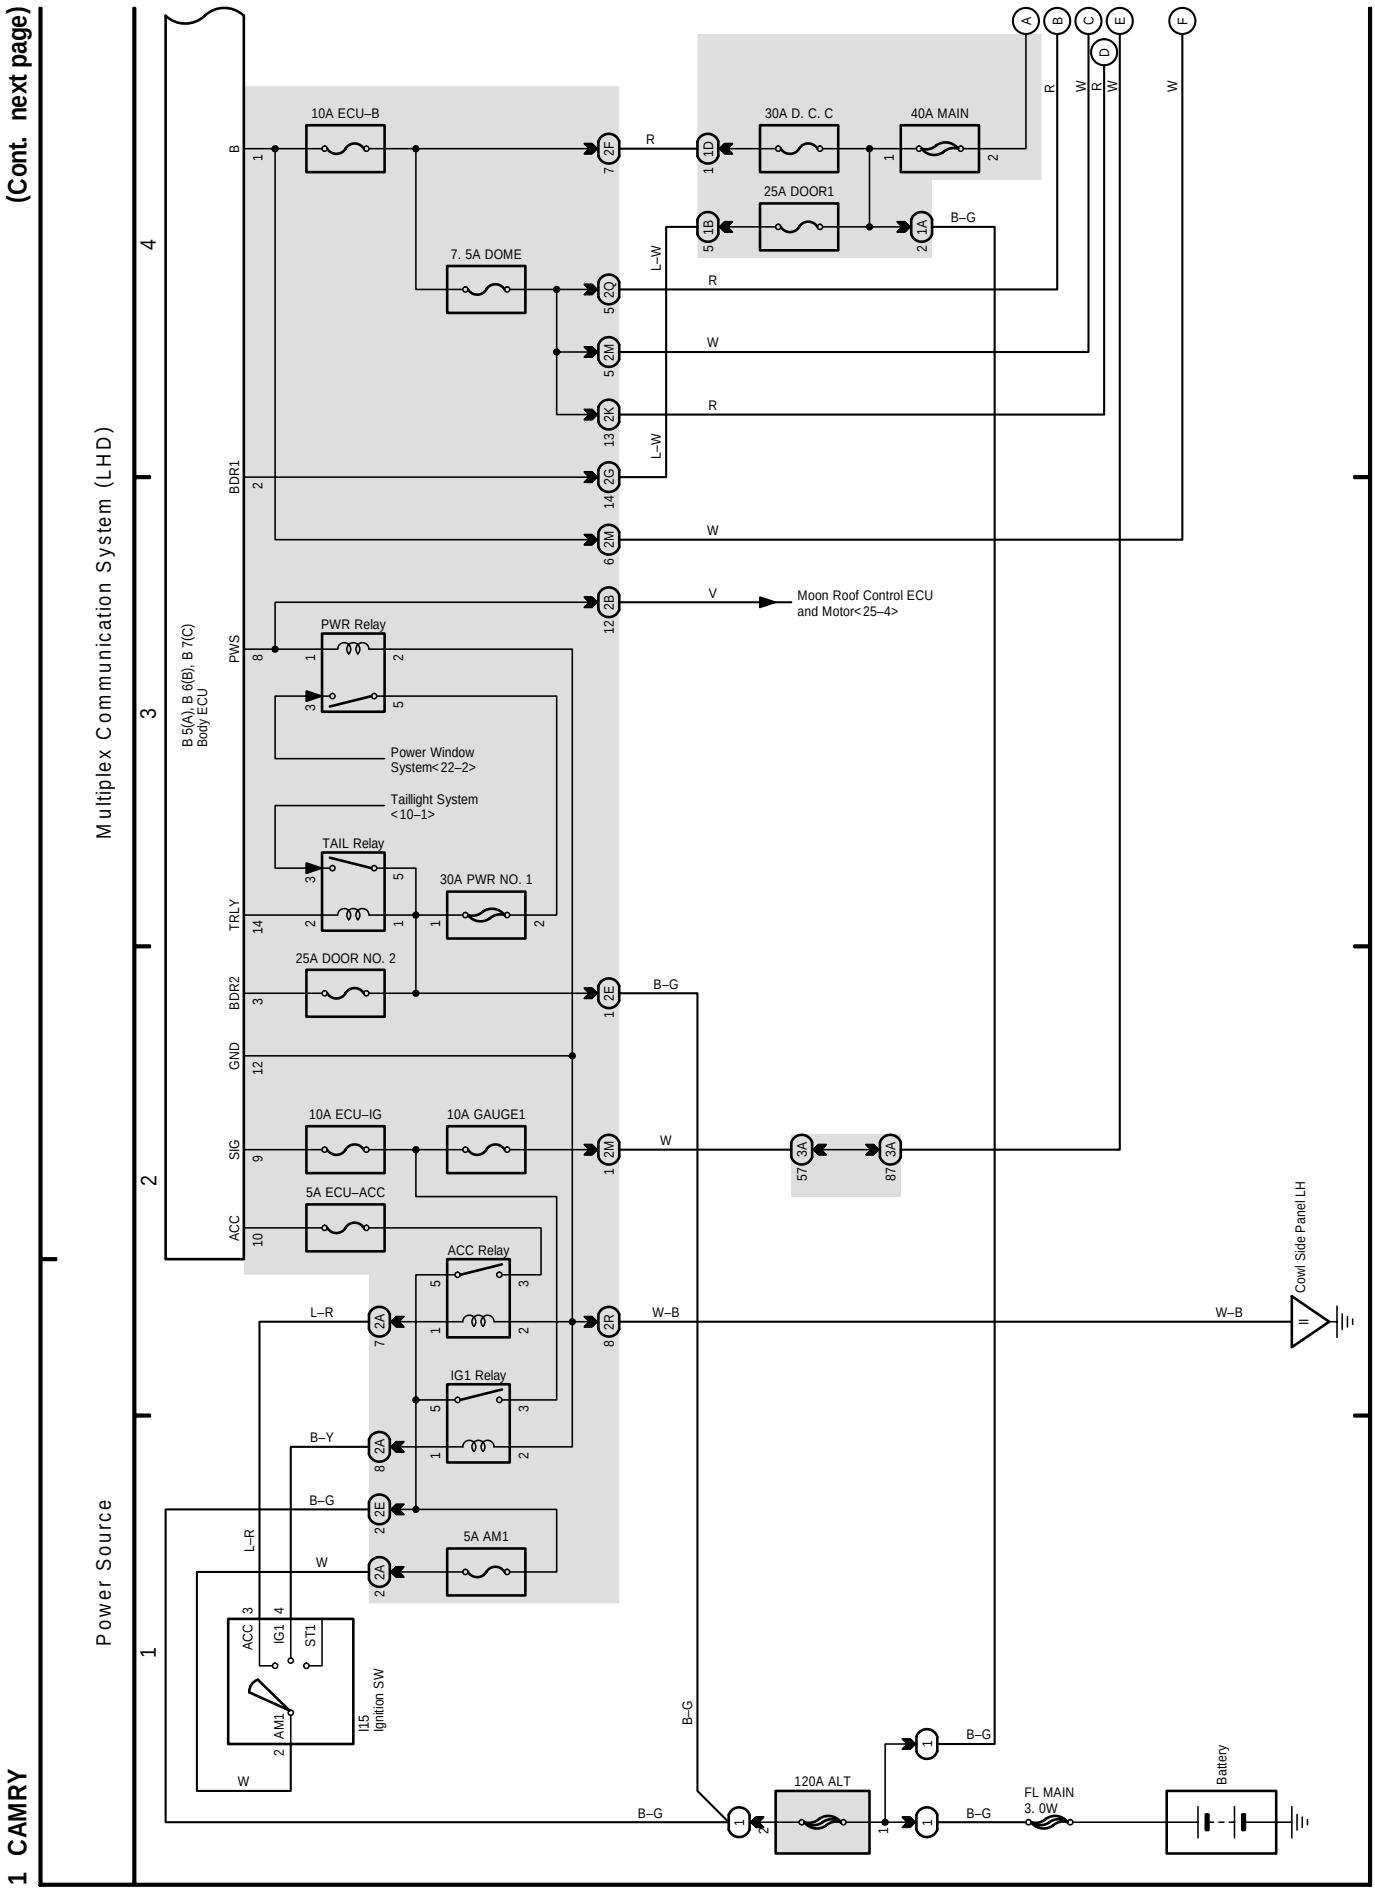
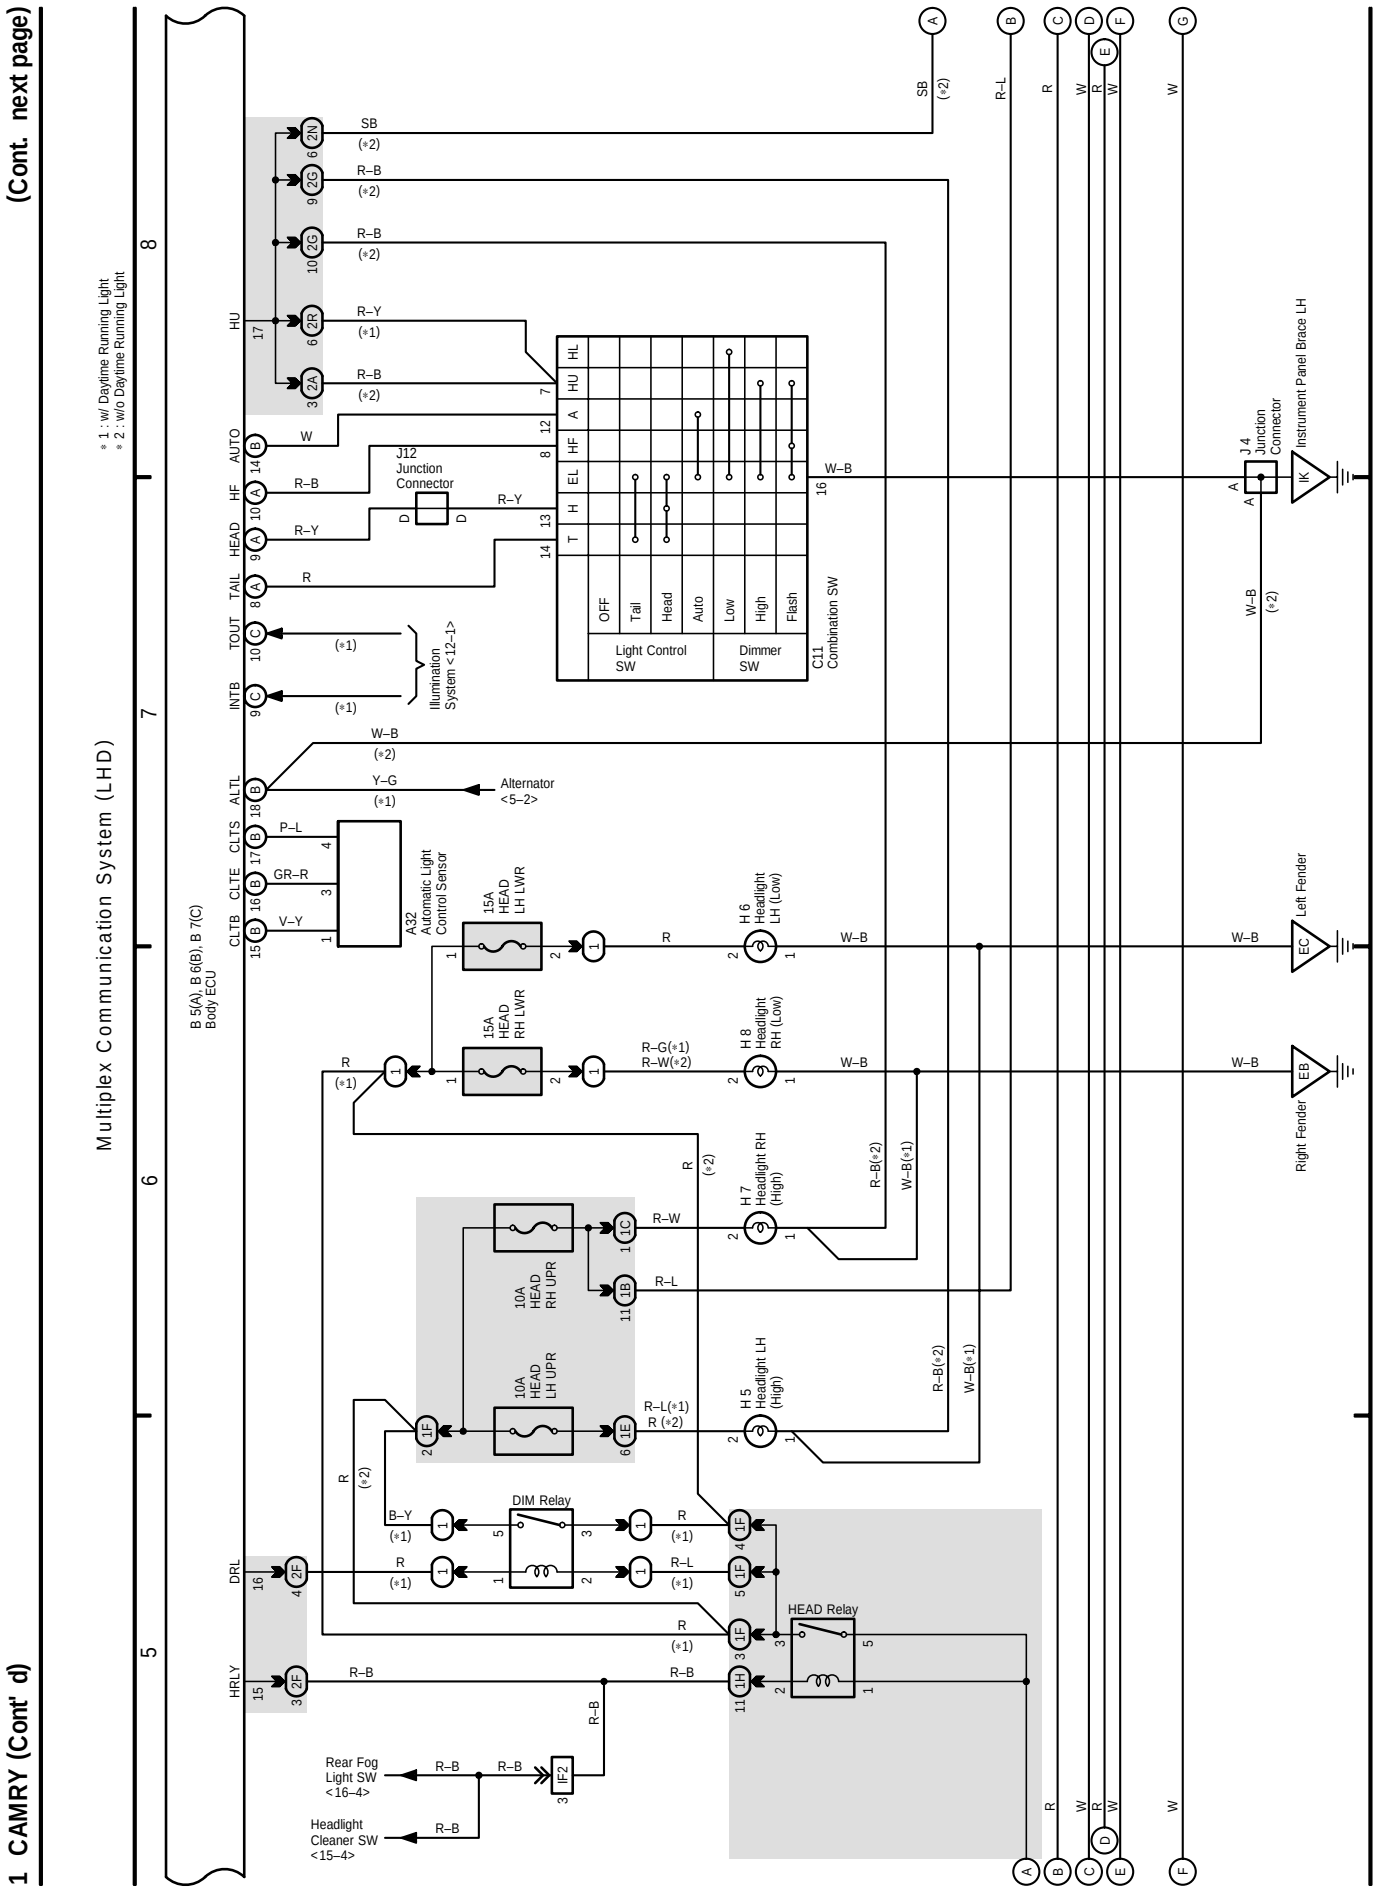
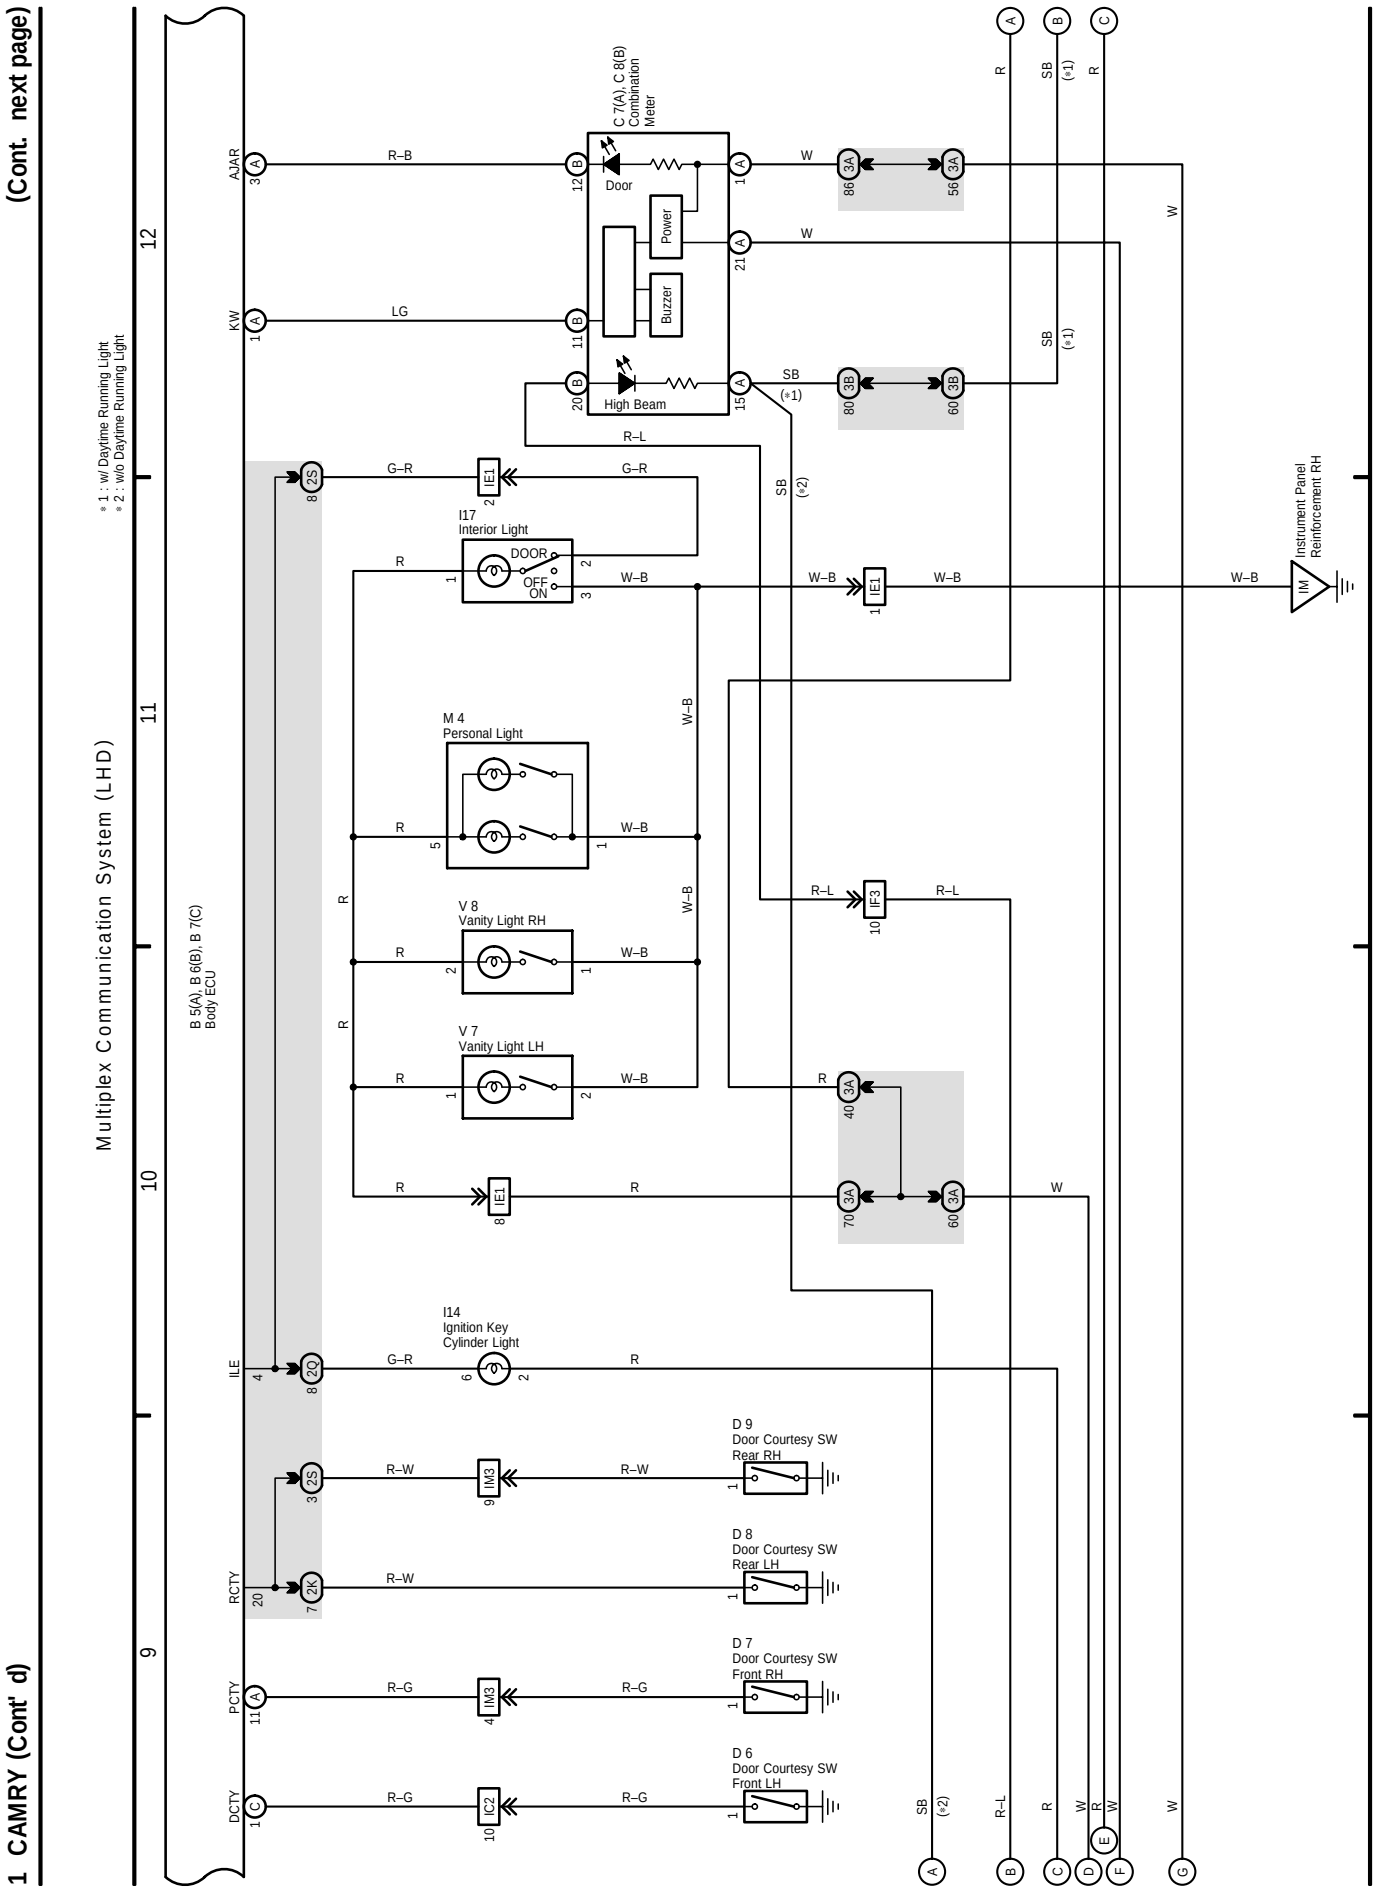
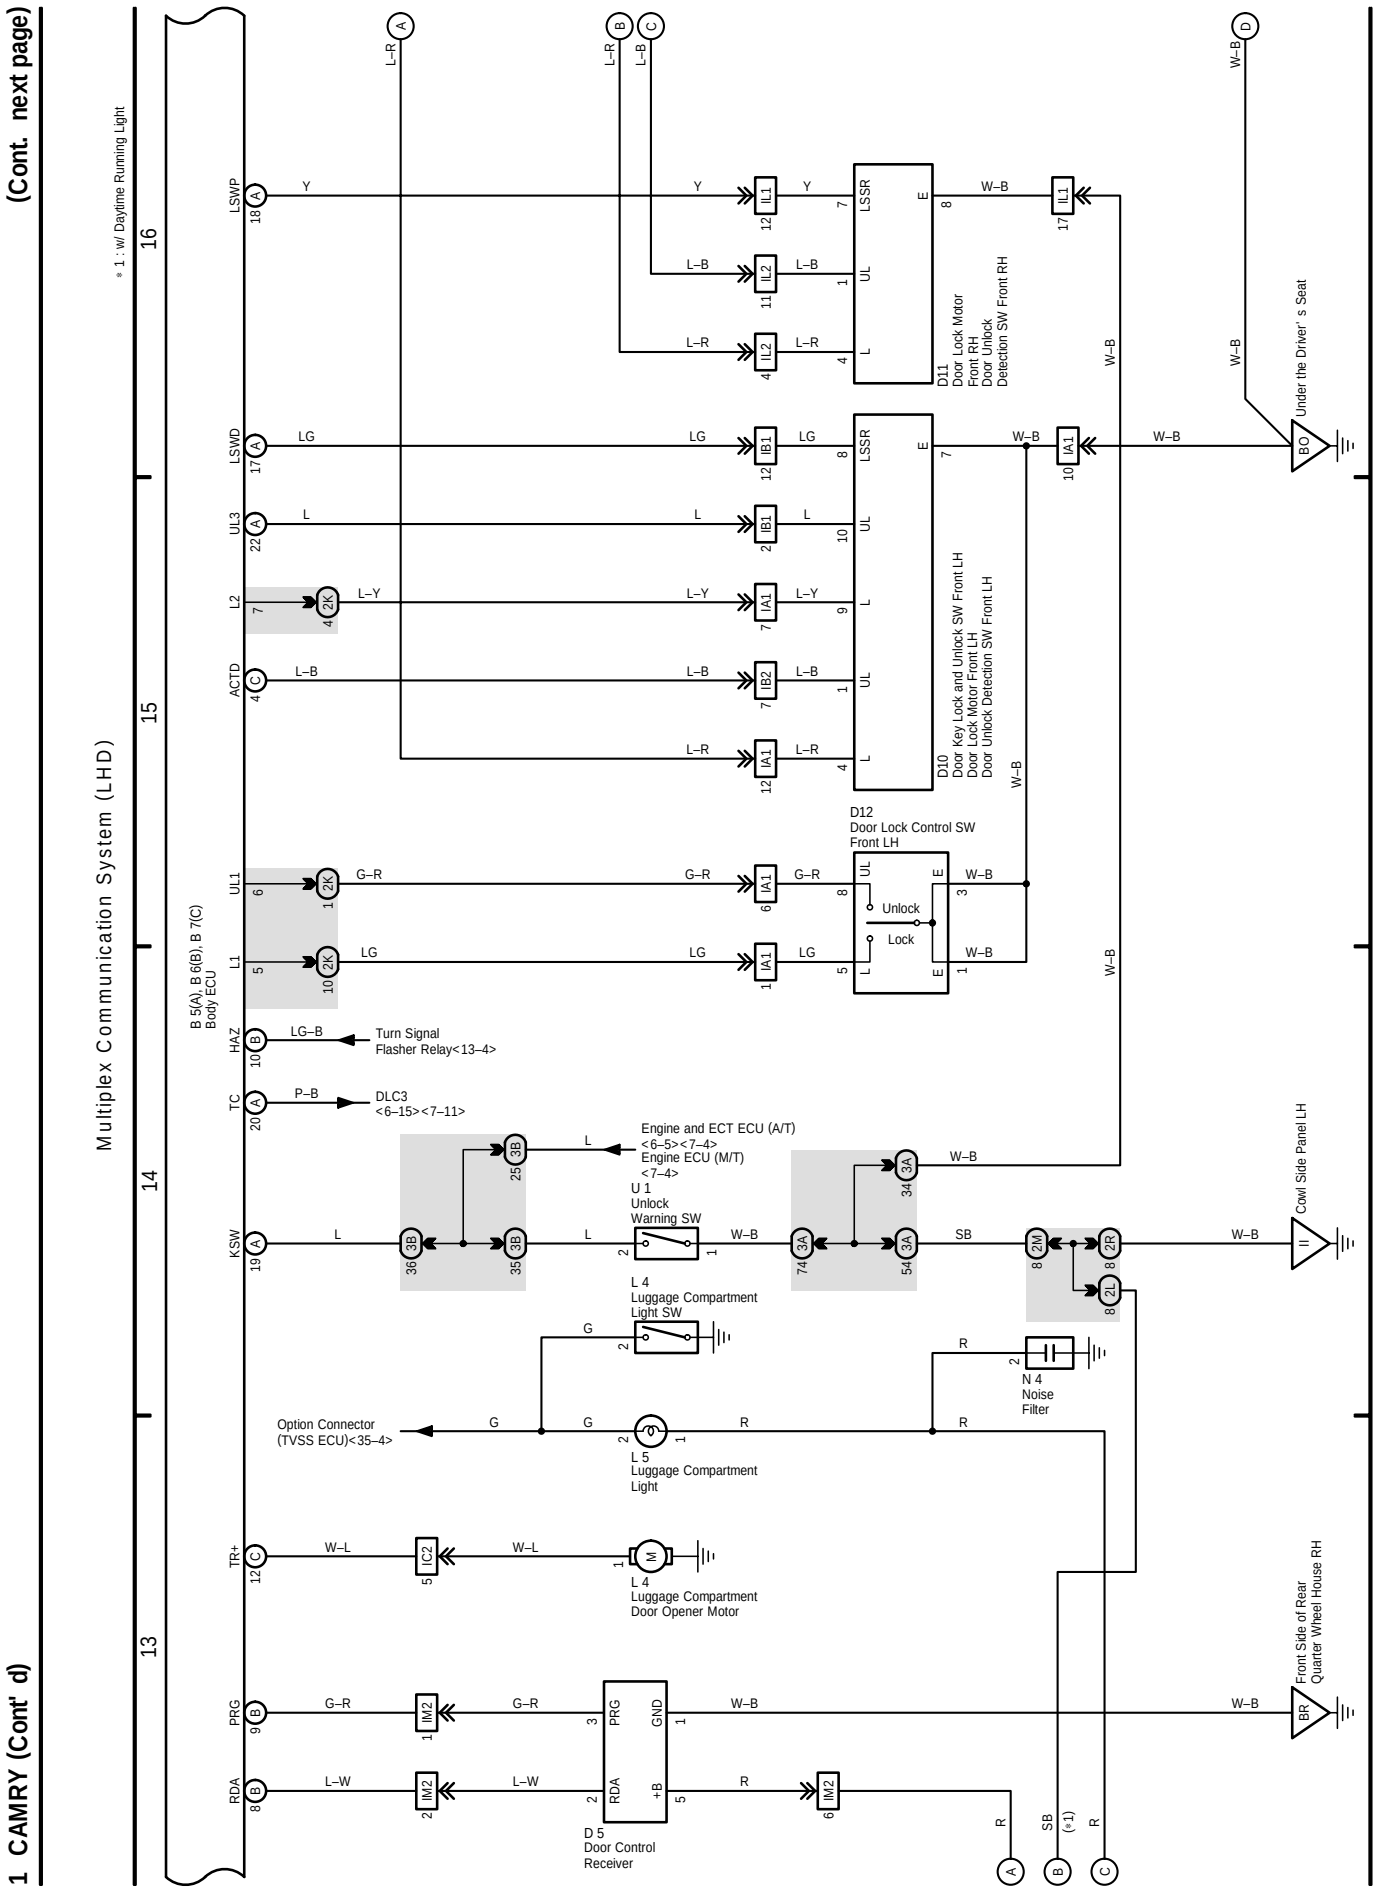

(Cont. next page)
Multiplex Communication System (LHD)
Power Source
1 CAMRY
B 5(A), B 6(B), B 7(C)
Body ECU
10A ECU–B
7. 5A DOME
30A D. C. C
40A MAIN
25A DOOR1
PWR Relay
Power Window System< 22–2>
Taillight System <10–1>
TAIL Relay
30A PWR NO. 1
25A DOOR NO. 2
10A ECU–IG
10A GAUGE1
5A ECU–ACC
ACC Relay
IG1 Relay
5A AM1
I15 Ignition SW
Moon Roof Control ECU and Motor< 25–4>
Cowl Side Panel LH
120A ALT
FL MAIN 3. 0W
Battery
B
BDR1
PWS
TRLY
BDR2
GND
SIG
ACC
L–W
L–R
B–Y
B–G
W–B


1 CAMRY (Cont' d)
(Cont. next page)
Multiplex Communication System (LHD)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
B 5(A), B 6(B), B 7(C)
Body ECU
Automatic Light Control Sensor
A32
Light Control SW
Dimmer SW
C11
Combination SW
Illumination System <12–1>
Alternator <5–2>
J12 Junction Connector
J4 Junction Connector
Instrument Panel Brace LH
Left Fender
Right Fender
Headlight LH (Low)
Headlight RH (Low)
Headlight RH (High)
Headlight LH (High)
15A HEAD LH LWR
15A HEAD RH LWR
10A HEAD RH UPR
10A HEAD LH UPR
DIM Relay
HEAD Relay
Rear Fog Light SW <16–4>
Headlight Cleaner SW <15–4>
CAMRY (EWD559E)


1 CAMRY (Cont' d)
(Cont. next page)
Multiplex Communication System (LHD)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
B 5(A), B 6(B), B 7(C)
Body ECU
C 7(A), C 8(B)
Combination Meter
Door
Power
Buzzer
High Beam
AJAR
KW
RCTY
PCTY
DCTY
ILE
I17
Interior Light
DOOR
OFF
ON
M 4
Personal Light
V 8
Vanity Light RH
V 7
Vanity Light LH
I14
Ignition Key
Cylinder Light
D 9
Door Courtesy SW
Rear RH
D 8
Door Courtesy SW
Rear LH
D 7
Door Courtesy SW
Front RH
D 6
Door Courtesy SW
Front LH
Instrument Panel
Reinforcement RH
IE1
IF3
IM3
IC2
2S
2Q
2K
3A
3B
IM
R–B
LG
G–R
R–L
R–W
R–G
W–B
R
W
SB
(*1)
(*2)


1 CAMRY (Cont' d)
(Cont. next page)
* 1 : w/ Daytime Running Light
Multiplex Communication System (LHD)
B 5(A), B 6(B), B 7(C)
Body ECU
D10
Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
D11
Door Lock Motor
Front RH
Door Unlock
Detection SW Front RH
D12
Door Lock Control SW
Front LH
Unlock
Lock
Under the Driver' s Seat
Cowl Side Panel LH
Front Side of Rear
Quarter Wheel House RH
Turn Signal
Flasher Relay<13–4>
DLC3
<6–15><7–11>
Engine and ECT ECU (A/T)
<6–5><7–4>
Engine ECU (M/T)
<7–4>
U 1
Unlock
Warning SW
L 4
Luggage Compartment
Light SW
N 4
Noise
Filter
Option Connector
(TVSS ECU)<35–4>
L 5
Luggage Compartment
Light
L 4
Luggage Compartment
Door Opener Motor
D 5
Door Control
Receiver
LSWP
LSWD
UL3
L2
ACTD
UL1
L1
HAZ
TC
KSW
TR+
PRG
RDA
LSSR
GND
+B
(+1)
SB
W–B
L–R
L–B
L–Y
G–R
L–W
W–L
LG–B
P–B
Y
LG
L
G
R

1 CAMRY (Cont' d)

