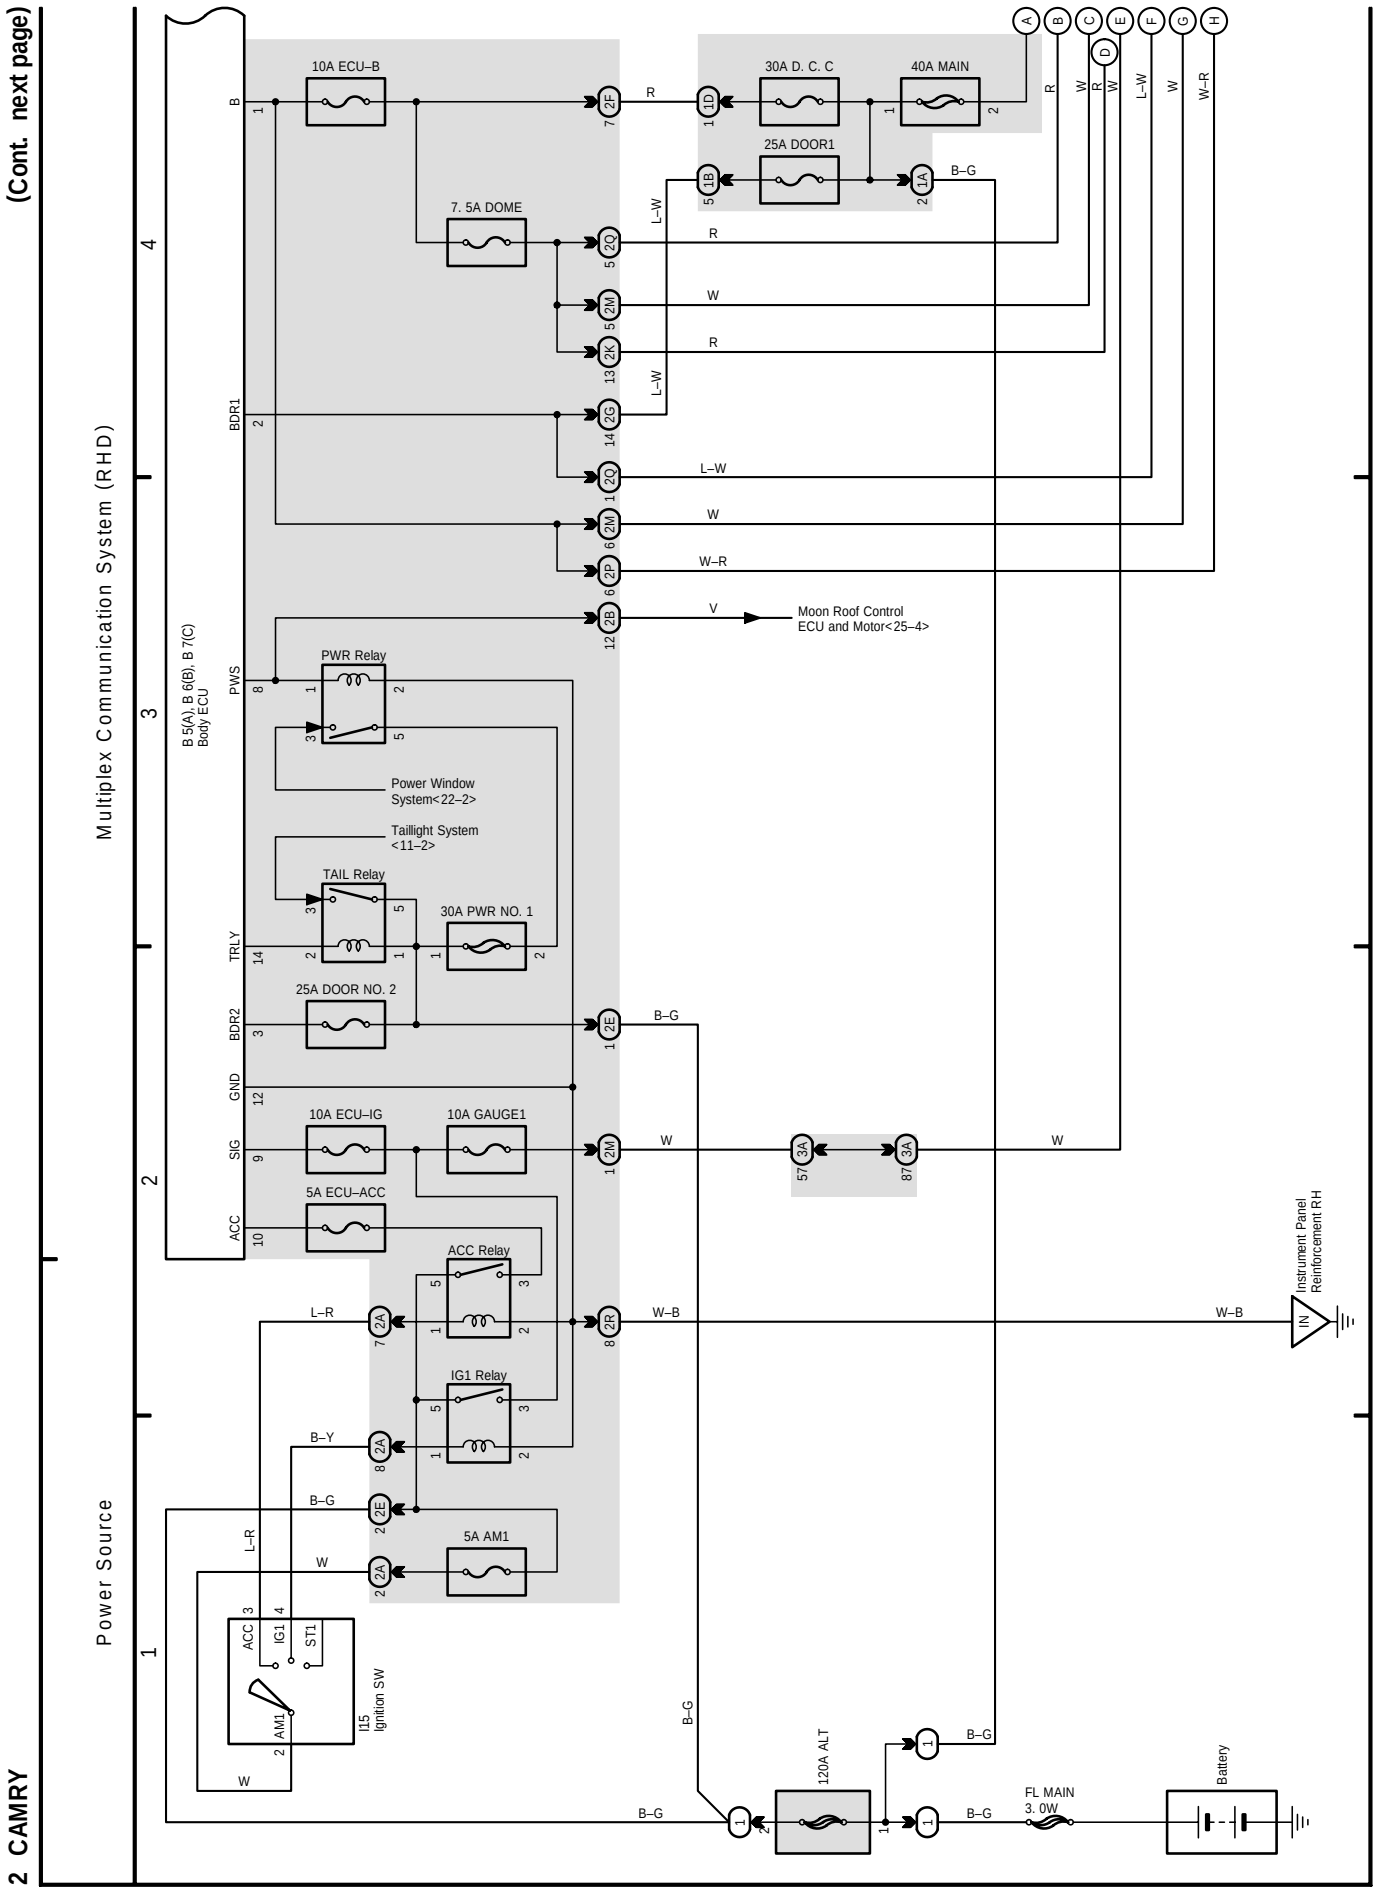
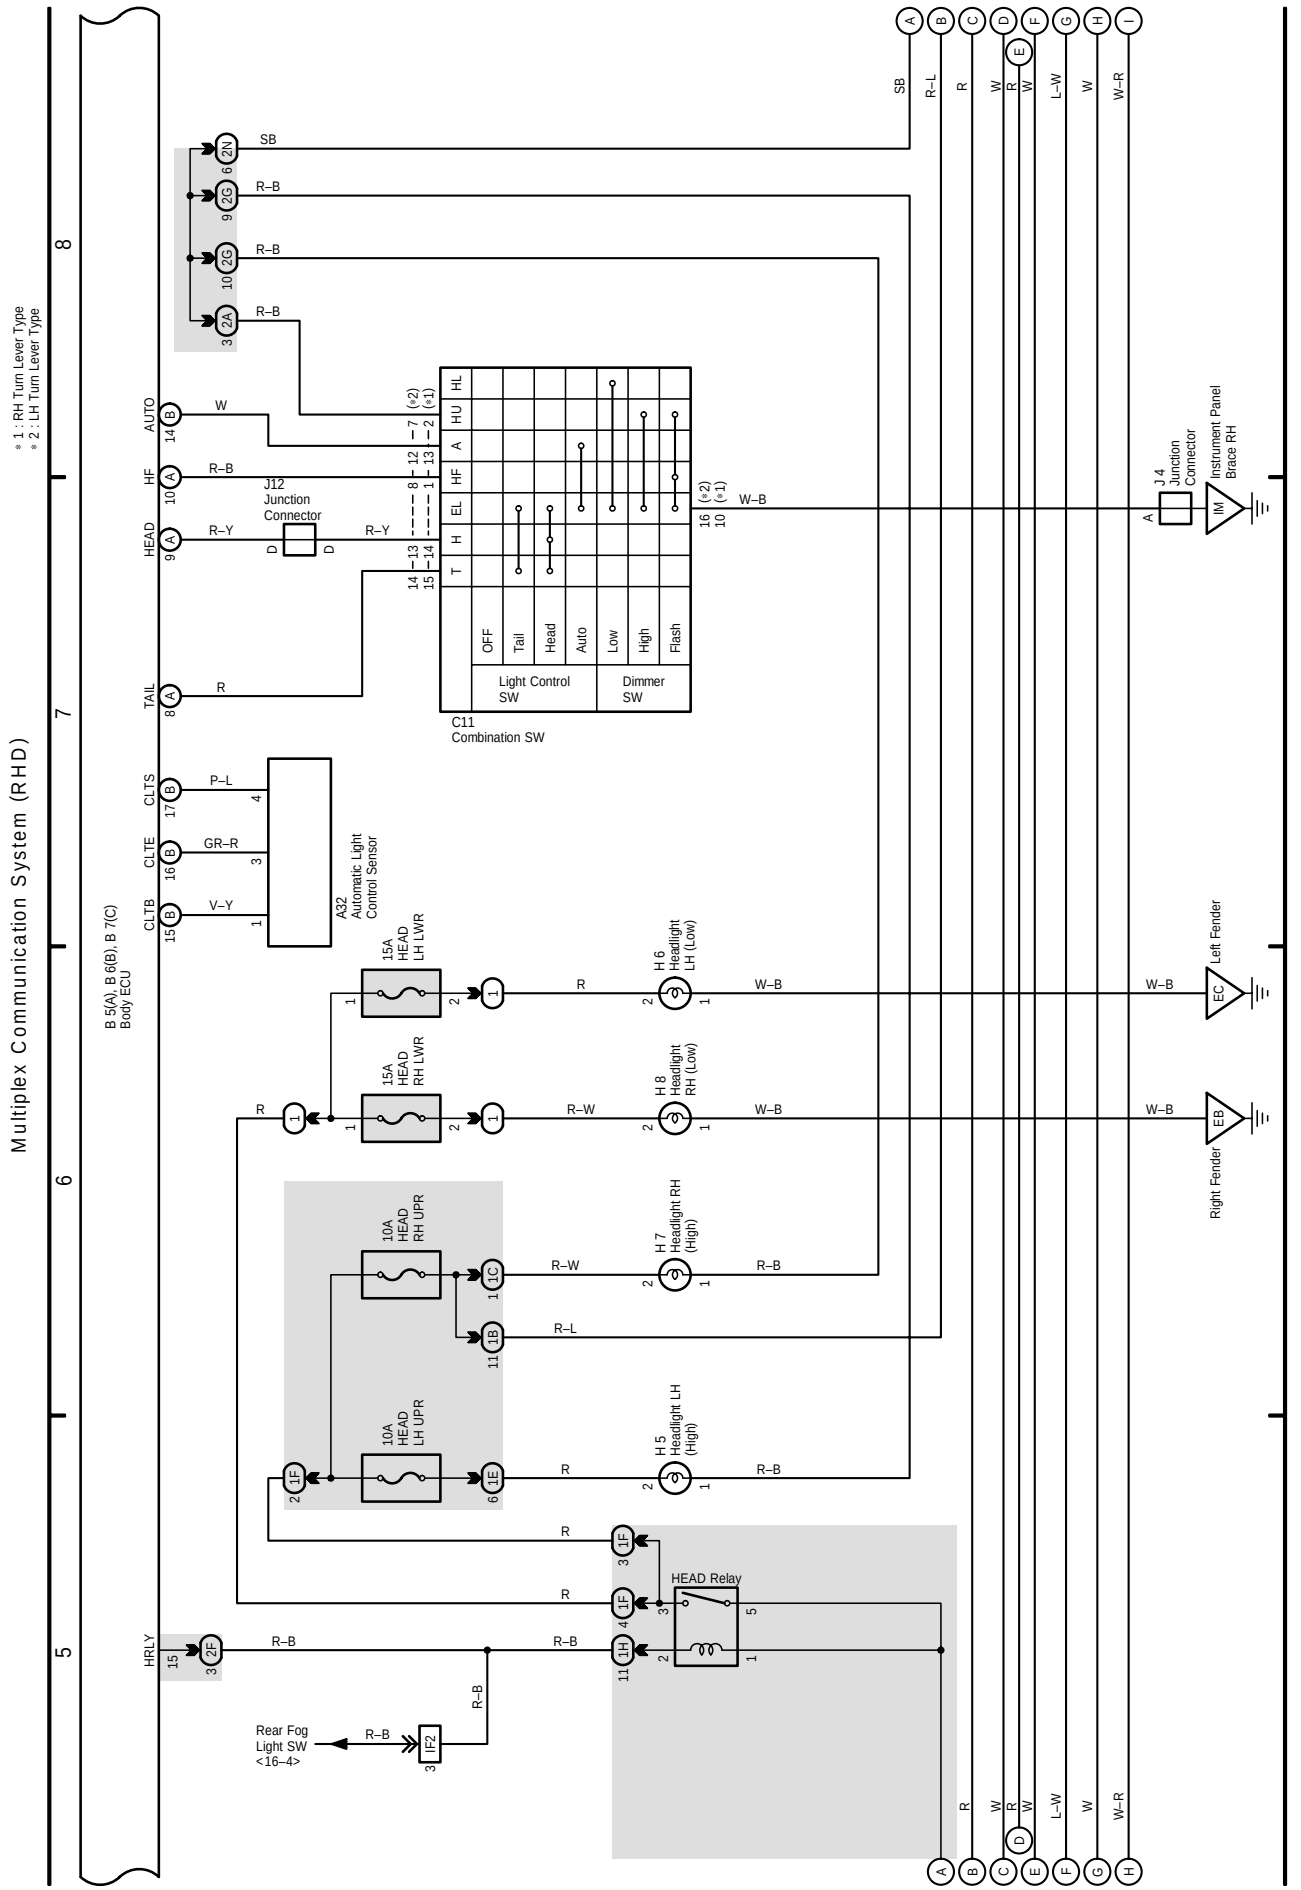
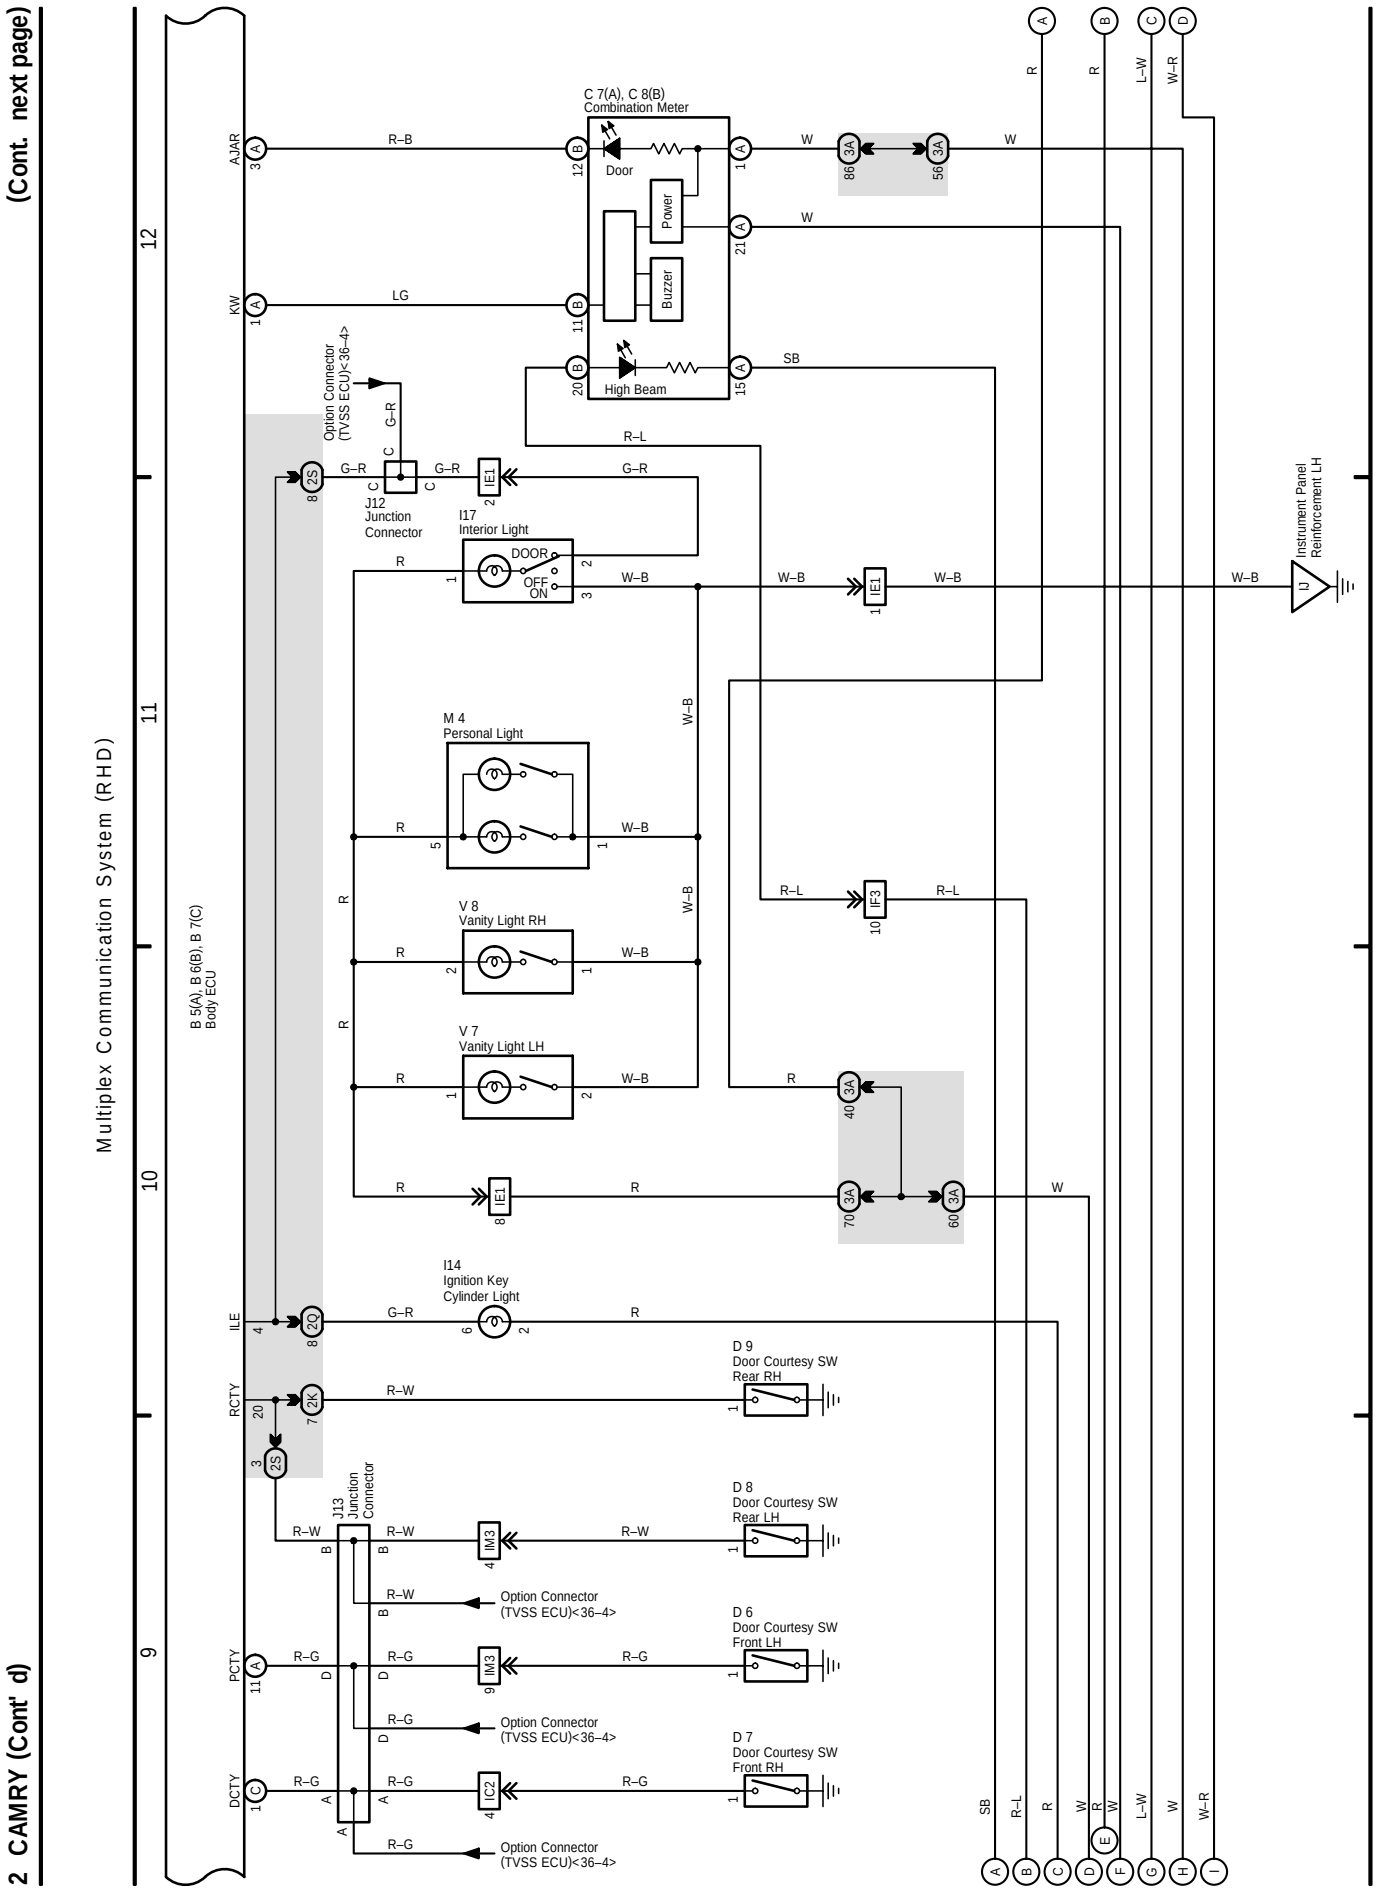
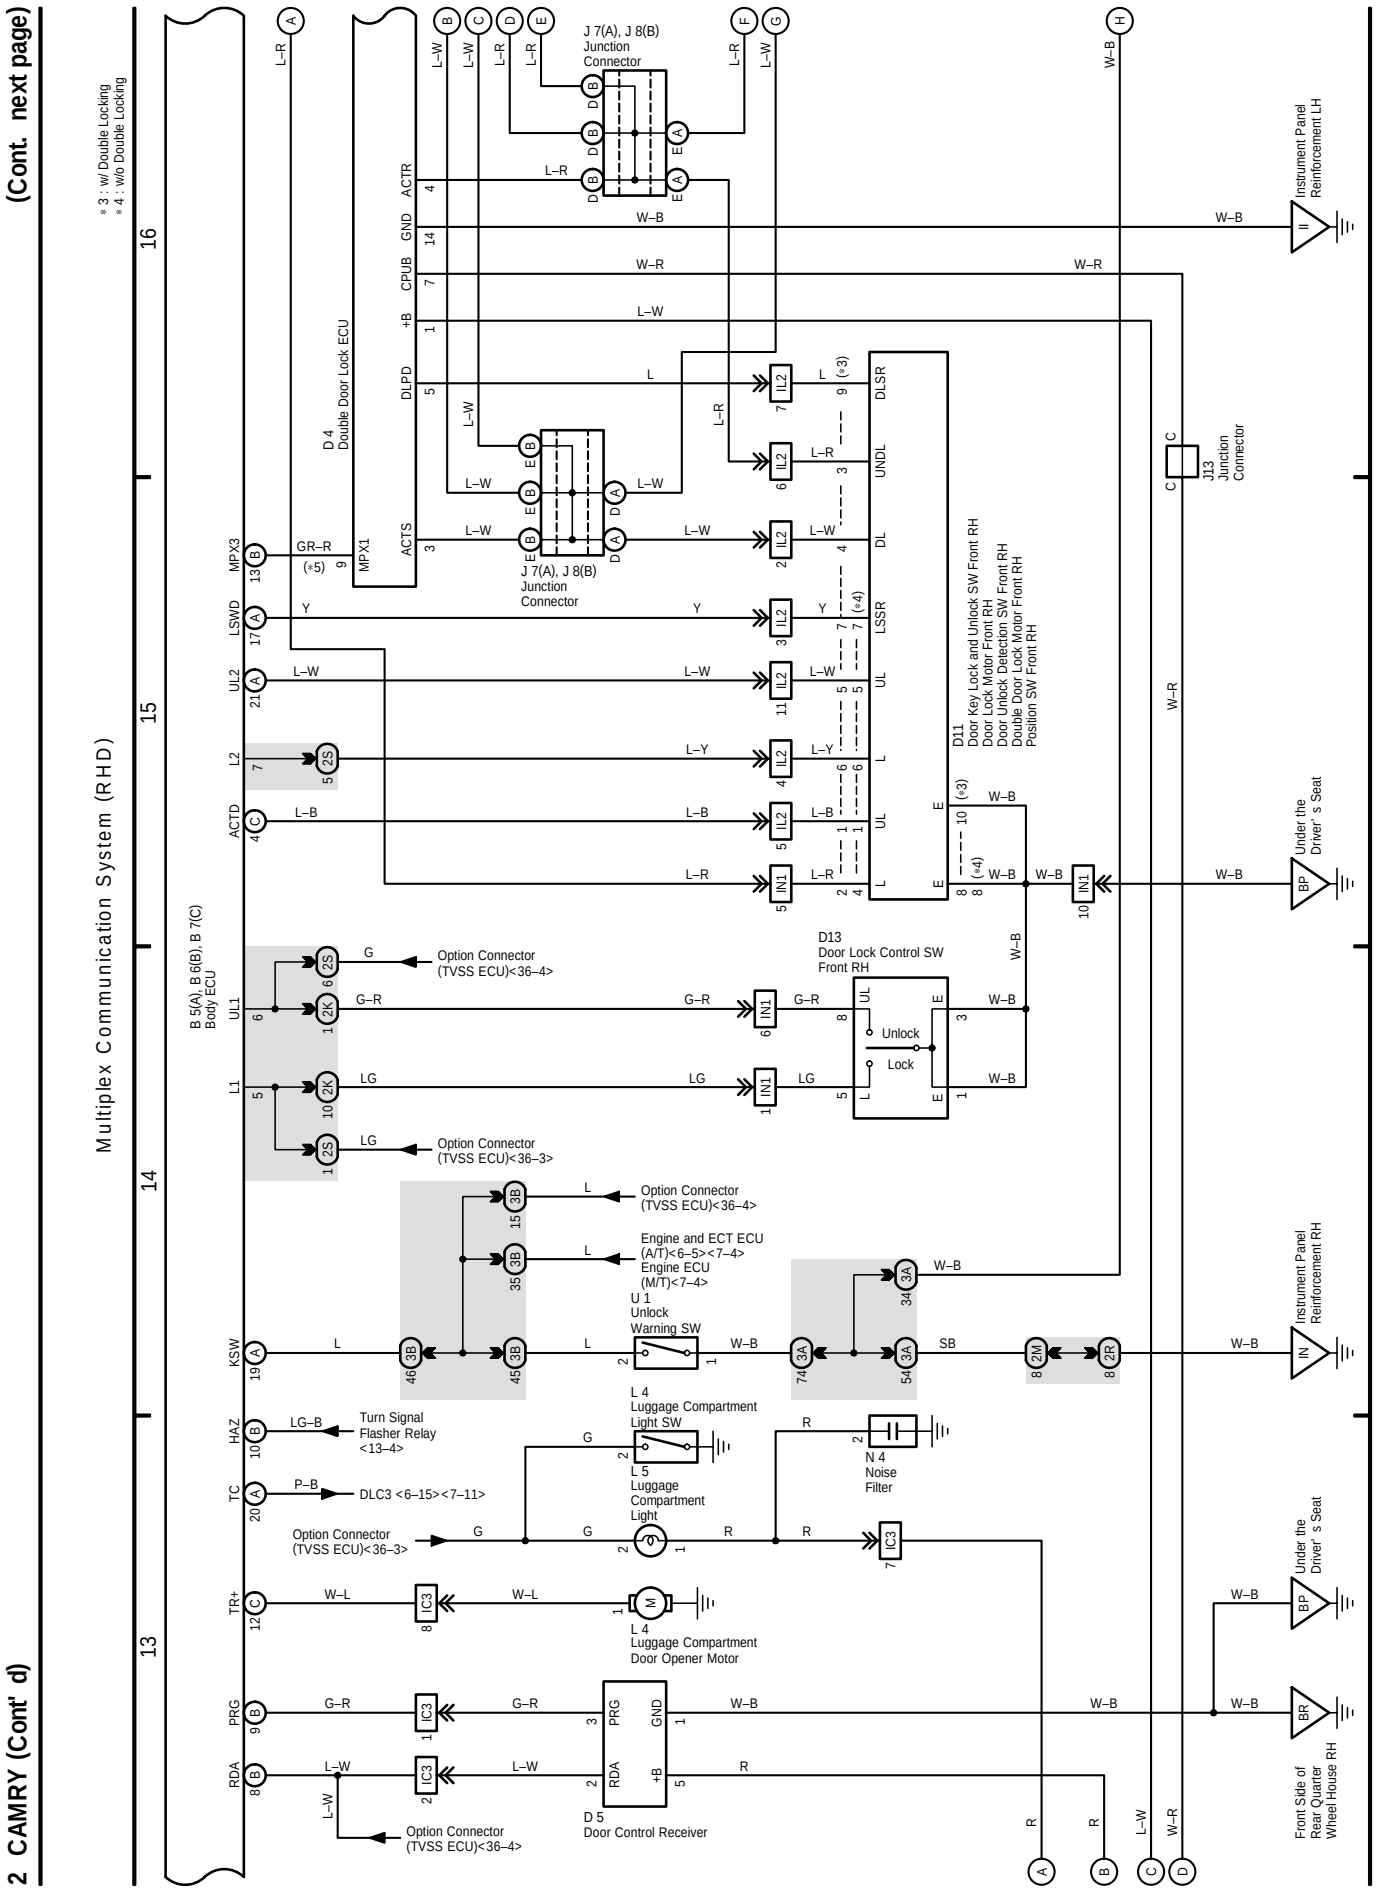

(Cont. next page)
Multiplex Communication System (RHD)
Power Source
2 CAMRY
10A ECU–B
30A D. C. C
40A MAIN
25A DOOR1
7. 5A DOME
PWR Relay
Power Window System<22–2>
Taillight System <11–2>
TAIL Relay
30A PWR NO. 1
25A DOOR NO. 2
10A ECU–IG
10A GAUGE1
5A ECU–ACC
ACC Relay
IG1 Relay
5A AM1
I15 Ignition SW
120A ALT
FL MAIN 3. 0W
Battery
Moon Roof Control ECU and Motor<25–4>
Instrument Panel Reinforcement RH
B 5(A), B 6(B), B 7(C) Body ECU

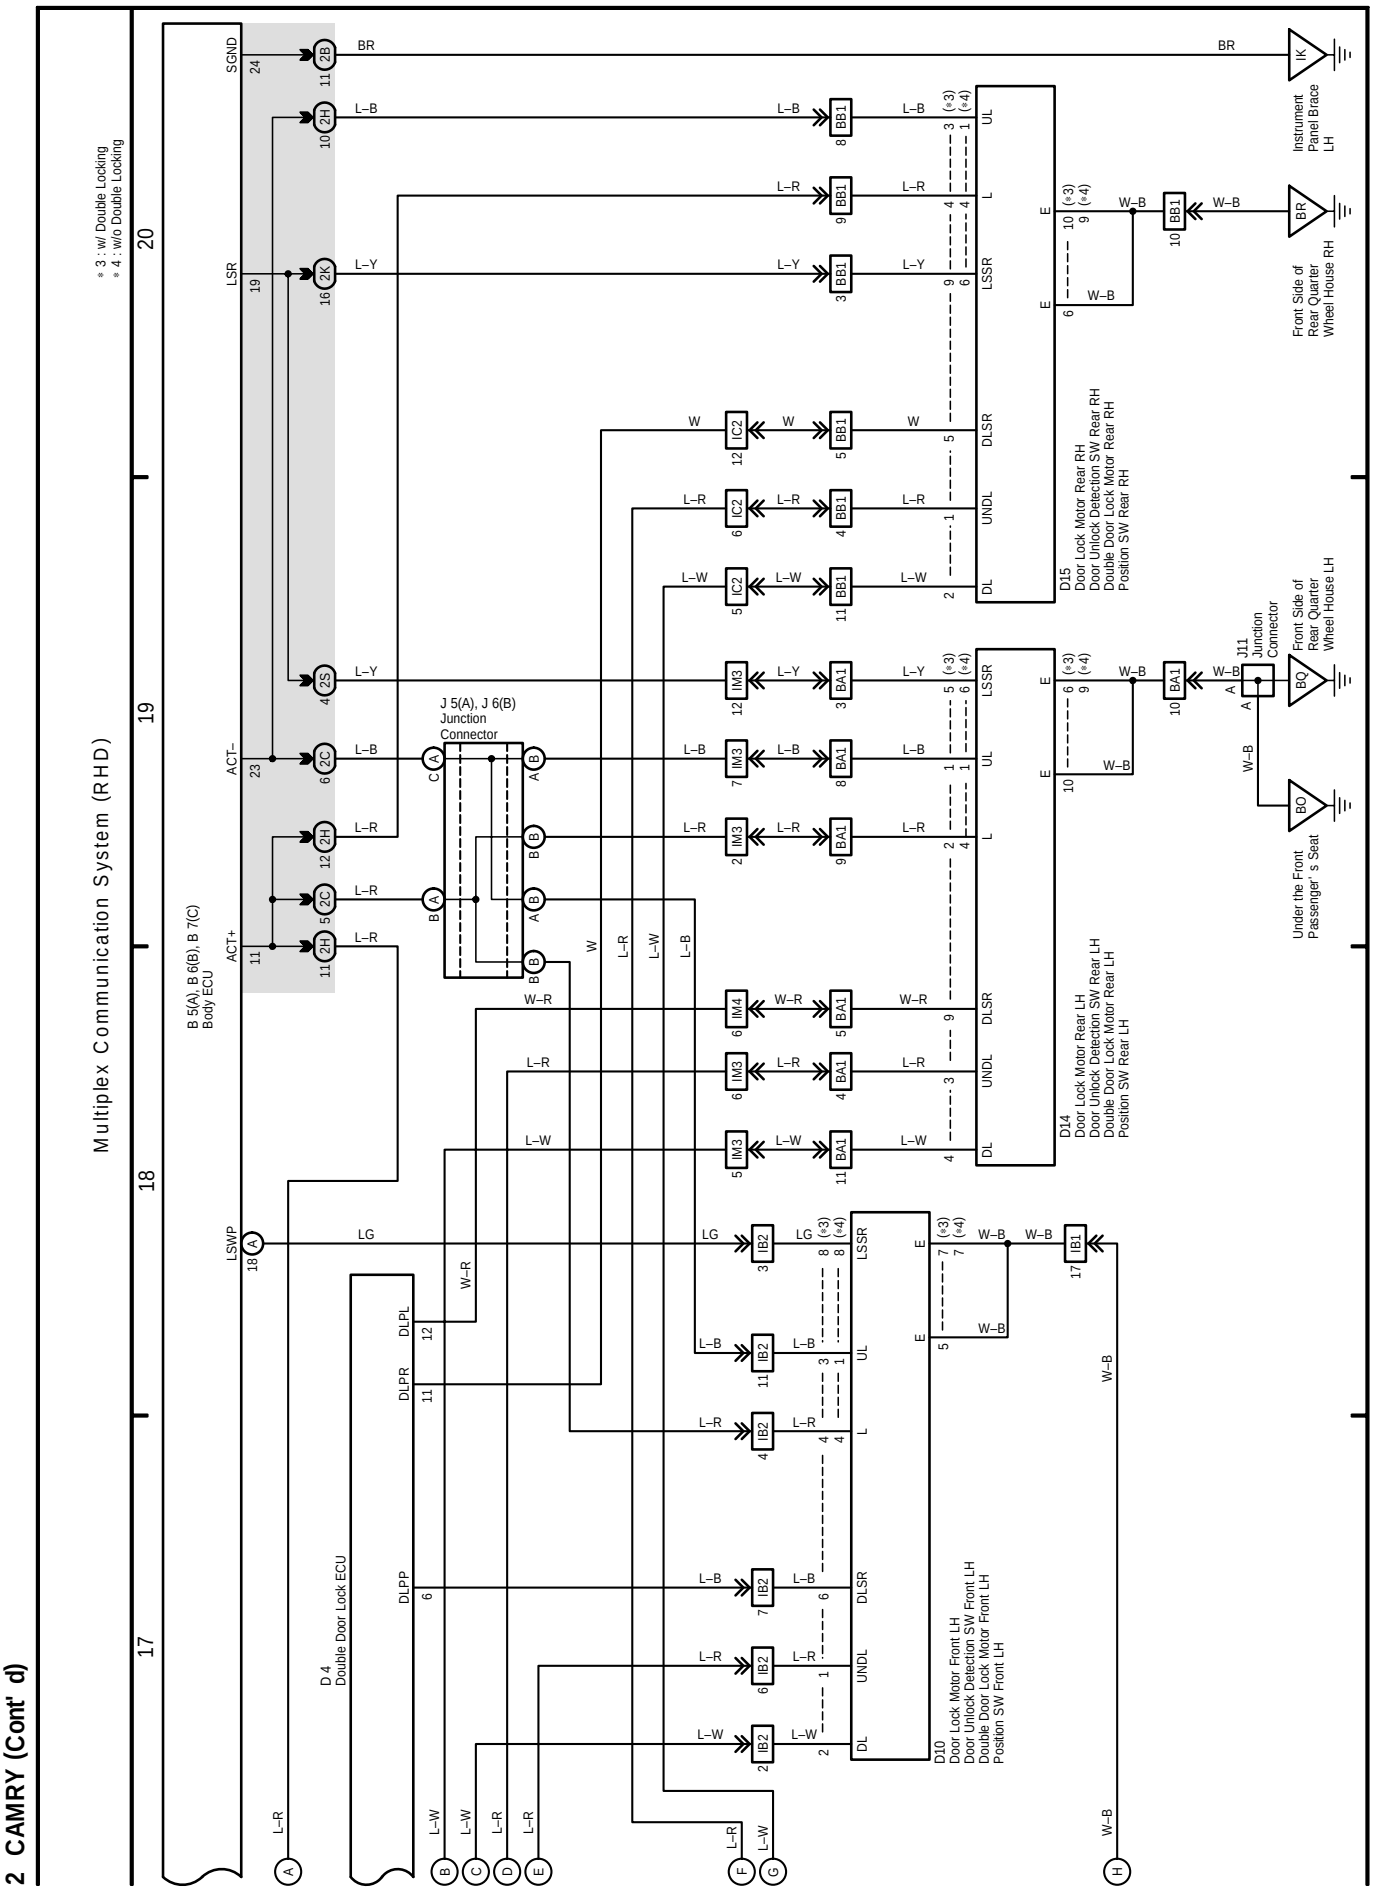
2 CAMRY (Cont' d)

(Cont. next page)




(Cont. next page)
2 CAMRY (Cont' d)
Multiplex Communication System (RHD)
B 5(A), B 6(B), B 7(C)
Body ECU
C 7(A), C 8(B)
Combination Meter
Door
Power
Buzzer
High Beam
Option Connector
(TVSS ECU)<36–4>
J12
Junction
Connector
I17
Interior Light
DOOR
OFF
ON
M 4
Personal Light
V 8
Vanity Light RH
V 7
Vanity Light LH
I14
Ignition Key
Cylinder Light
J13
Junction
Connector
D 9
Door Courtesy SW
Rear RH
D 8
Door Courtesy SW
Rear LH
D 6
Door Courtesy SW
Front LH
D 7
Door Courtesy SW
Front RH
Instrument Panel
Reinforcement LH
AJAR
KW
ILE
RCTY
PCTY
DCTY
R–B
LG
G–R
W
W–B
R–L
R–W
R–G
L–W
W–R
SB
R


2 CAMRY (Cont' d)
(Cont. next page)
Multiplex Communication System (RHD)
*3 : w/ Double Locking
*4 : w/o Double Locking
D 4
Double Door Lock ECU
MPX1
MPX2
ACTR
GND
CPUB
+B
DLPD
ACTS
J 7(A), J 8(B)
Junction
Connector
J13
Junction
Connector
D11
Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
Double Door Lock Motor Front RH
Position SW Front RH
DLSR
UNDL
DL
LSSR
UL
L
D13
Door Lock Control SW
Front RH
Unlock
Lock
B 5(A), B 6(B), B 7(C)
Body ECU
Option Connector
(TVSS ECU)<36–4>
Option Connector
(TVSS ECU)<36–3>
Engine and ECT ECU
(A/T)<6–5><7–4>
Engine ECU
(M/T)<7–4>
U 1
Unlock
Warning SW
L 4
Luggage Compartment
Light SW
L 5
Luggage
Compartment
Light
N 4
Noise
Filter
Turn Signal
Flasher Relay
<13–4>
DLC3 <6–15><7–11>
L 4
Luggage Compartment
Door Opener Motor
D 5
Door Control Receiver
Instrument Panel
Reinforcement LH
Instrument Panel
Reinforcement RH
Under the
Driver' s Seat
Front Side of
Rear Quarter
Wheel House RH


2 CAMRY (Cont' d)
Multiplex Communication System (RHD)
* 3 : w/ Double Locking
* 4 : w/o Double Locking
B 5(A), B 6(B), B 7(C)
Body ECU
J 5(A), J 6(B)
Junction Connector
D 4
Double Door Lock ECU
D10
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
Double Door Lock Motor Front LH
Position SW Front LH
D14
Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
Double Door Lock Motor Rear LH
Position SW Rear LH
D15
Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
Double Door Lock Motor Rear RH
Position SW Rear RH
J11
Junction Connector
Instrument Panel Brace LH
Front Side of Rear Quarter Wheel House RH
Front Side of Rear Quarter Wheel House LH
Under the Front Passenger' s Seat