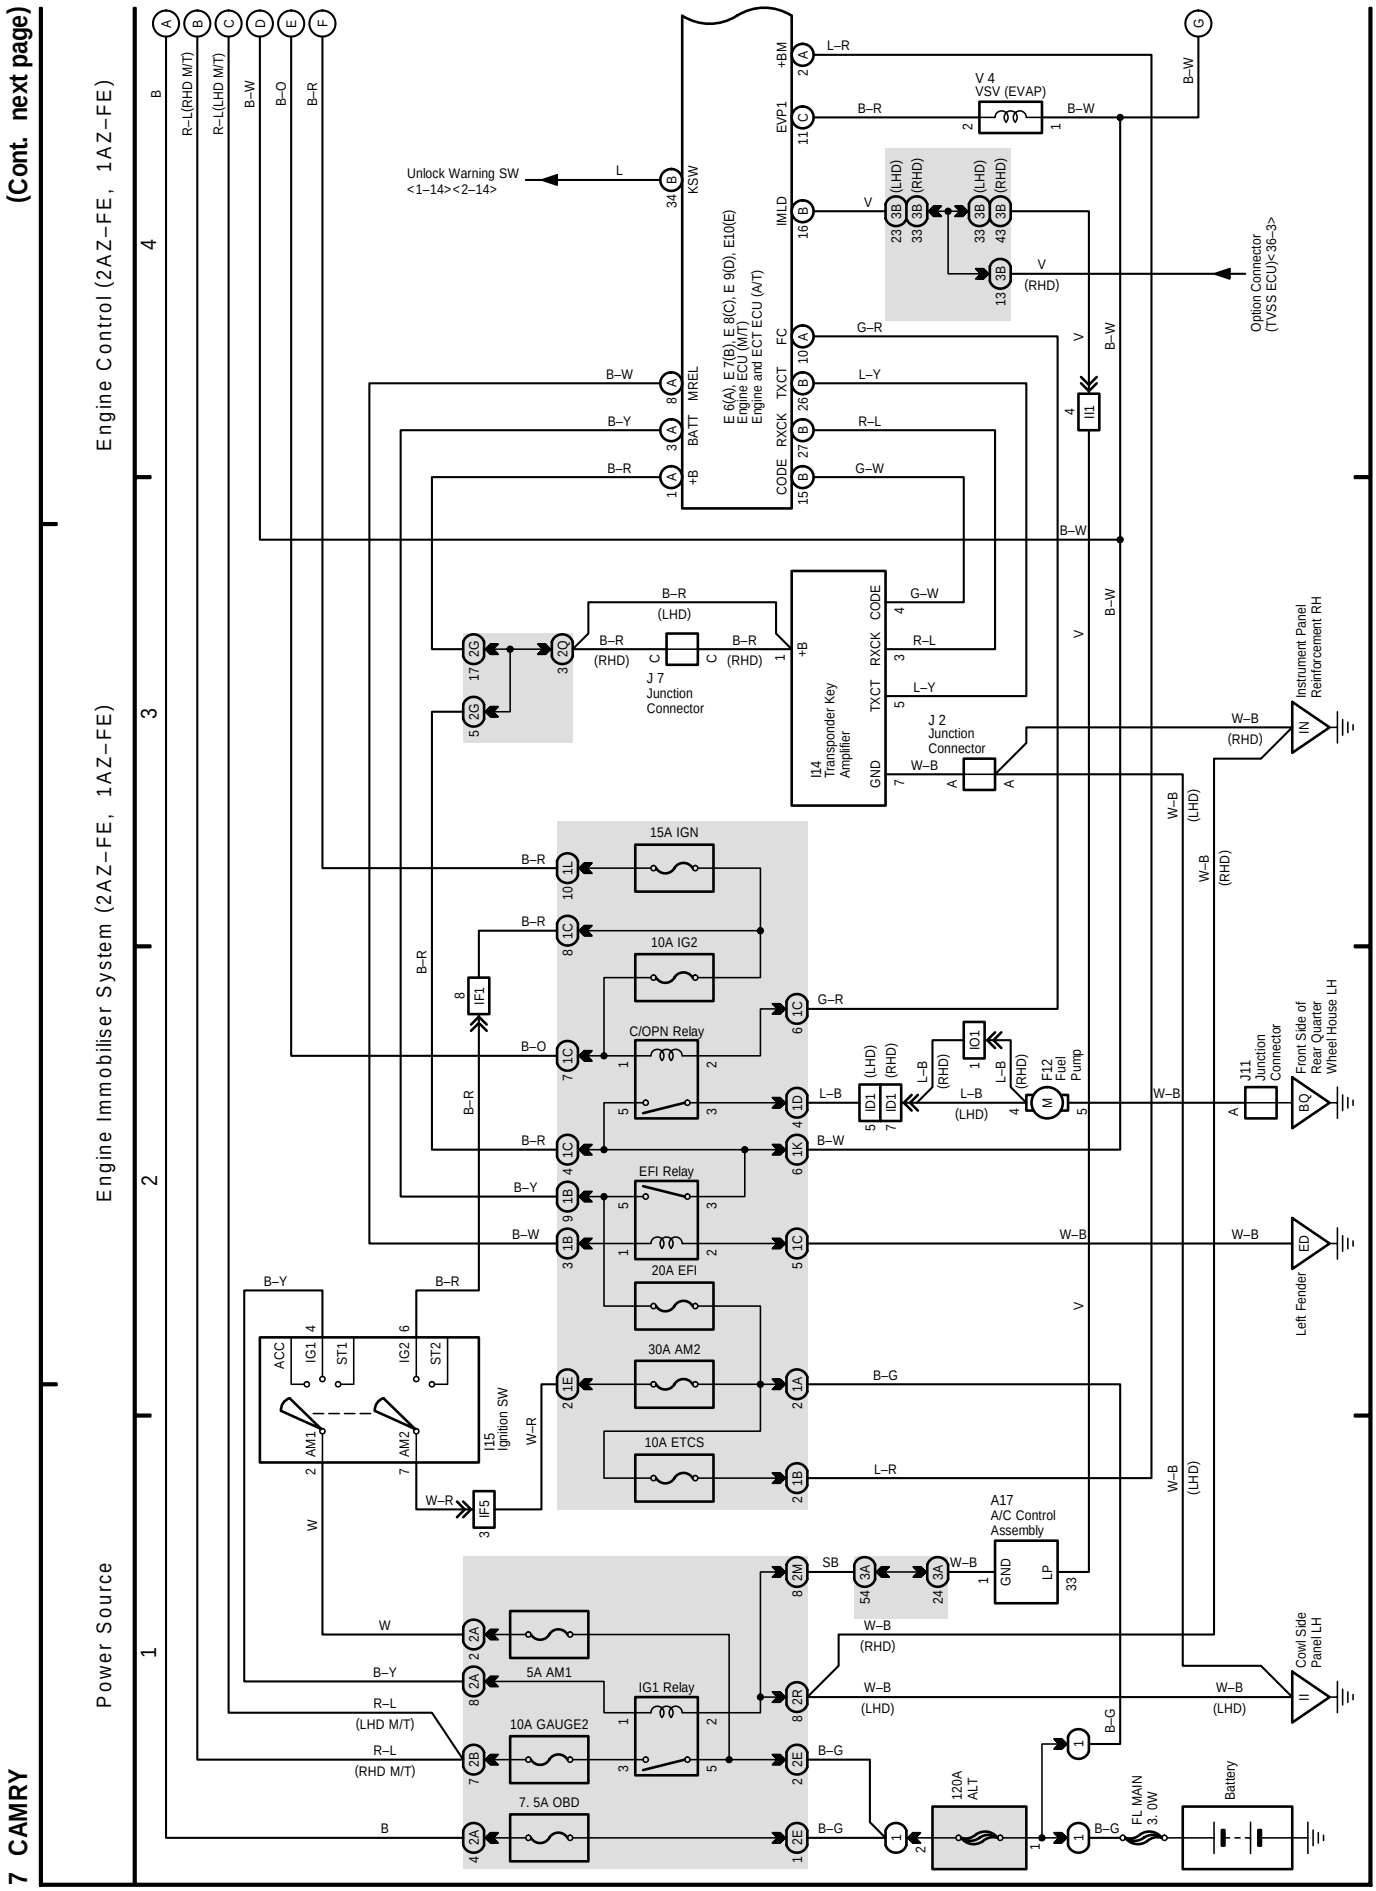
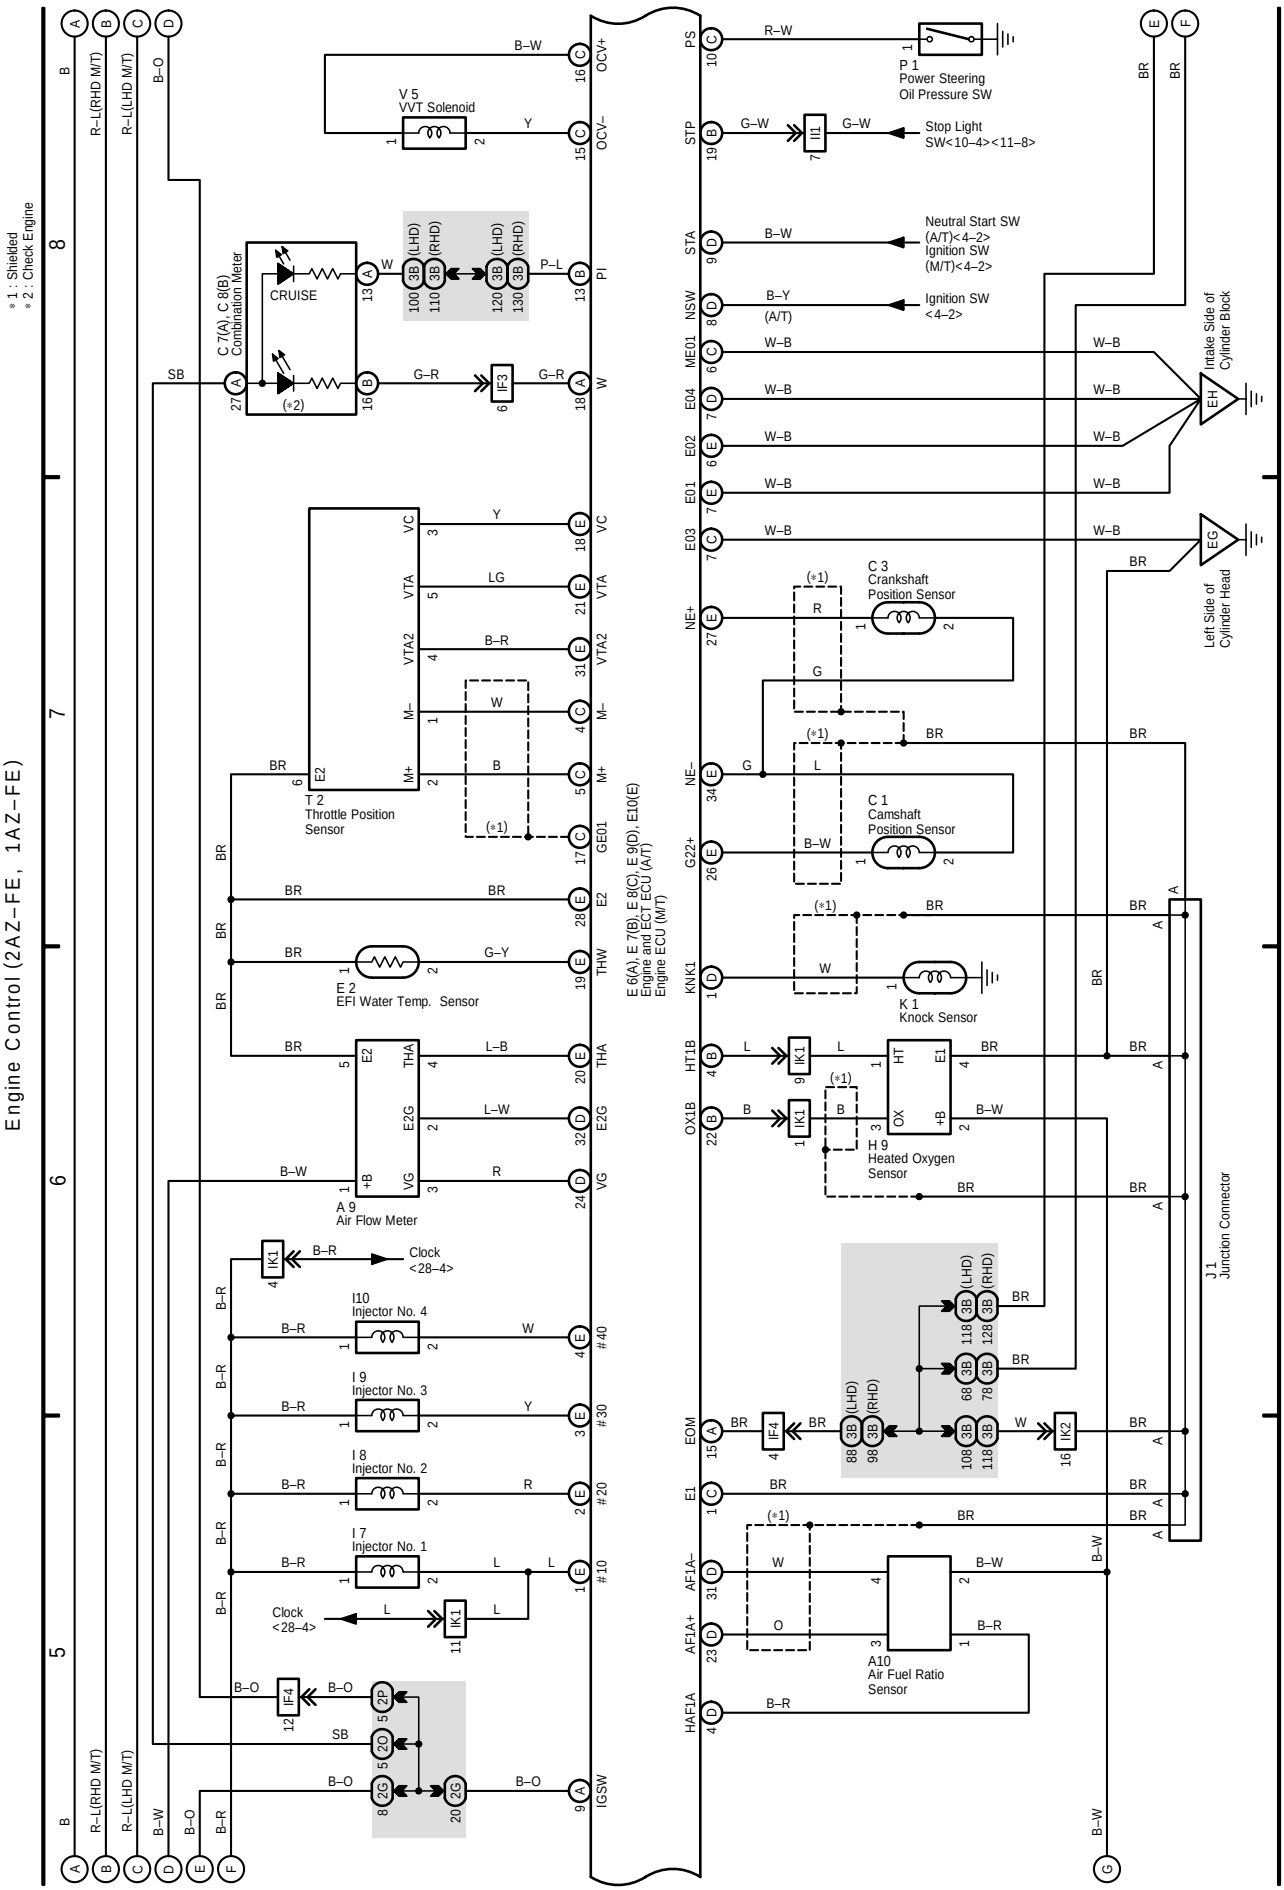
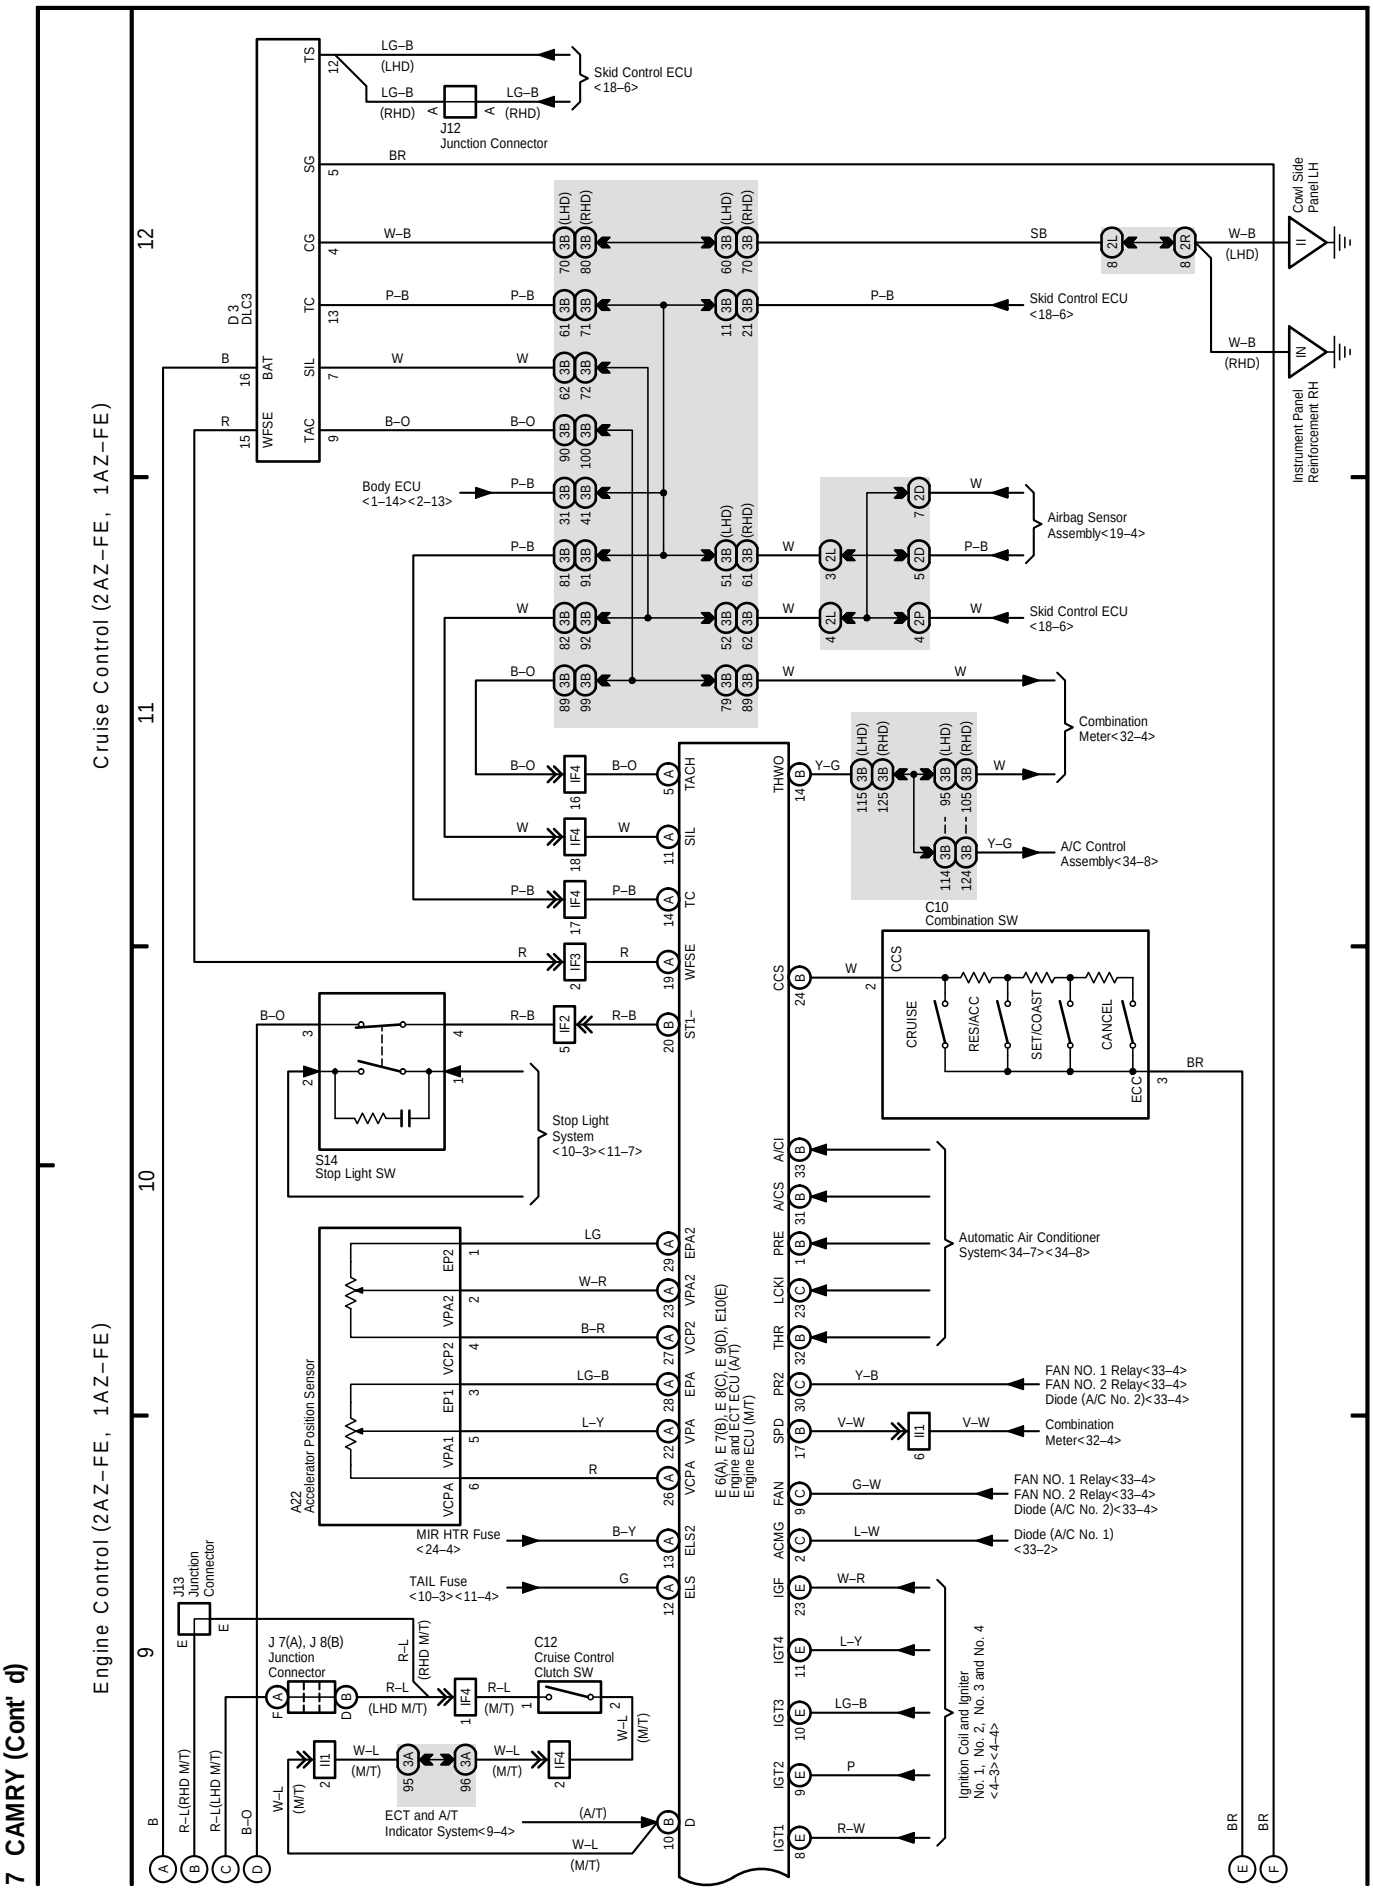

(Cont. next page)
Power Source
Engine Immobiliser System (2AZ–FE, 1AZ–FE)
Engine Control (2AZ–FE, 1AZ–FE)
7 CAMRY
Unlock Warning SW
<1–14><2–14>
E 6(A), E 7(B), E 8(C), E 9(D), E10(E)
Engine ECU (M/T)
Engine and ECT ECU (A/T)
V 4
VSV (EVAP)
Option Connector
(TVSS ECU)<36–3>
J 7
Junction
Connector
I14
Transponder Key
Amplifier
J 2
Junction
Connector
Instrument Panel
Reinforcement RH
15A IGN
10A IG2
C/OPN Relay
EFI Relay
20A EFI
30A AM2
10A ETCS
I15
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
F12
Fuel
Pump
J11
Junction
Connector
Front Side of
Rear Quarter
Wheel House LH
Left Fender
A17
A/C Control
Assembly
5A AM1
IG1 Relay
10A GAUGE2
7. 5A OBD
120A
ALT
FL MAIN
3. 0W
Battery
Cowl Side
Panel LH

7 CAMRY (Cont' d)

(Cont. next page)




Cruise Control (2AZ–FE, 1AZ–FE)
Engine Control (2AZ–FE, 1AZ–FE)
Skid Control ECU <18–6>
J12 Junction Connector
Cowl Side Panel LH
Instrument Panel Reinforcement RH
D3 DLC3
Body ECU <1–14><2–13>
Airbag Sensor Assembly<19–4>
Combination Meter<32–4>
A/C Control Assembly<34–8>
C10 Combination SW
CRUISE
RES/ACC
SET/COAST
CANCEL
Stop Light System <10–3><11–7>
S14 Stop Light SW
A22 Accelerator Position Sensor
E 6(A), E 7(B), E 8(C), E 9(D), E10(E) Engine and ECT ECU (A/T) Engine ECU (M/T)
Automatic Air Conditioner System<34–7><34–8>
FAN NO. 1 Relay<33–4>
FAN NO. 2 Relay<33–4>
Diode (A/C No. 2)<33–4>
Diode (A/C No. 1) <33–2>
MIR HTR Fuse <24–4>
TAIL Fuse <10–3><11–4>
J13 Junction Connector
J 7(A), J 8(B) Junction Connector
C12 Cruise Control Clutch SW
ECT and A/T Indicator System<9–4>
Ignition Coil and Igniter No. 1, No. 2, No. 3 and No. 4 <4–3><4–4>
TS
SG
CG
TC
BAT
SIL
WFSE
TAC
TACH
SIL
TC
WFSE
ST1–
CCS
THWO
A/CI
A/CS
PRE
LCKI
THR
PR2
SPD
FAN
ACMG
IGF
IGT4
IGT3
IGT2
IGT1
EPA2
VPA2
VCP2
EPA
VPA
VCPA
ELS2
ELS
ECC