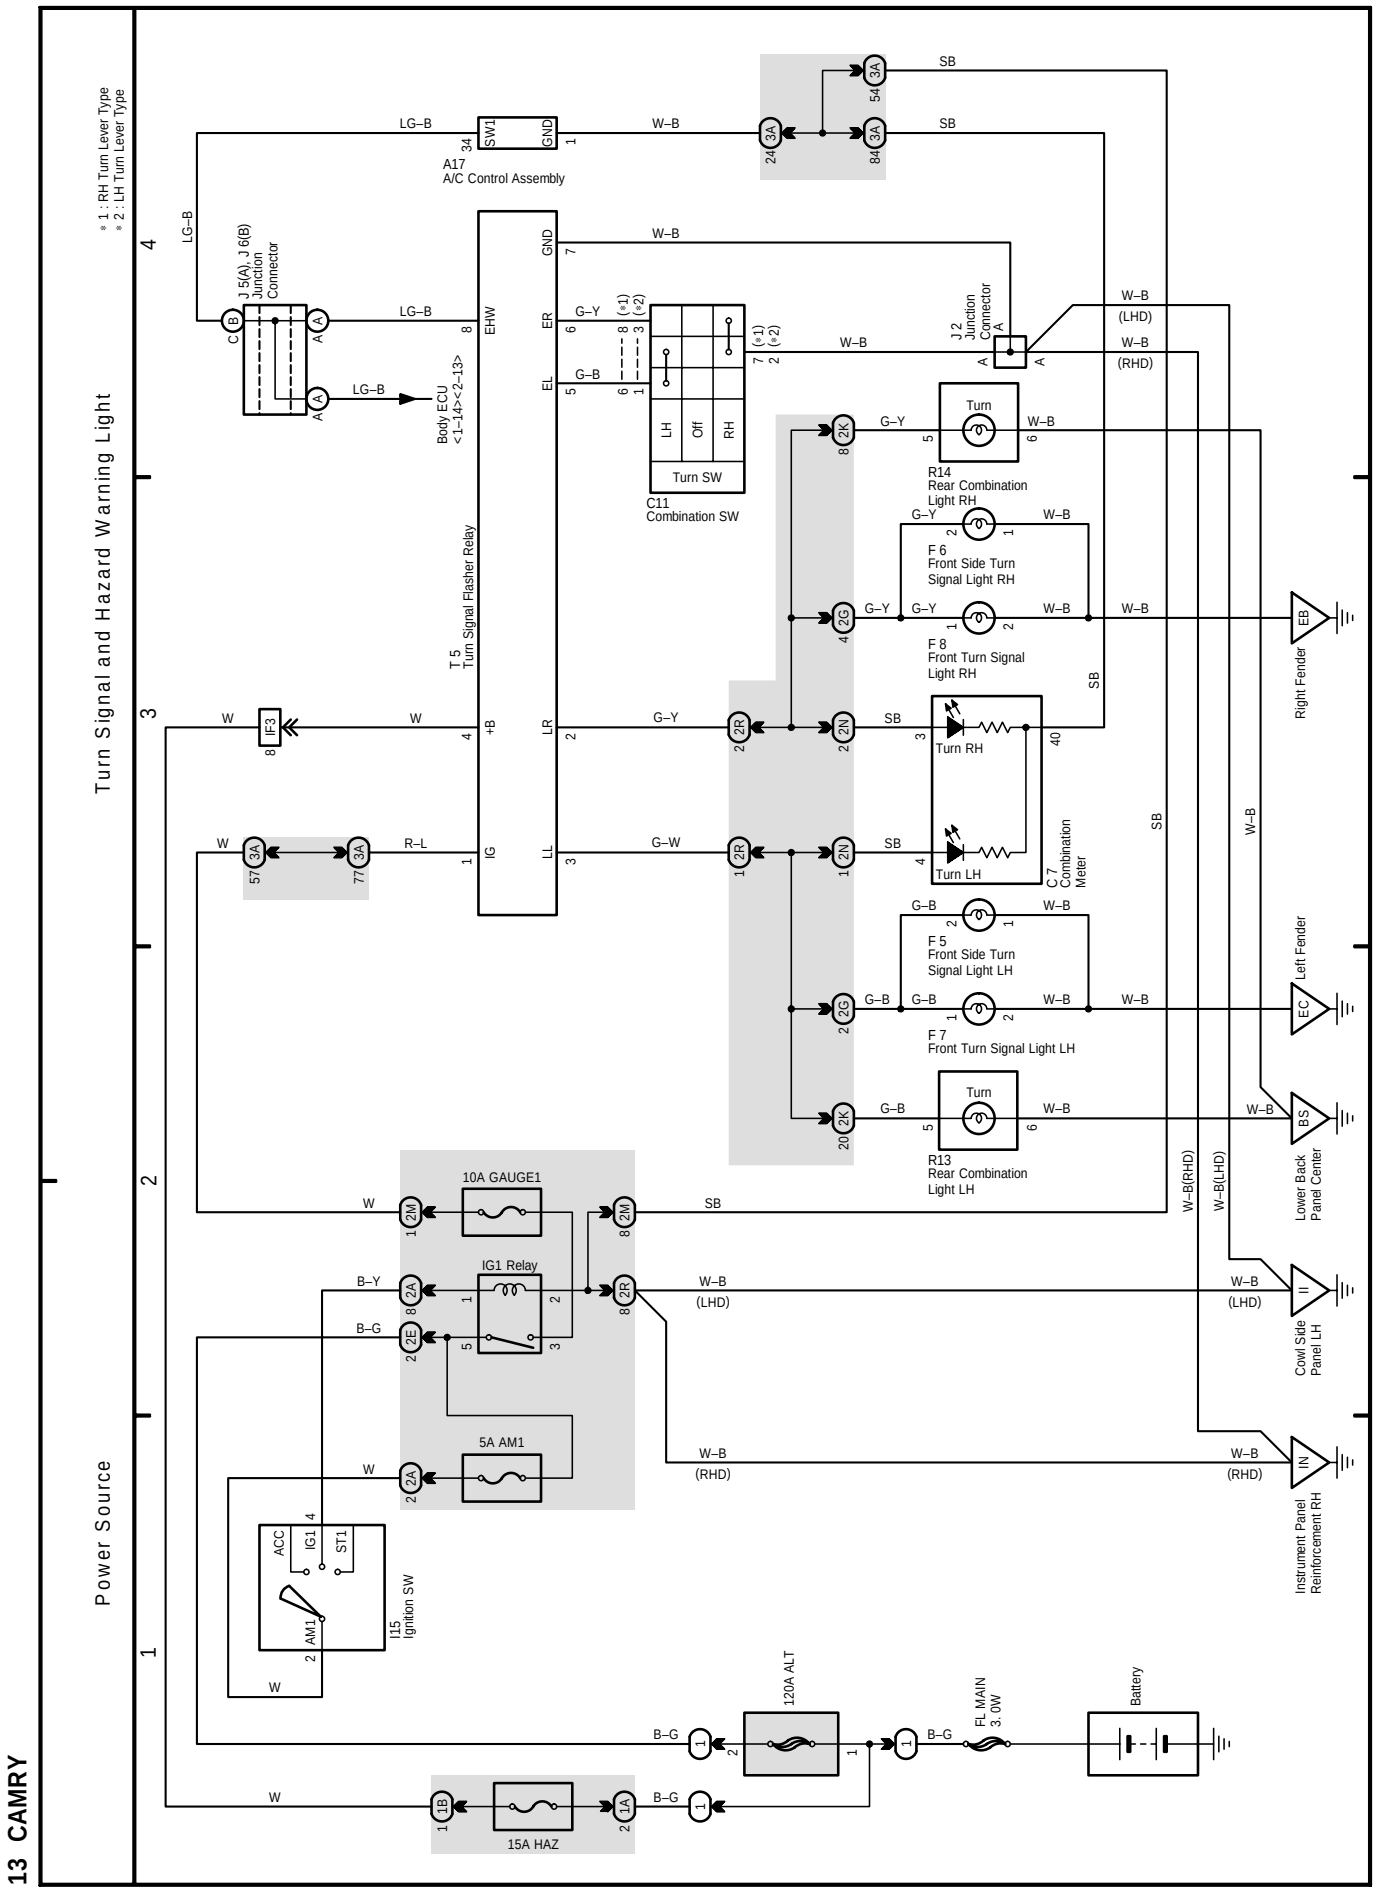

13 CAMRY
Turn Signal and Hazard Warning Light
Power Source
* 1 : RH Turn Lever Type
* 2 : LH Turn Lever Type
A17
A/C Control Assembly
SW1
GND
J 5(A), J 6(B)
Junction
Connector
Body ECU
<1–14><2–13>
EHW
ER
EL
+B
LR
LL
IG
T 5
Turn Signal Flasher Relay
C11
Combination SW
LH
Off
RH
Turn SW
J 2
Junction
Connector
R14
Rear Combination
Light RH
R13
Rear Combination
Light LH
F 6
Front Side Turn
Signal Light RH
F 8
Front Turn Signal
Light RH
F 5
Front Side Turn
Signal Light LH
F 7
Front Turn Signal Light LH
C7
Combination
Meter
Turn RH
Turn LH
Right Fender
Left Fender
Lower Back
Panel Center
Cowl Side
Panel LH
Instrument Panel
Reinforcement RH
10A GAUGE1
IG1 Relay
5A AM1
I15
Ignition SW
ACC
IG1
ST1
AM1
120A ALT
FL MAIN
3. 0W
Battery
15A HAZ
W–B
(LHD)
W–B
(RHD)
W–B(RHD)
W–B(LHD)
SB
LG–B
W
B–Y
B–G
G–Y
G–B
G–W
R–L