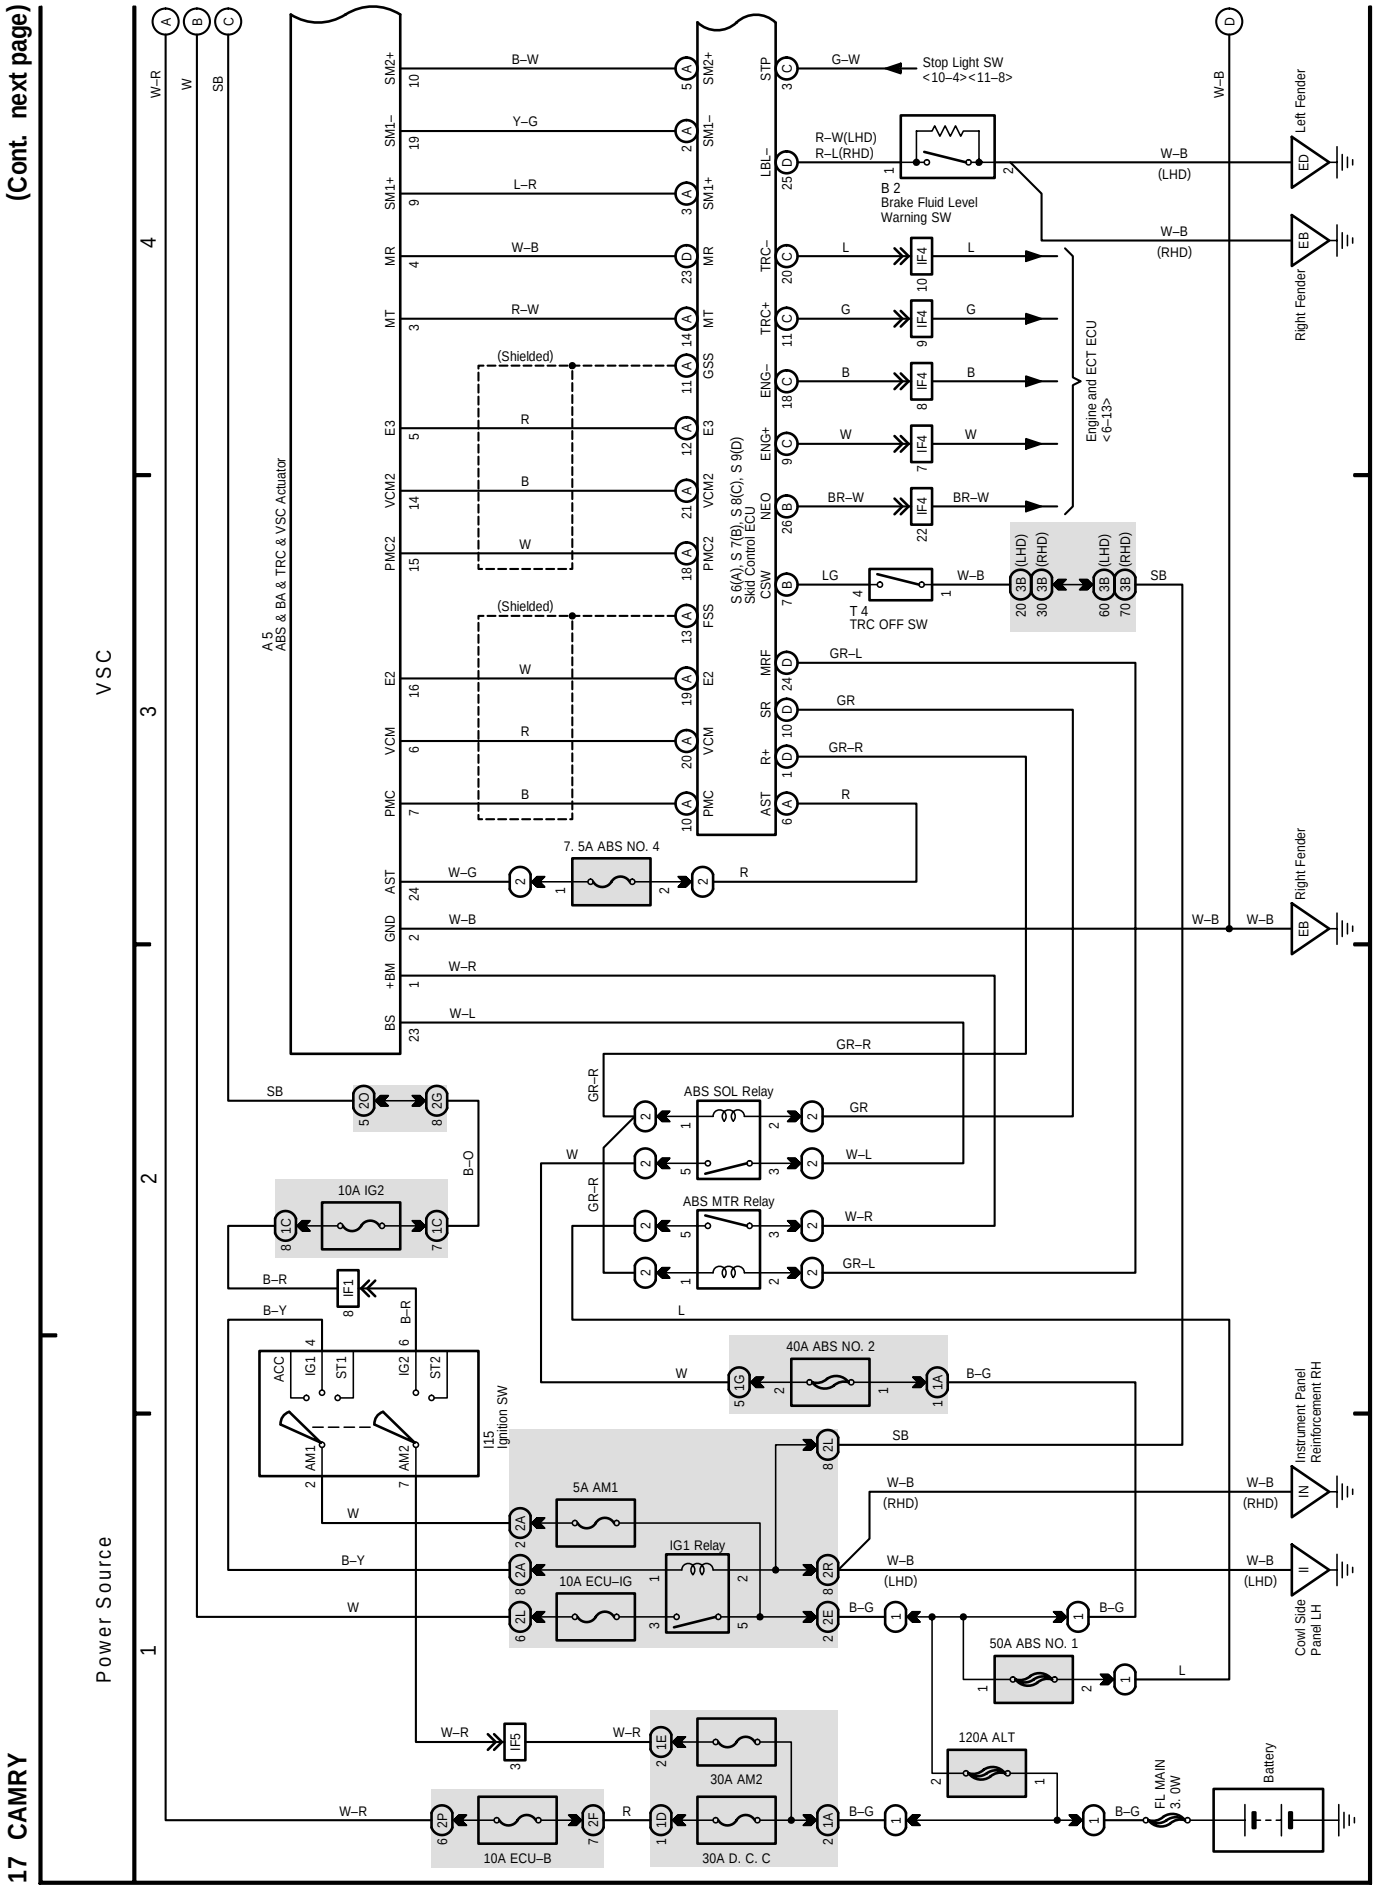
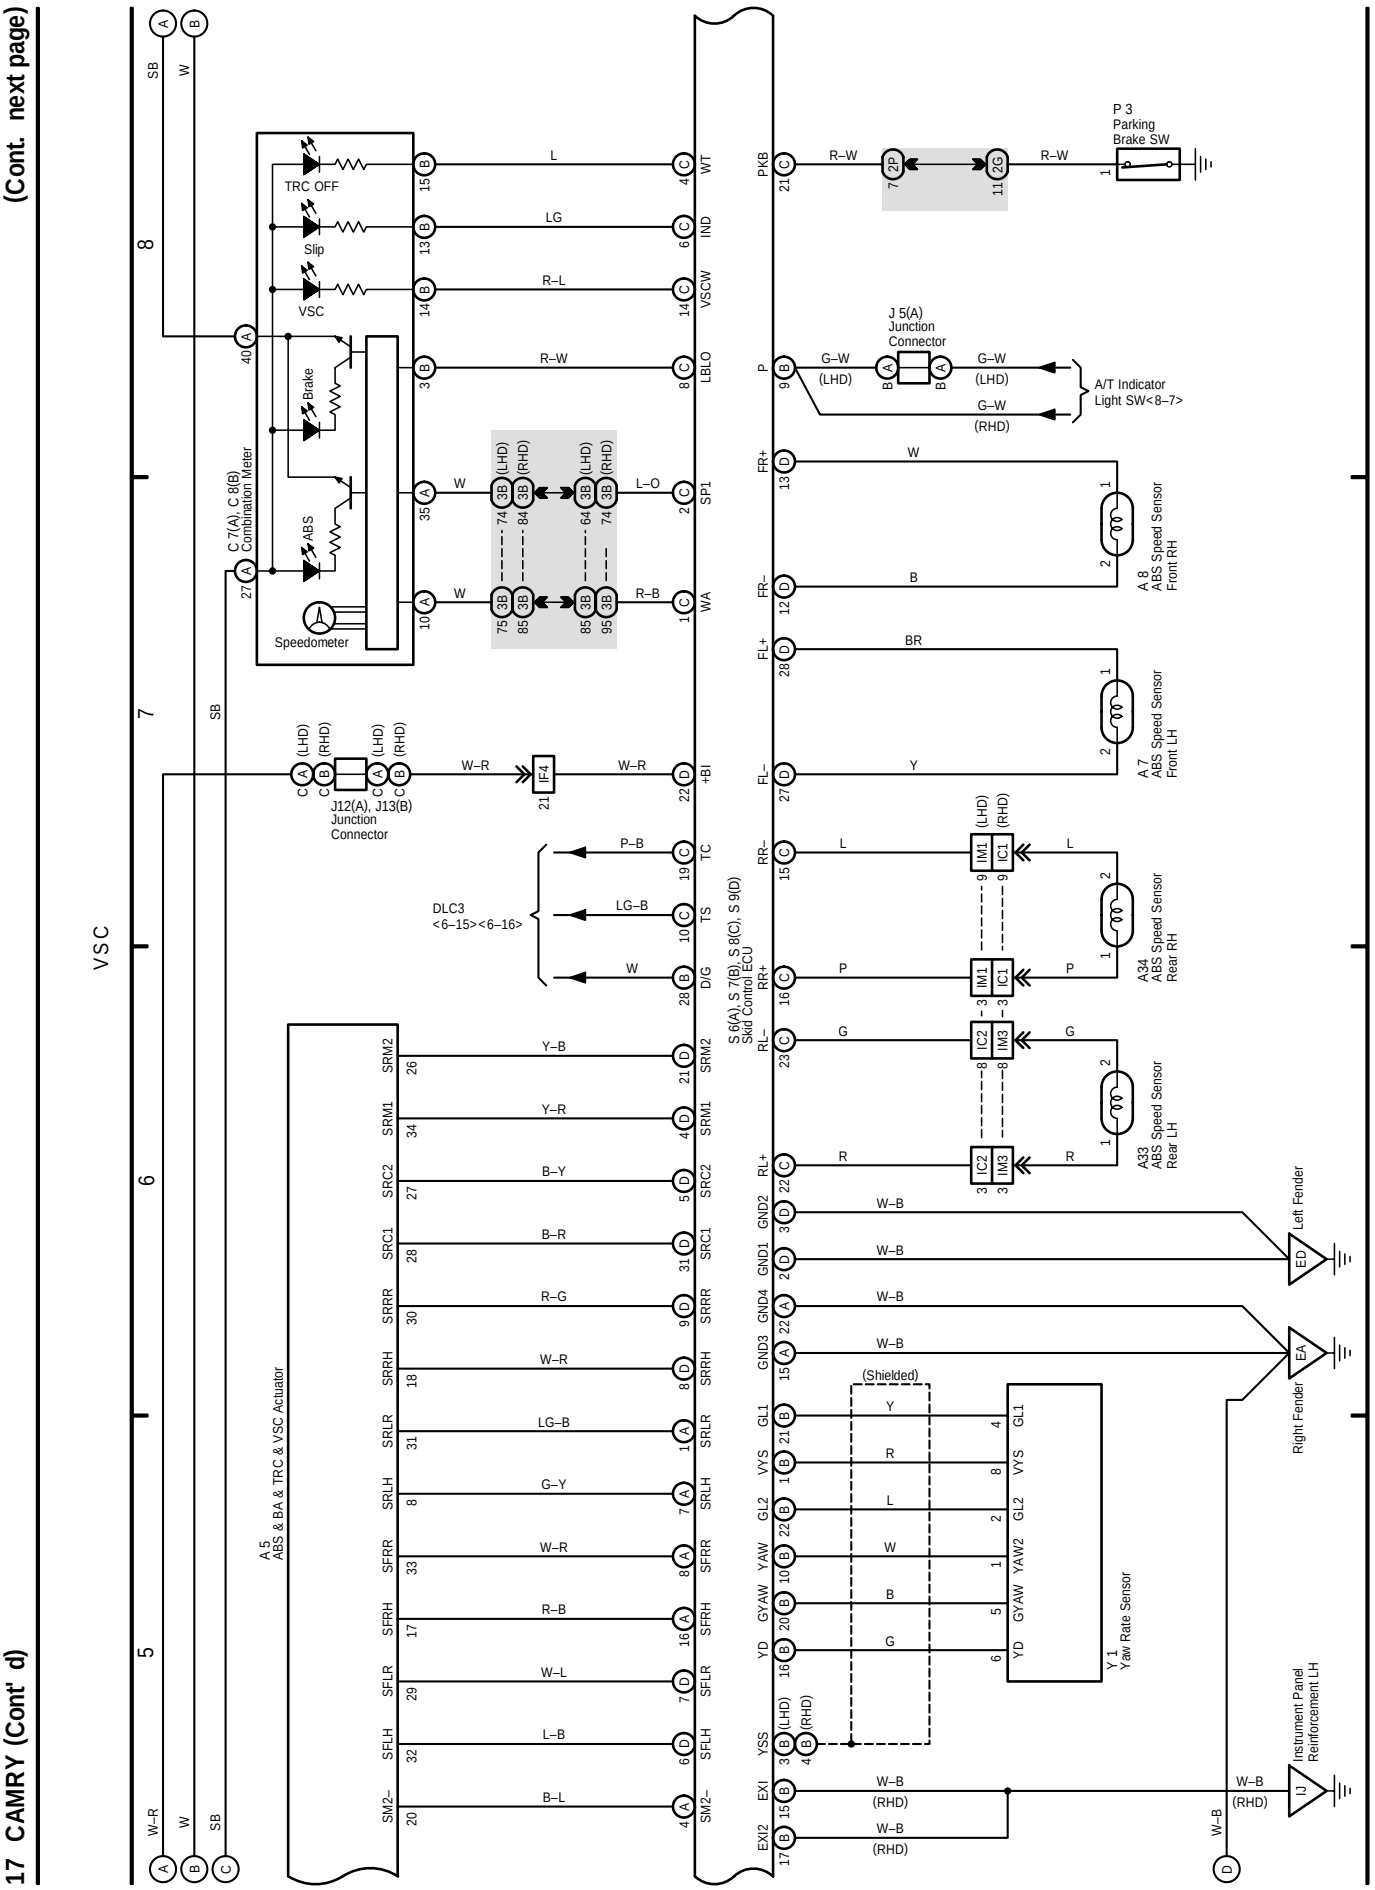

(Cont. next page)
17 CAMRY
VSC
Power Source
A5
ABS & BA & TRC & VSC Actuator
S 6(A), S 7(B), S 8(C), S 9(D)
Skid Control ECU
Engine and ECT ECU
<6–13>
Stop Light SW
<10–4><11–8>
B 2
Brake Fluid Level
Warning SW
T 4
TRC OFF SW
Left Fender
Right Fender
Instrument Panel
Reinforcement RH
Cowl Side
Panel LH
7. 5A ABS NO. 4
ABS SOL Relay
ABS MTR Relay
10A IG2
40A ABS NO. 2
I15
Ignition SW
5A AM1
IG1 Relay
10A ECU–IG
50A ABS NO. 1
120A ALT
30A AM2
30A D. C. C
10A ECU–B
FL MAIN
3. 0W
Battery
(Shielded)
(Shielded)


17 CAMRY (Cont' d)
(Cont. next page)
VSC
TRC OFF
Slip
VSC
Brake
ABS
Speedometer
C 7(A), C 8(B) Combination Meter
J12(A), J13(B) Junction Connector
IF4
DLC3 <6–15><6–16>
S 6(A), S 7(B), S 8(C), S 9(D) Skid Control ECU
A 5 ABS & BA & TRC & VSC Actuator
P 3 Parking Brake SW
J 5(A) Junction Connector
A/T Indicator Light SW<8–7>
A 8 ABS Speed Sensor Front RH
A 7 ABS Speed Sensor Front LH
A34 ABS Speed Sensor Rear RH
A33 ABS Speed Sensor Rear LH
Y 1 Yaw Rate Sensor
(Shielded)
Left Fender
Right Fender
Instrument Panel Reinforcement LH

17 CAMRY (Cont' d)

