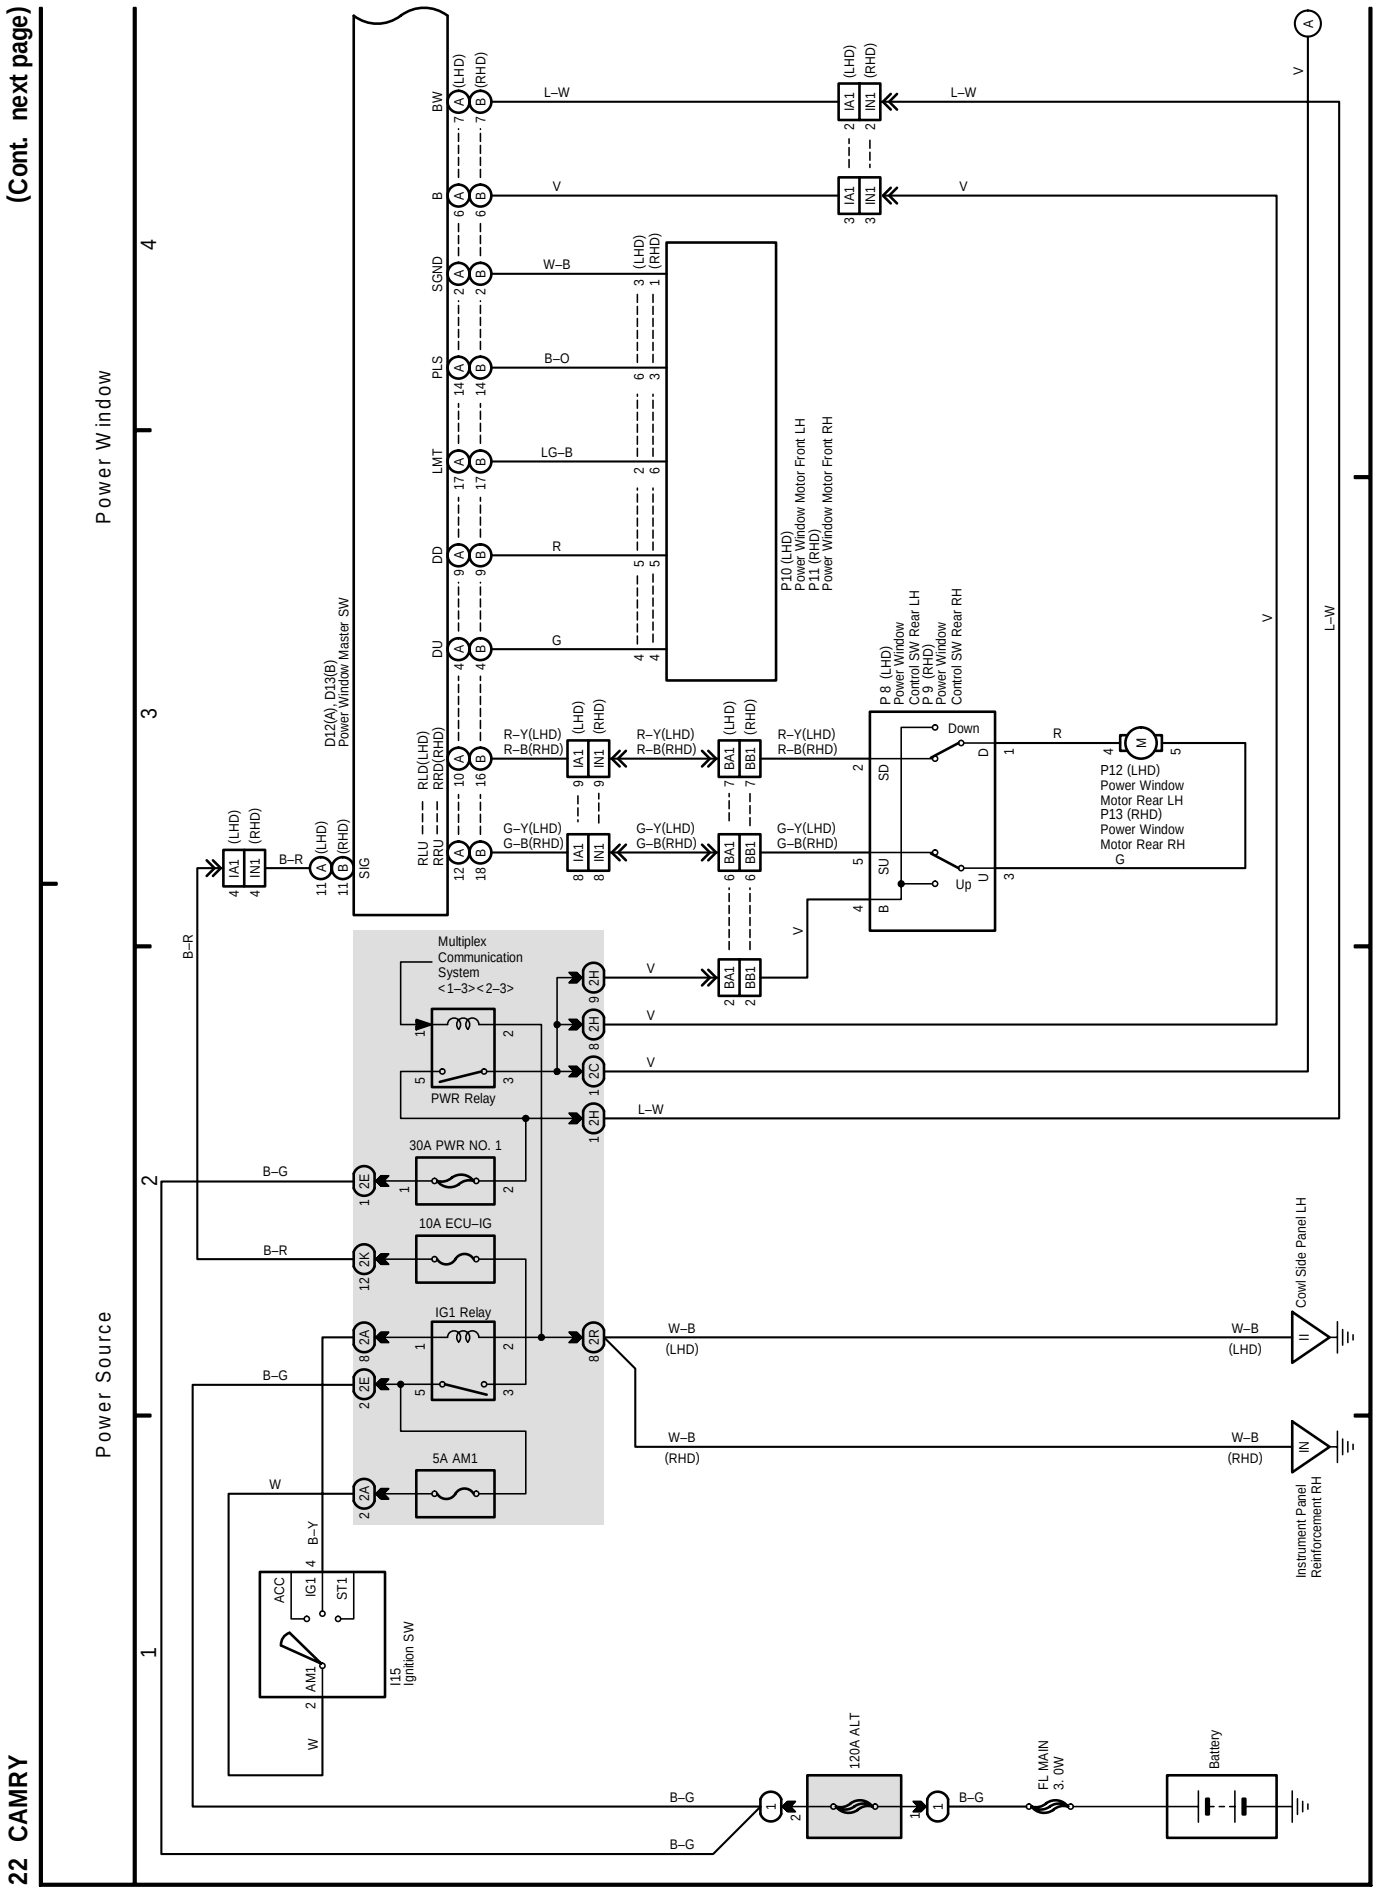
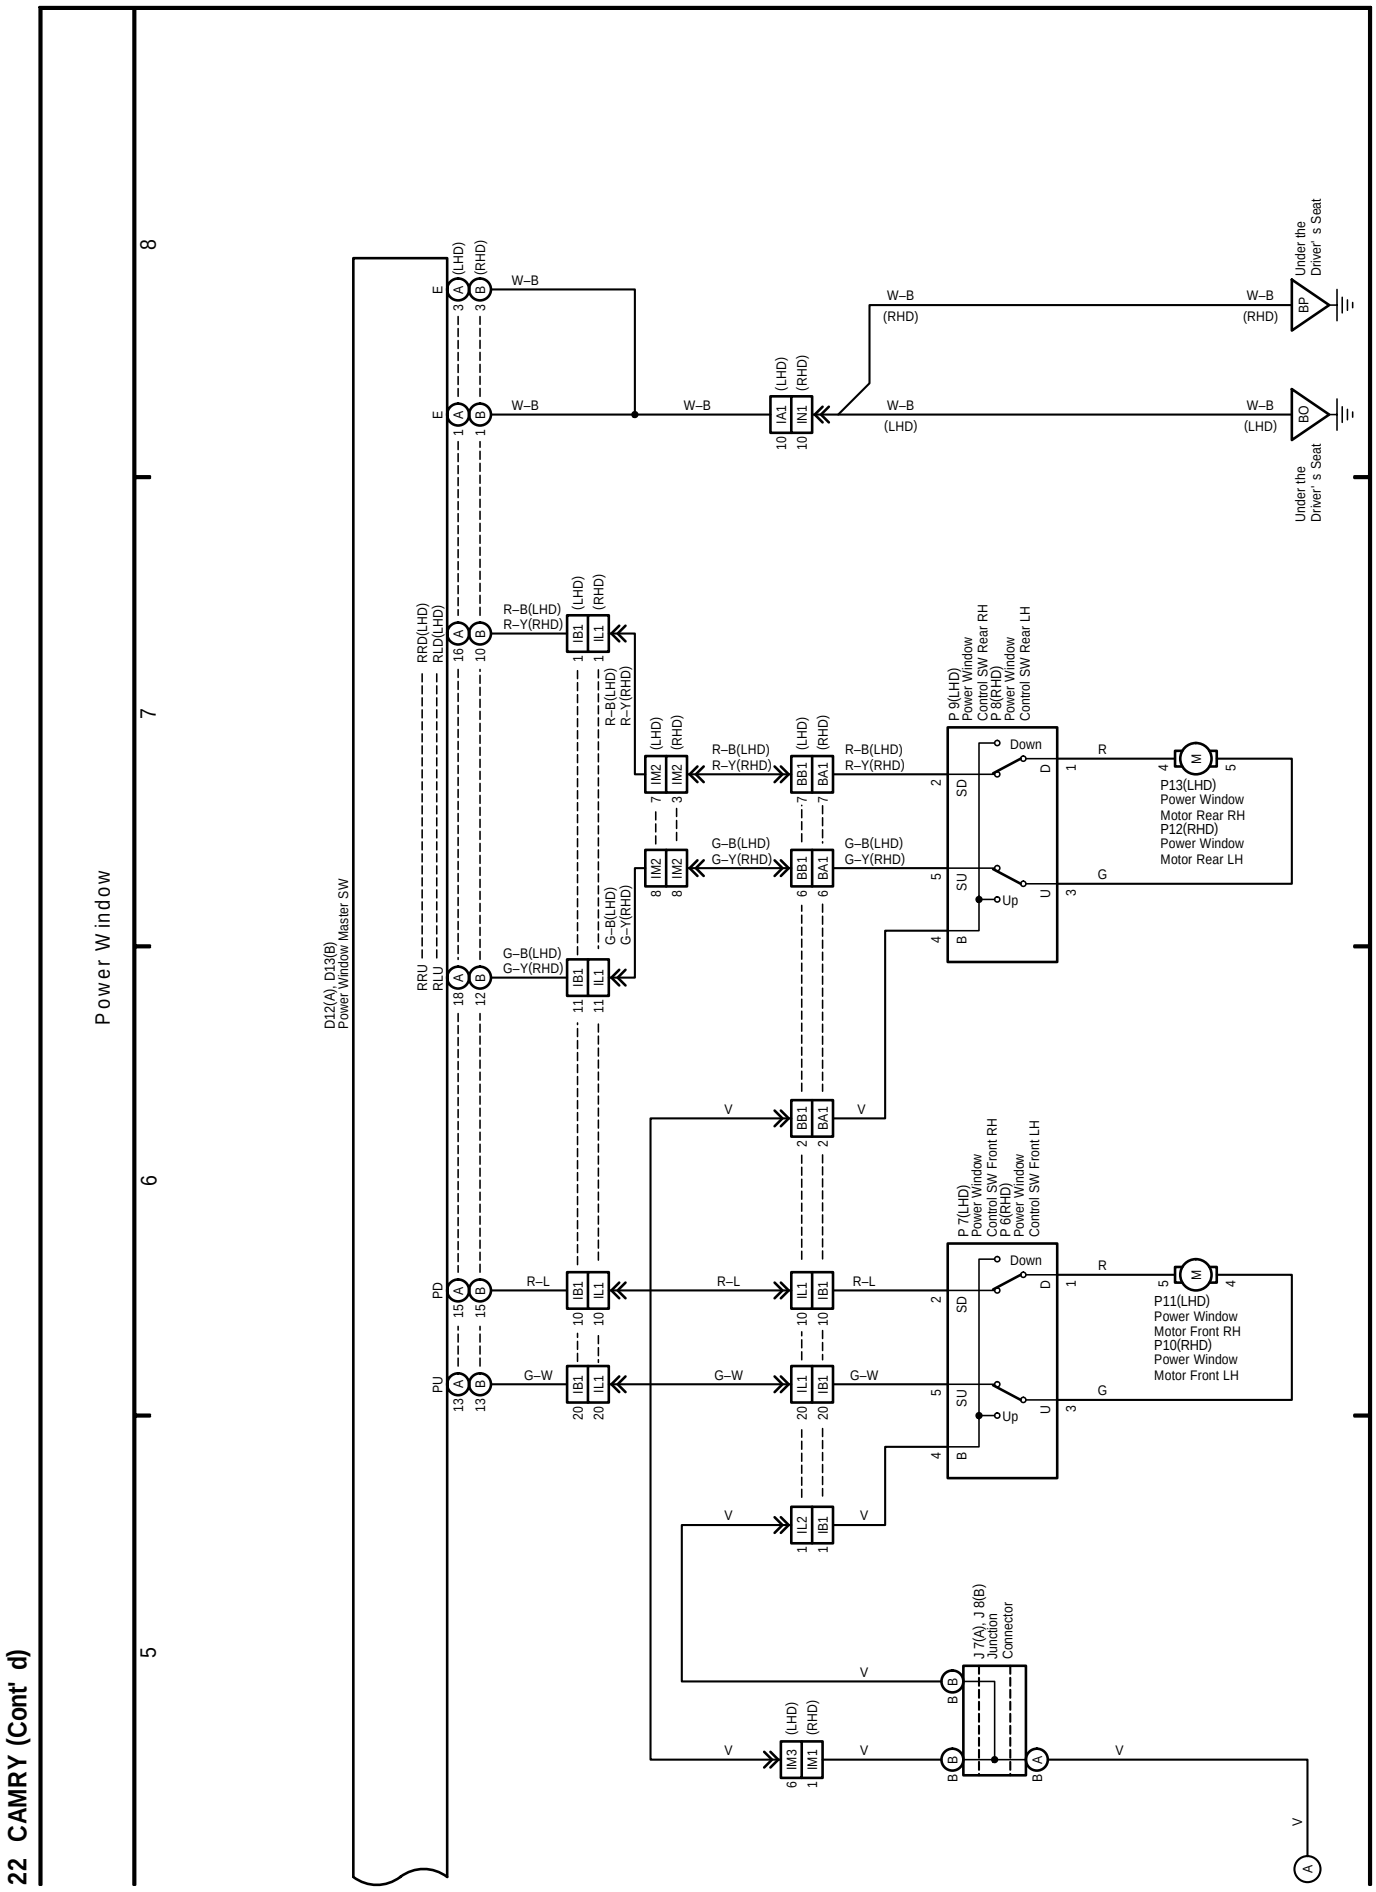

(Cont. next page)
Power Window
Power Source
22 CAMRY
D12(A), D13(B)
Power Window Master SW
P10 (LHD)
Power Window Motor Front LH
P11 (RHD)
Power Window Motor Front RH
P 8 (LHD)
Power Window
Control SW Rear LH
P 9 (RHD)
Power Window
Control SW Rear RH
P12 (LHD)
Power Window
Motor Rear LH
P13 (RHD)
Power Window
Motor Rear RH
Multiplex
Communication
System
PWR Relay
30A PWR NO. 1
10A ECU–IG
IG1 Relay
5A AM1
I15
Ignition SW
120A ALT
FL MAIN
3. 0W
Battery
Cowl Side Panel LH
Instrument Panel
Reinforcement RH
L–W
V
B–R
B–G
W–B
(LHD)
W–B
(RHD)
R–Y(LHD)
R–B(RHD)
G–Y(LHD)
G–B(RHD)
B–O
LG–B
W–B
R
G
B–Y
W
Down
Up


22 CAMRY (Cont' d)
Power Window
5
6
7
8
D12(A), D13(B)
Power Window Master SW
RRD(LHD)
RLD(LHD)
RRU
RLU
PD
PU
E
W–B
R–B(LHD)
R–Y(RHD)
G–B(LHD)
G–Y(RHD)
R–L
G–W
V
(LHD)
(RHD)
IA1
IN1
IB1
IL1
IM2
BB1
BA1
IL2
IM3
IM1
P 9(LHD)
Power Window
Control SW Rear RH
P 8(RHD)
Power Window
Control SW Rear LH
P 7(LHD)
Power Window
Control SW Front RH
P 6(RHD)
Power Window
Control SW Front LH
Down
Up
SD
SU
D
U
B
R
G
M
P13(LHD)
Power Window
Motor Rear RH
P12(RHD)
Power Window
Motor Rear LH
P11(LHD)
Power Window
Motor Front RH
P10(RHD)
Power Window
Motor Front LH
J 7(A), J 8(B)
Junction
Connector
Under the
Driver' s Seat
BP
BO