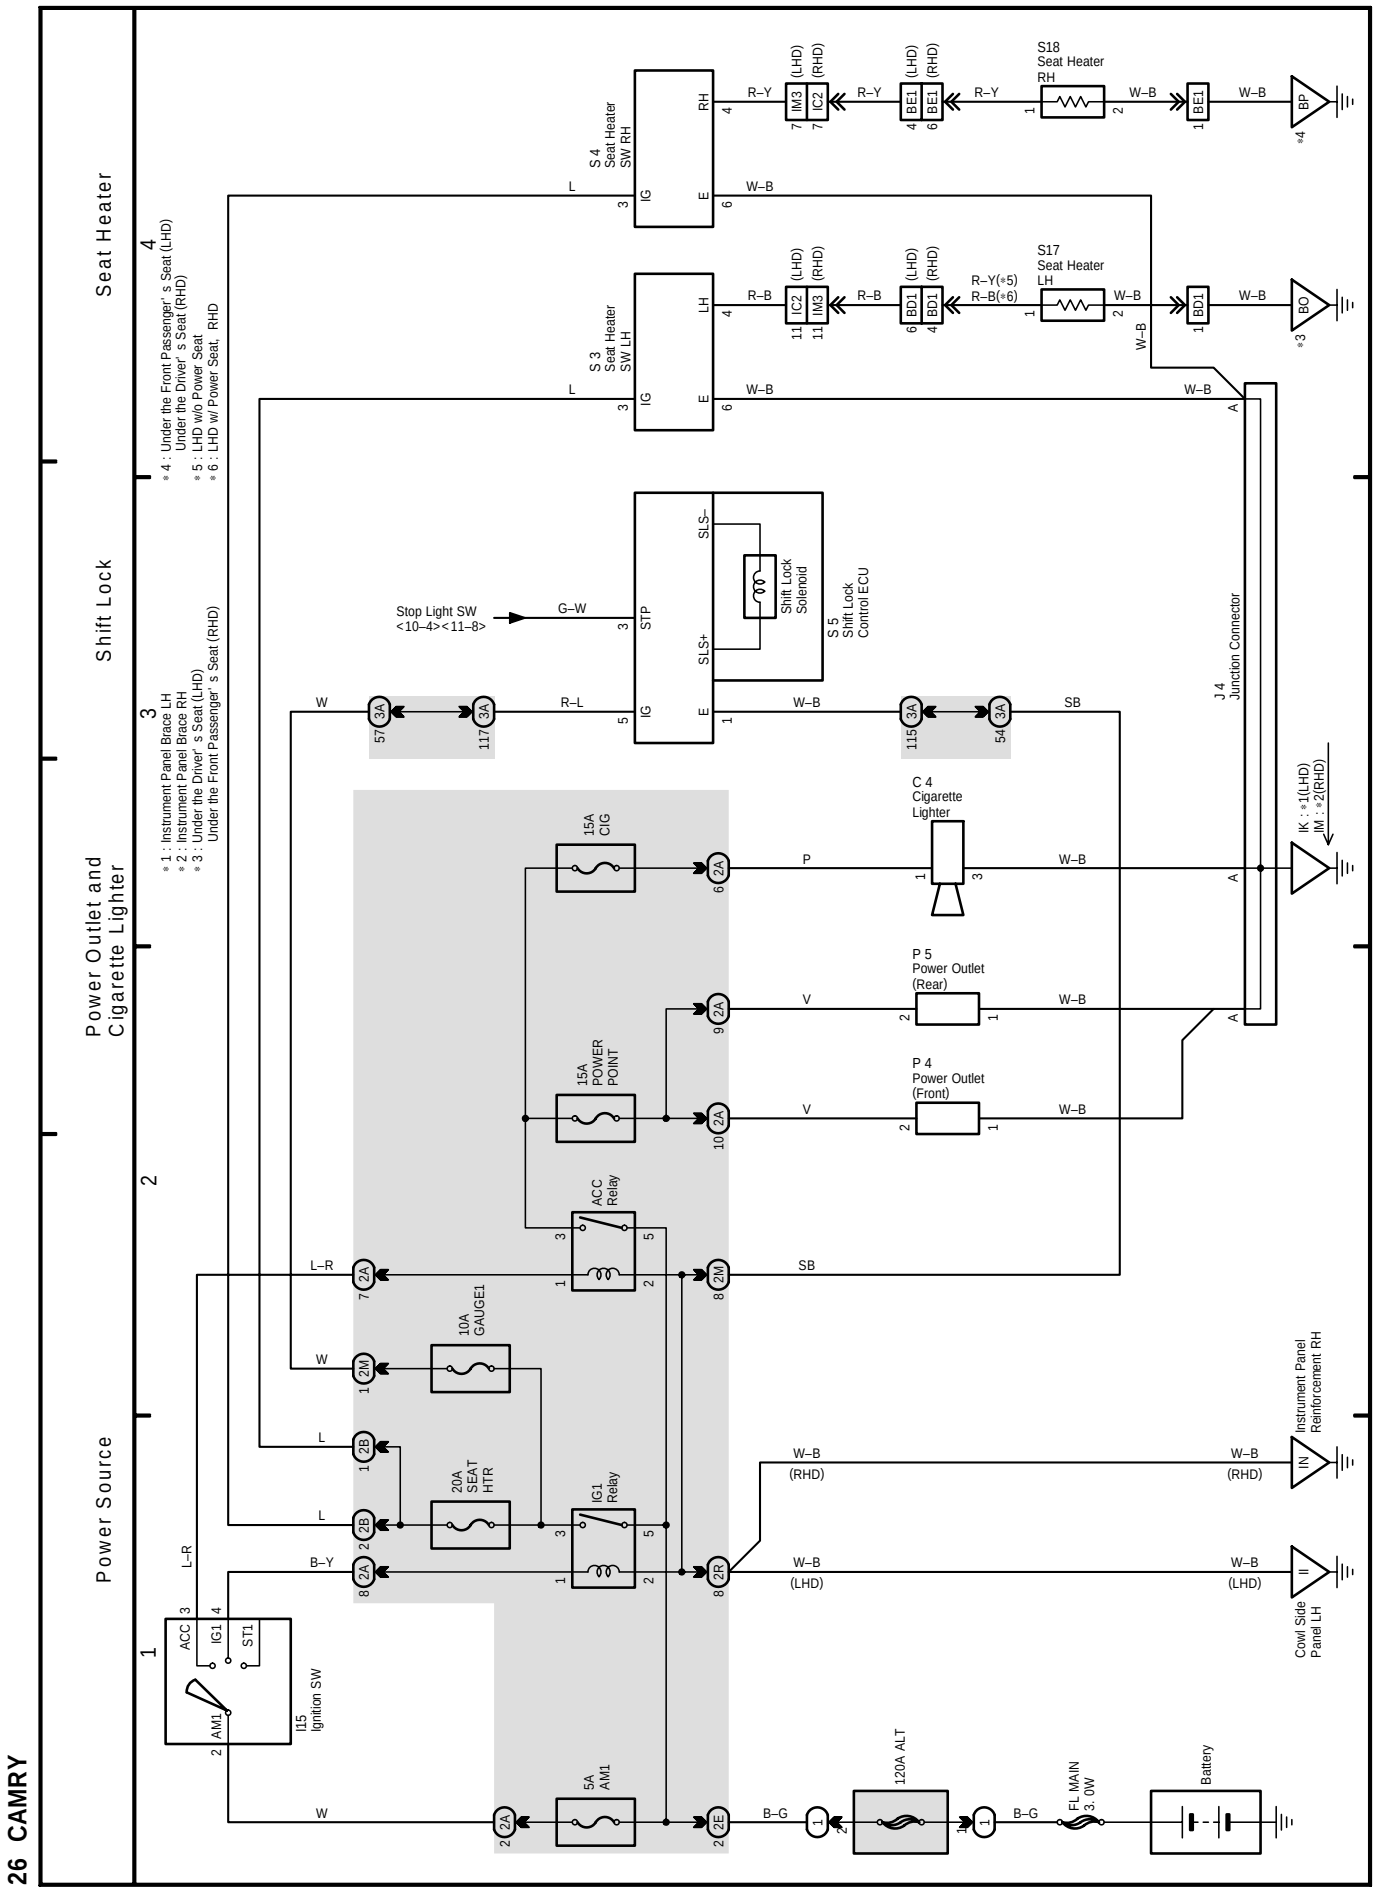

Power Source
Power Outlet and Cigarette Lighter
Shift Lock
Seat Heater
1
2
3
4
*1 : Instrument Panel Brace LH
*2 : Instrument Panel Brace RH
*3 : Under the Driver' s Seat (LHD)
Under the Front Passenger' s Seat (RHD)
*4 : Under the Front Passenger' s Seat (LHD)
Under the Driver' s Seat (RHD)
*5 : LHD w/o Power Seat
*6 : LHD w/ Power Seat
I15 Ignition SW
ACC
IG1
ST1
AM1
5A AM1
15A CIG
15A POWER POINT
10A GAUGE1
20A SEAT HTR
ACC Relay
IG1 Relay
120A ALT
FL MAIN 3. 0W
Battery
B–G
L–R
W
L
B–Y
W–B
R–L
R–Y
R–B
R–Y(*5)
R–B(*6)
G–W
P
V
SB
S 4 Seat Heater SW RH
S 3 Seat Heater SW LH
S18 Seat Heater RH
S17 Seat Heater LH
S 5 Shift Lock Control ECU
Stop Light SW <10–4><11–8>
Shift Lock Solenoid
C 4 Cigarette Lighter
P 5 Power Outlet (Rear)
P 4 Power Outlet (Front)
J 4 Junction Connector
IK : *1(LHD) IM : *2(RHD)
Instrument Panel Reinforcement RH
Cowl Side Panel LH
(LHD)
(RHD)
(LHD)
(RHD)