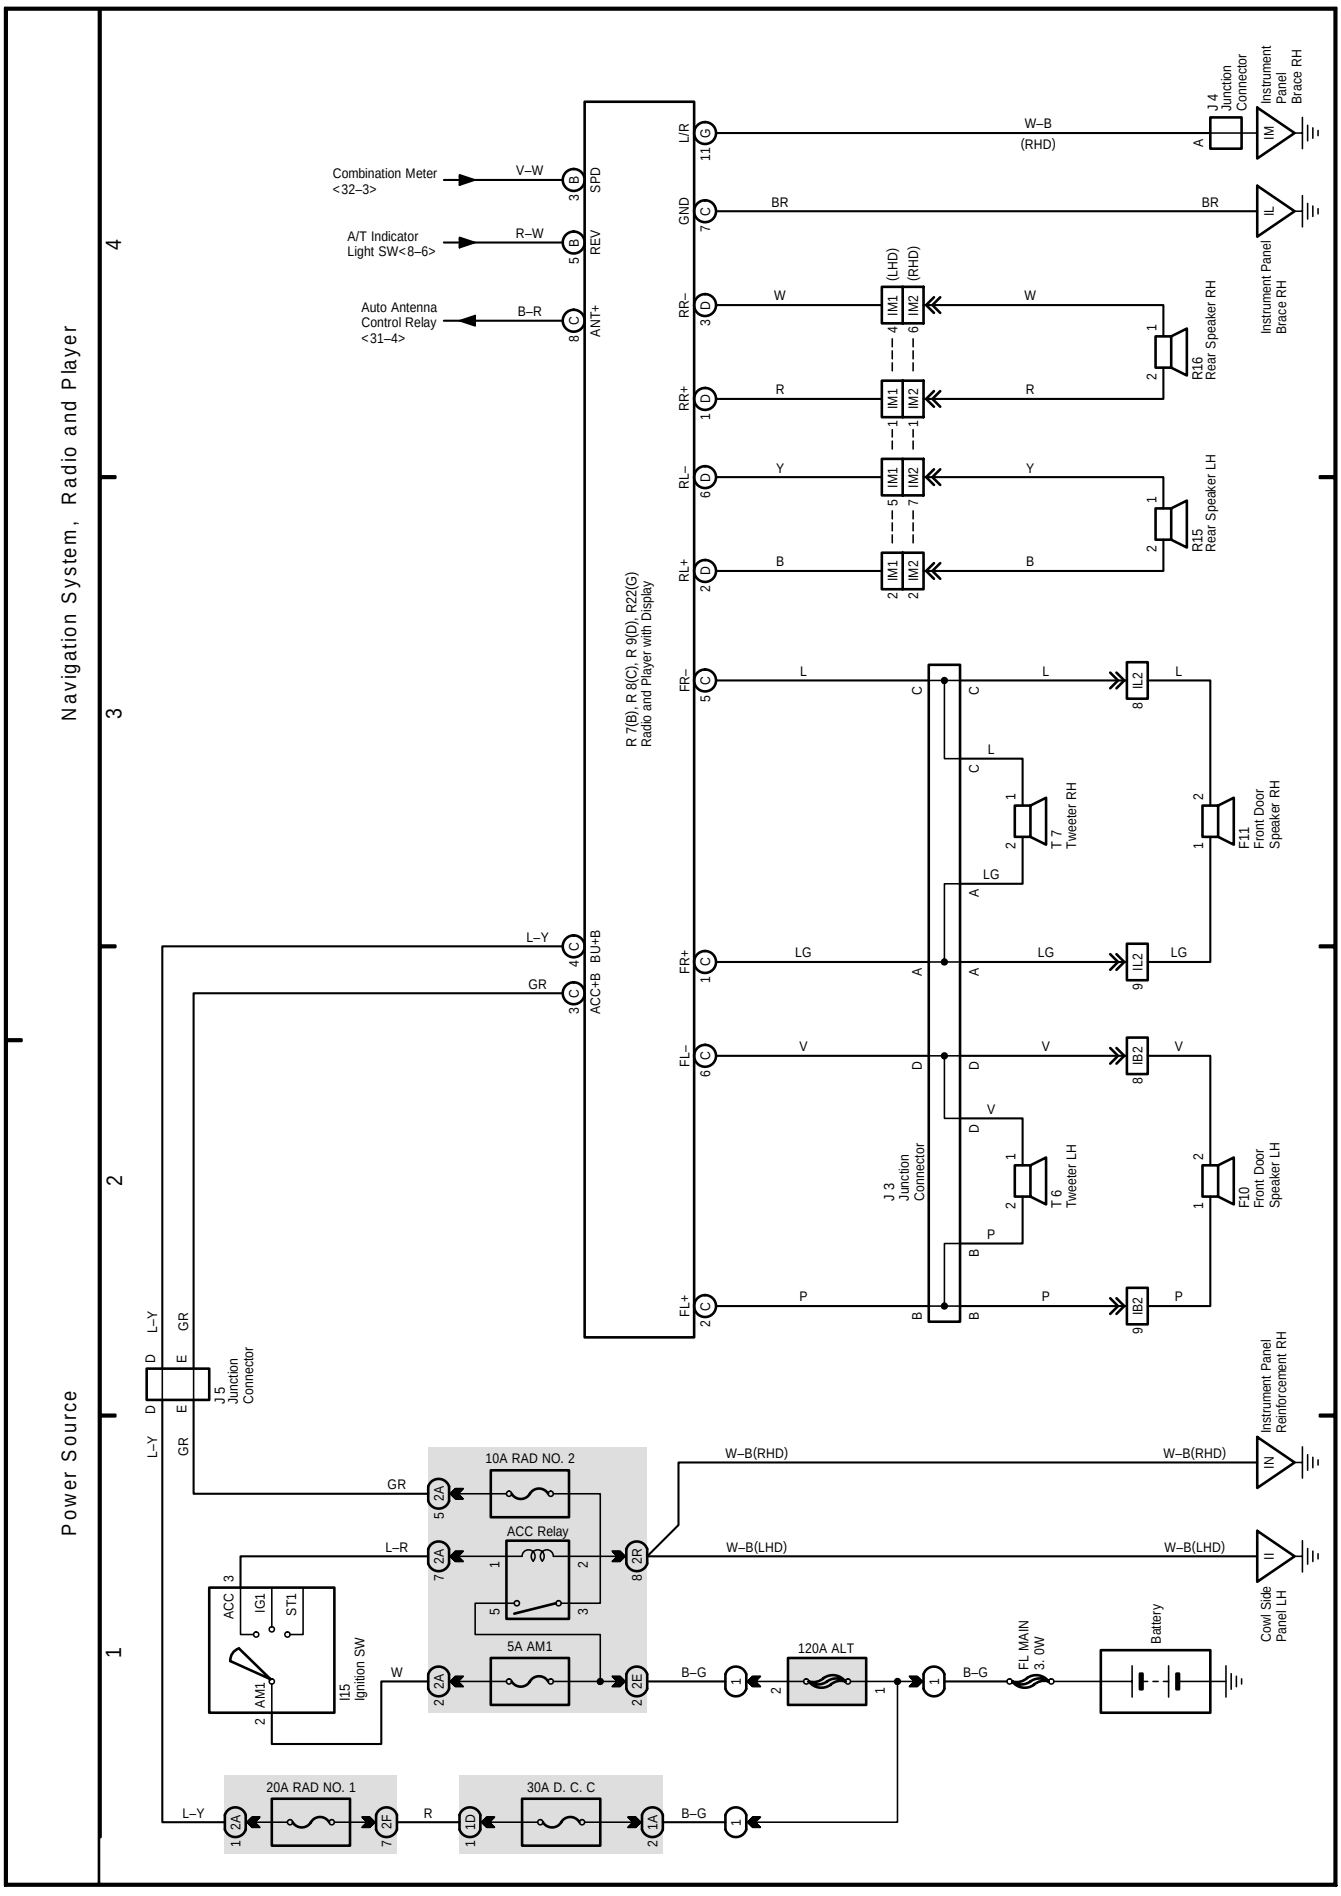

Navigation System, Radio and Player
Power Source
Combination Meter <32–3>
A/T Indicator Light SW<8–6>
Auto Antenna Control Relay <31–4>
V–W
R–W
B–R
SPD
REV
ANT+
R 7(B), R 8(C), R 9(D), R22(G) Radio and Player with Display
L–Y
GR
ACC+B
BU+B
J5 Junction Connector
10A RAD NO. 2
ACC Relay
5A AM1
120A ALT
20A RAD NO. 1
30A D. C. C
I15 Ignition SW
ACC
IG1
ST1
AM1
FL MAIN 3. 0W
Battery
W–B(RHD)
W–B(LHD)
J4 Junction Connector
Instrument Panel Brace RH
Instrument Panel Reinforcement RH
Cowl Side Panel LH
R16 Rear Speaker RH
R15 Rear Speaker LH
F11 Front Door Speaker RH
F10 Front Door Speaker LH
T7 Tweeter RH
T6 Tweeter LH
J3 Junction Connector
RR–
RR+
RL–
RL+
FR–
FR+
FL–
FL+
L/R
GND
IM1
IM2
IL2
IB2