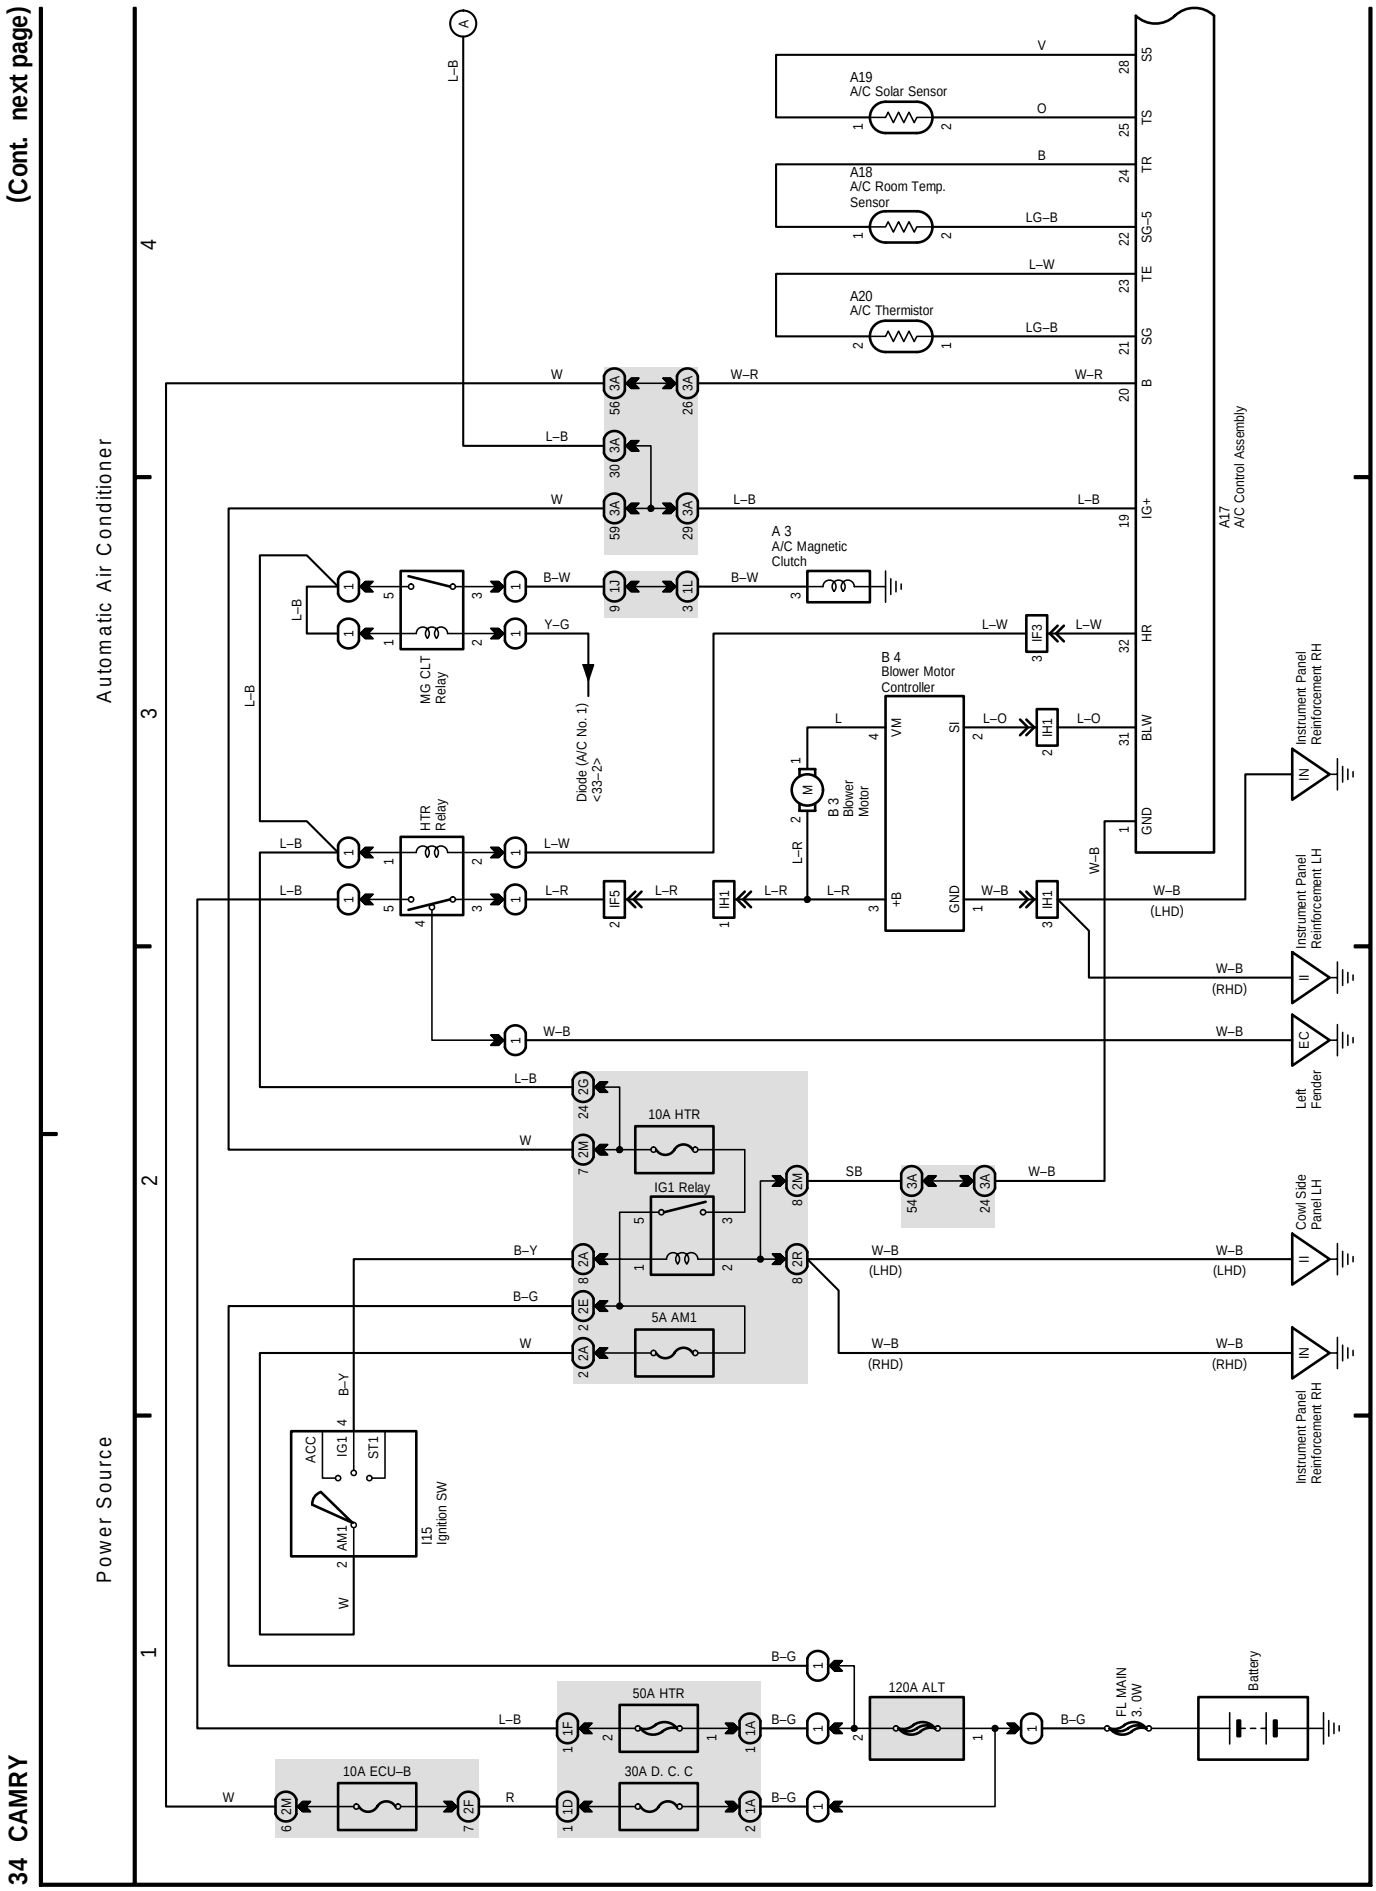
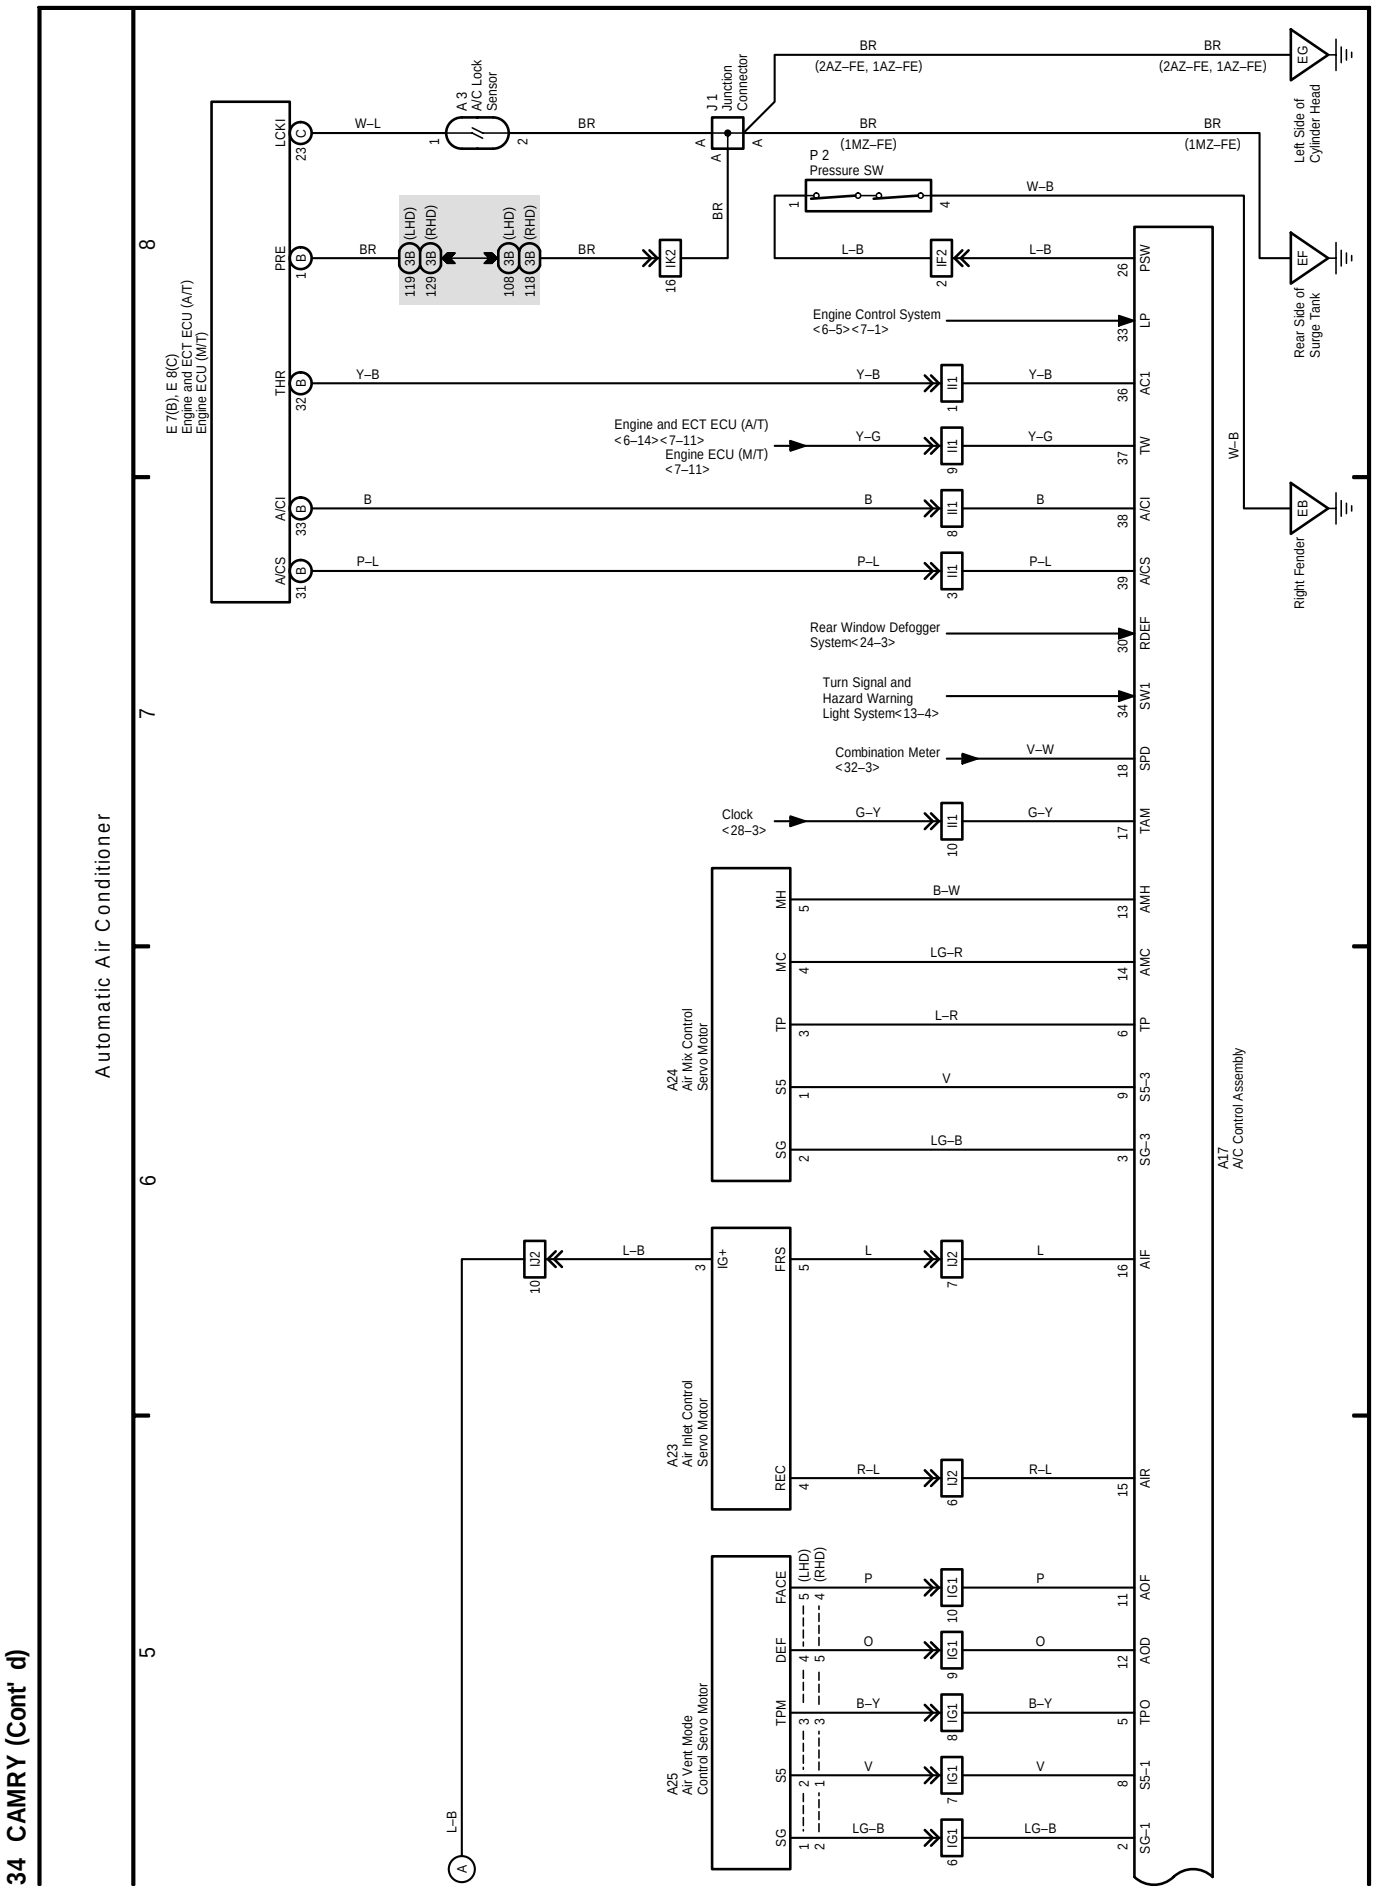

(Cont. next page)
Automatic Air Conditioner
Power Source
A19
A/C Solar Sensor
A18
A/C Room Temp.
Sensor
A20
A/C Thermistor
A17
A/C Control Assembly
A 3
A/C Magnetic
Clutch
MG CLT
Relay
Diode (A/C No. 1)
<33–2>
HTR
Relay
B 4
Blower Motor
Controller
B 3
Blower
Motor
10A HTR
IG1 Relay
5A AM1
I15
Ignition SW
50A HTR
120A ALT
10A ECU–B
30A D. C. C
FL MAIN
3. 0W
Battery
Instrument Panel
Reinforcement RH
Instrument Panel
Reinforcement LH
Cowl Side
Panel LH
Left
Fender
(LHD)
(RHD)


34 CAMRY (Cont' d)
Automatic Air Conditioner
E 7(B), E 8(C)
Engine and ECT ECU (A/T)
Engine ECU (M/T)
LCKI
PRE
THR
A/CI
A/CS
A 3
A/C Lock Sensor
J 1
Junction Connector
P 2
Pressure SW
Left Side of Cylinder Head
Rear Side of Surge Tank
Right Fender
Engine Control System
Rear Window Defogger System
Turn Signal and Hazard Warning Light System
Combination Meter
Clock
Engine and ECT ECU (A/T)
Engine ECU (M/T)
A24
Air Mix Control Servo Motor
A23
Air Inlet Control Servo Motor
A25
Air Vent Mode Control Servo Motor
A17
A/C Control Assembly
W–L
BR
(2AZ–FE, 1AZ–FE)
(1MZ–FE)
W–B
L–B
Y–B
Y–G
B
P–L
G–Y
V–W
B–W
LG–R
L–R
V
LG–B
L
R–L
P
O
B–Y
(LHD)
(RHD)