
## Position of Parts in Instrument Panel

## [LHD]

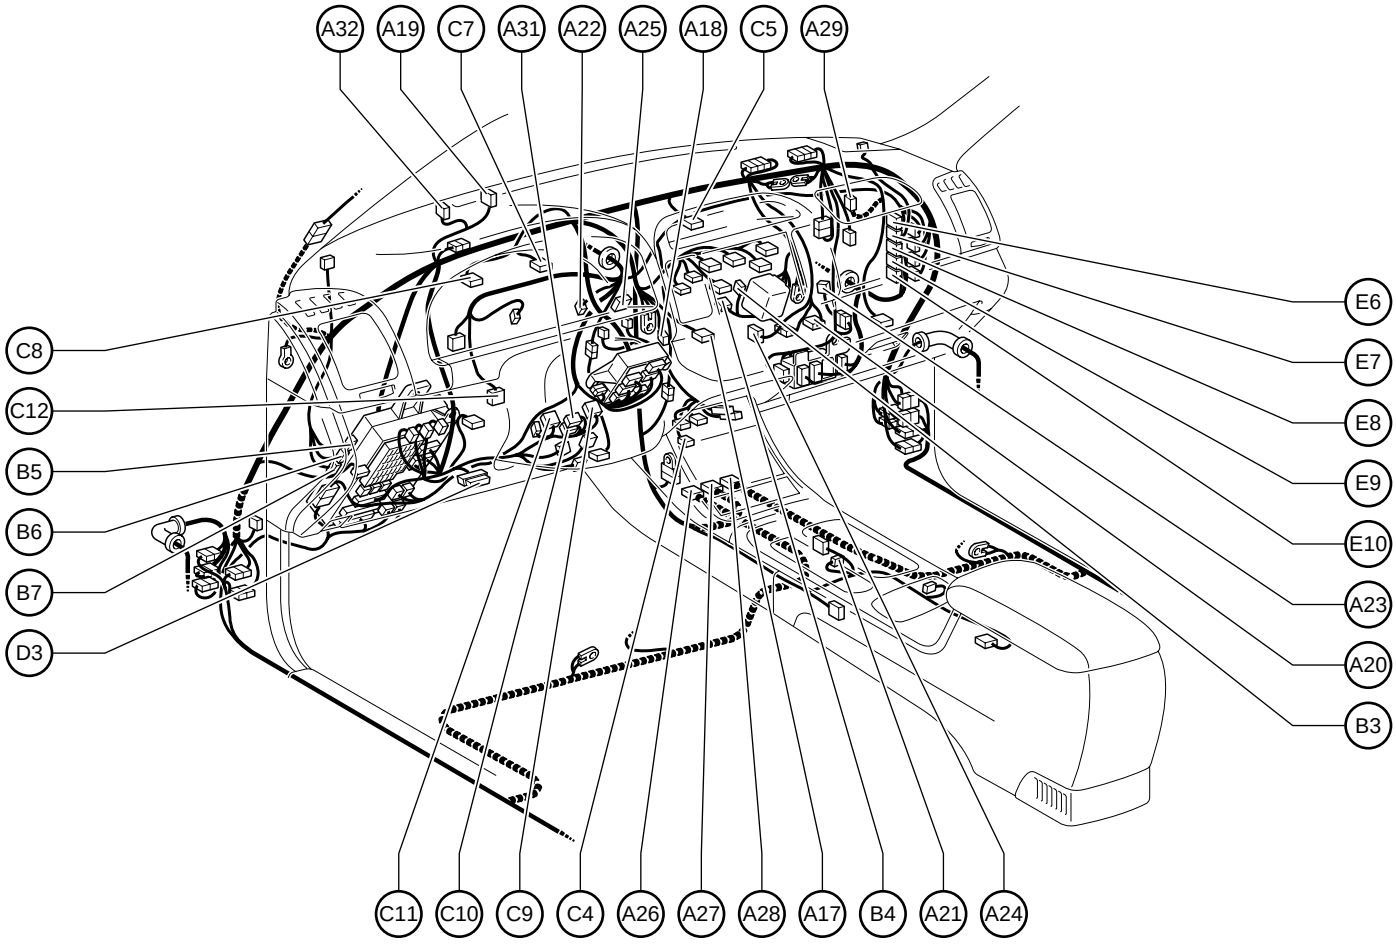


A 17 A/C Control Assembly
A 18 A/C Room Temp. Sensor
A 19 A/C Solar Sensor
A 20 A/C Thermistor
A 21 A/T Shift Lever Illumination
O/D Main SW
A 22 Accelerator Position Sensor
A 23 Air Inlet Control Servo Motor
A 24 Air Mix Control Servo Motor
A 25 Air Vent Mode Control Servo Motor
A 26 Airbag Sensor Assembly
A 27 Airbag Sensor Assembly
A 28 Airbag Sensor Assembly
A 29 Airbag Squib (Front Passenger Airbag Assembly)
A 31 Airbag Squib (Steering Wheel Pad)
A 32 Automatic Light Control Sensor

B 3 Blower Motor
B 4 Blower Motor Controller
B 5 Body ECU
B 6 Body ECU
B 7 Body ECU

C 4 Cigarette Lighter
Cigarette Lighter Illumination
C 5 Clock
C 7 Combination Meter
C 8 Combination Meter
C 9 Combination SW
C 10 Combination SW
C 11 Combination SW
C 12 Cruise Control Clutch SW

D 3 DLC3

E 6 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 7 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 8 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 9 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 10 Engine and ECT ECU (A/T)
Engine ECU (M/T)