
Position of Parts in Body

[LHD]

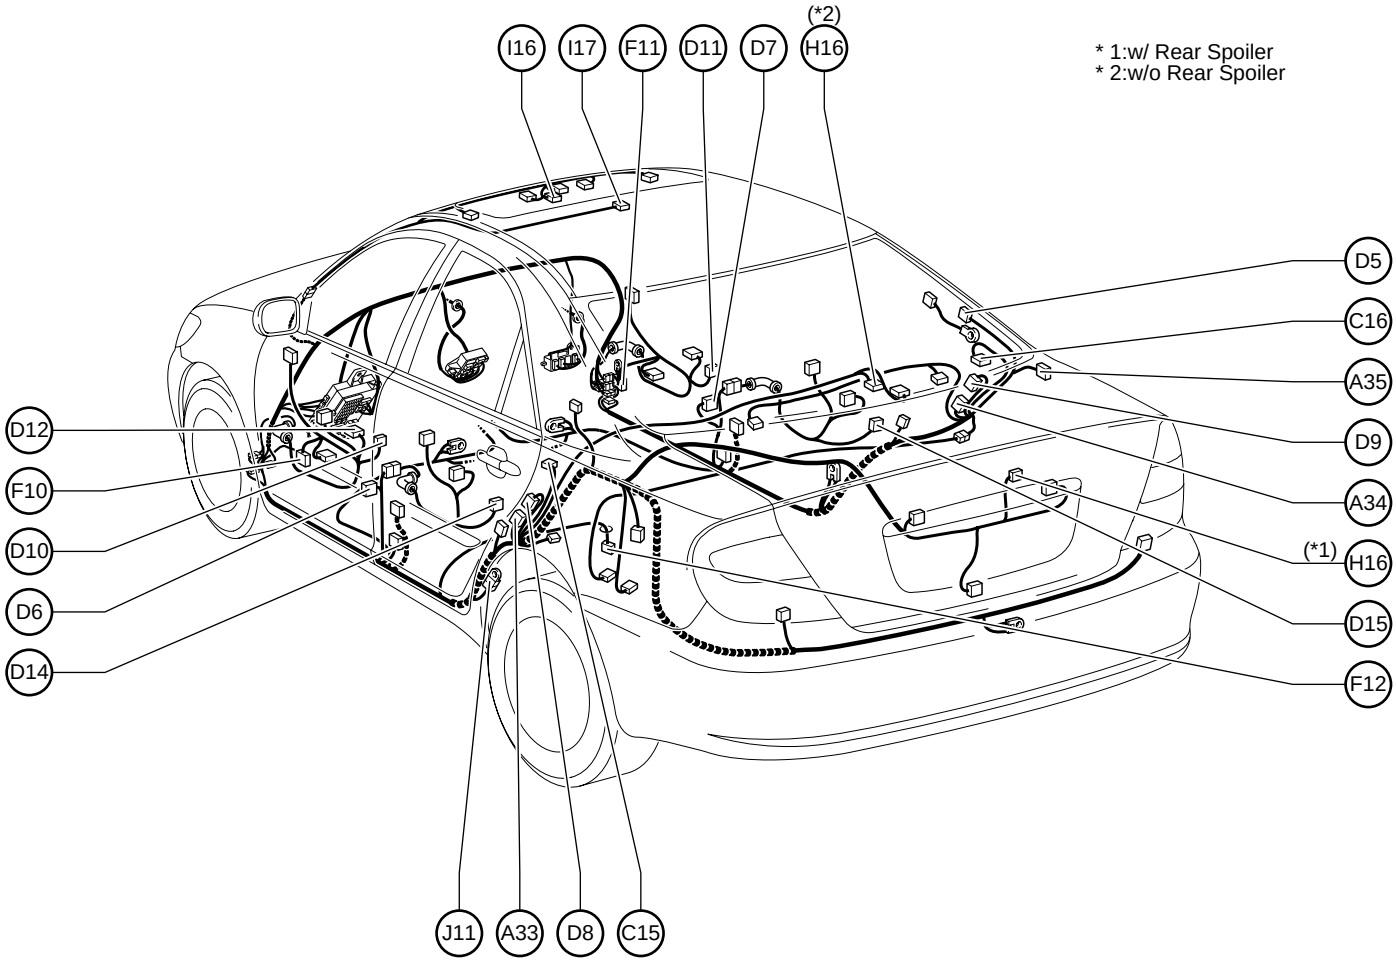

A33 ABS Speed Sensor Rear LH
A34 ABS Speed Sensor Rear RH
A35 Auto Antenna Control Relay

C15 Curtain Shield Airbag Squib LH
C16 Curtain Shield Airbag Squib RH

D 5 Door Control Receiver
D 6 Door Courtesy SW Front LH
D 7 Door Courtesy SW Front RH
D 8 Door Courtesy SW Rear LH
D 9 Door Courtesy SW Rear RH
D10 Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
D11 Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
D12 Door Lock Control SW Front LH
Power Window Master SW
D14 Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
D15 Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH

F 10 Front Door Speaker LH
F 11 Front Door Speaker RH
F 12 Fuel Pump
Fuel Sender

H16 High Mounted Stop Light

I 16 Inner Mirror
I 17 Interior Light

J 11 Junction Connector