
Position of Parts in Seat

[LHD : w/ Power Seat]

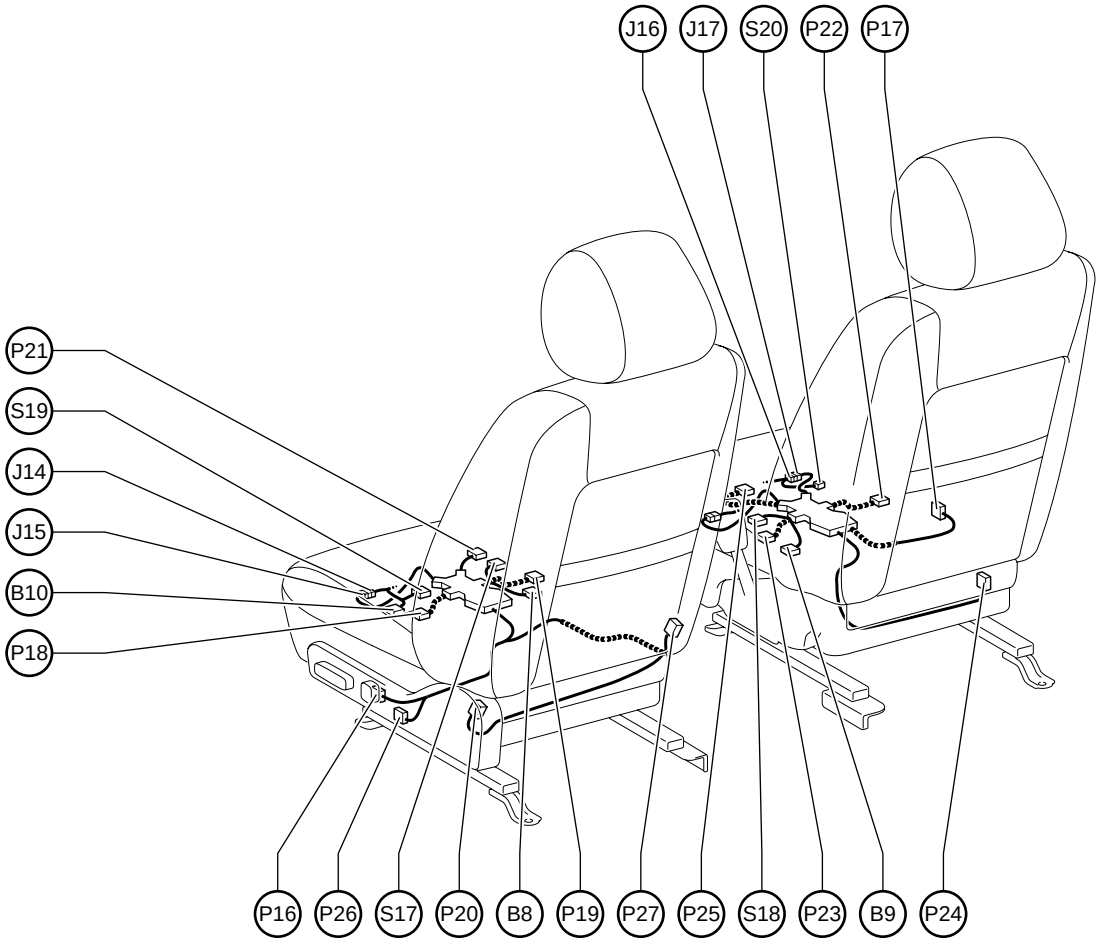

B 8 Buckle SW LH
B 9 Buckle SW RH
Occupant Detection Sensor
B10 Buckle SW LH
Seat Position Airbag Sensor

J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector

P16 Power Seat Control SW (Driver's Seat)
P17 Power Seat Control SW (Front Passenger's Seat)
P18 Power Seat Motor (Driver's Seat Front Vertical Control)
P19 Power Seat Motor (Driver's Seat Lifter Control)
P20 Power Seat Motor (Driver's Seat Reclining Control)
P21 Power Seat Motor (Driver's Seat Slide Control)
P22 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P23 Power Seat Motor
(Front Passenger's Seat Lifter Control)
P24 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P25 Power Seat Motor
(Front Passenger's Seat Slide Control)
P26 Power Seat Control SW
(Driver's Seat Lumbar Support Control)
P27 Power Seat Motor
(Driver's Seat Lumbar Support Control)

S17 Seat Heater LH
S18 Seat Heater RH
S19 Side Airbag Squib LH
S20 Side Airbag Squib RH