
Position of Parts in Seat

[LHD : w/o Power Seat]

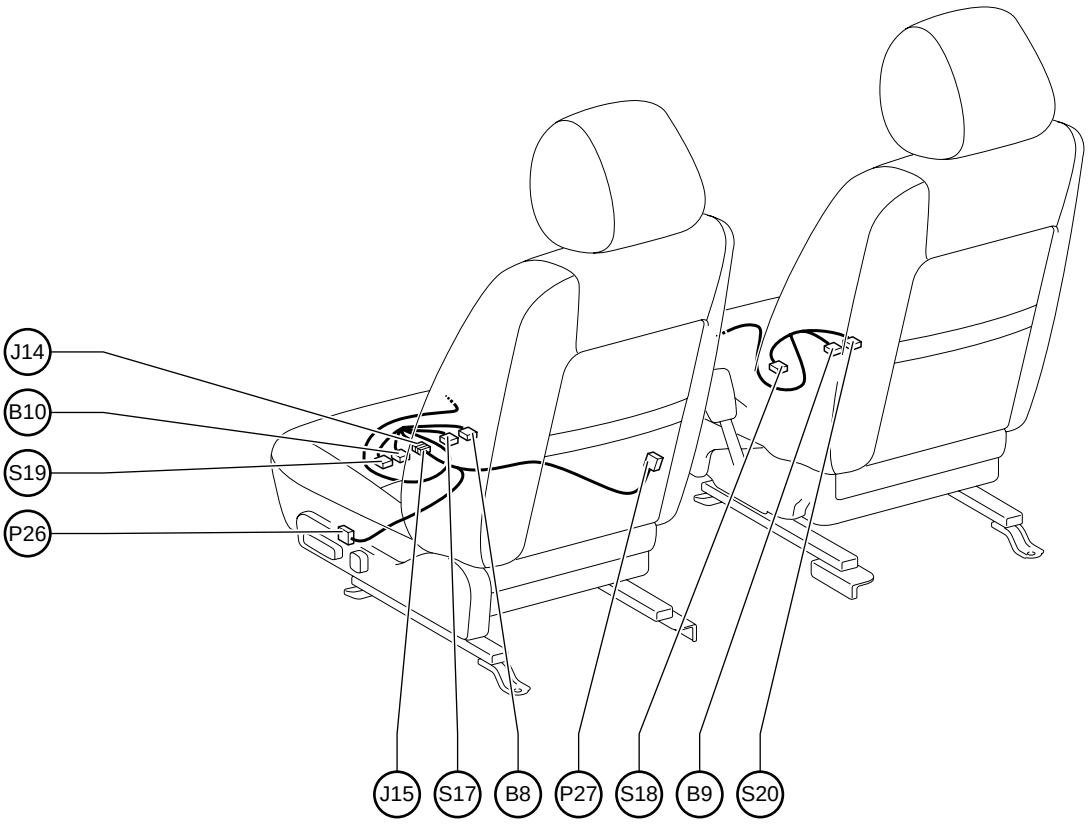

B 8 Buckle SW LH
B 9 Buckle SW RH
Occupant Detection Sensor
B10 Buckle SW LH
Seat Position Airbag Sensor

J 14 Junction Connector
J 15 Junction Connector

P26 Power Seat Control SW
(Driver's Seat Lumbar Support Control)
P27 Power Seat Motor
(Driver's Seat Lumbar Support Control)

S17 Seat Heater LH
S18 Seat Heater RH
S19 Side Airbag Squib LH
S20 Side Airbag Squib RH