
Position of Parts in Engine Compartment

[RHD : 1MZ–FE]

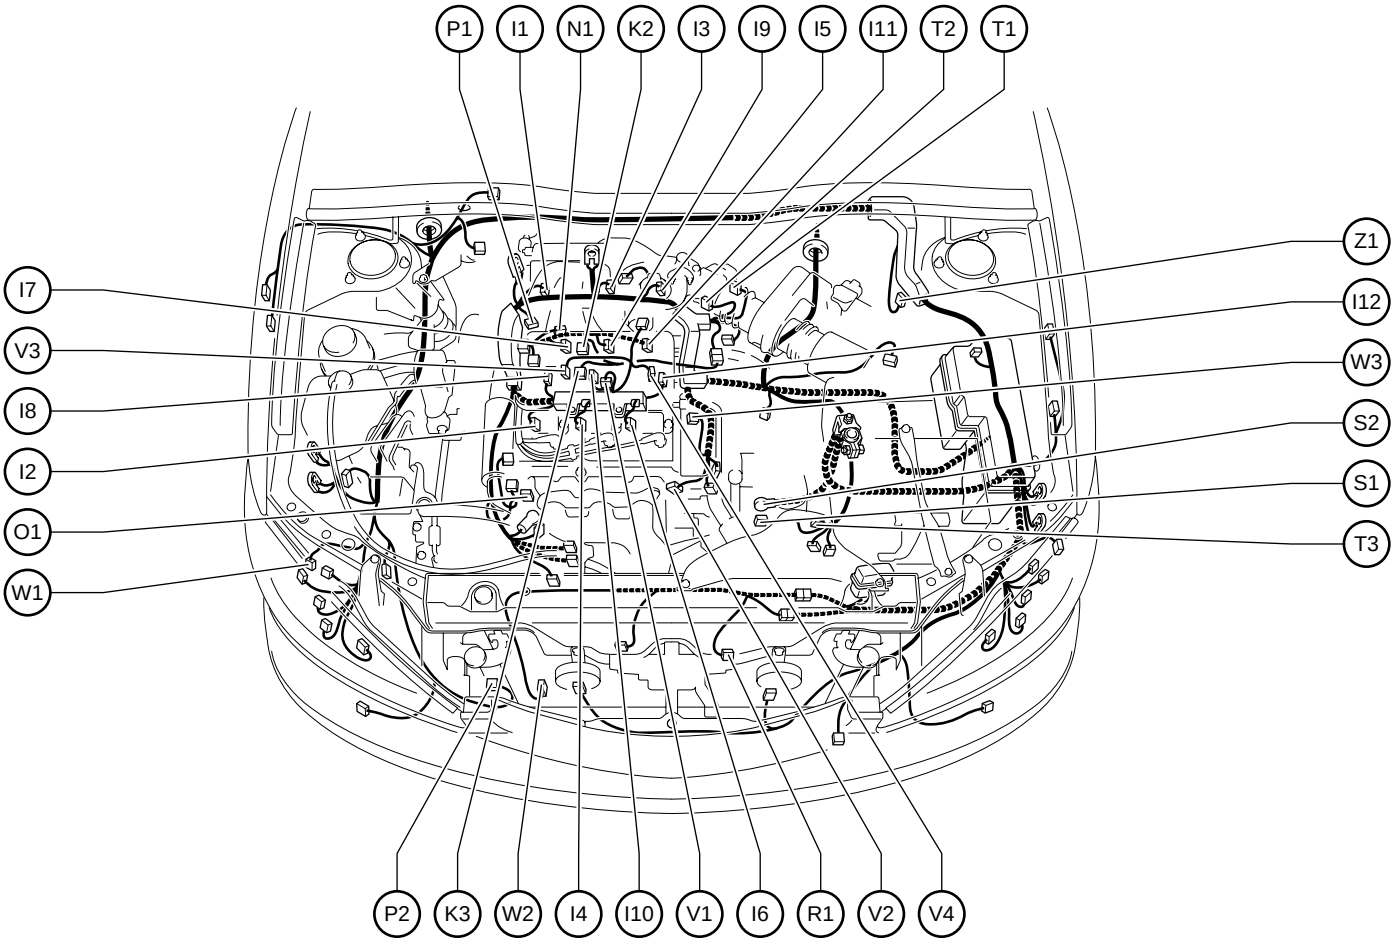

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 4 Ignition Coil and Igniter No.4
I 5 Ignition Coil and Igniter No.5
I 6 Ignition Coil and Igniter No.6
I 7 Injector No.1
I 8 Injector No.2
I 9 Injector No.3
I 10 Injector No.4
I 11 Injector No.5
I 12 Injector No.6

K 2 Knock Sensor (Bank 1)
K 3 Knock Sensor (Bank 2)

N 1 Noise Filter (Ignition)

O 1 Oil Pressure Sensor

P 1 Power Steering Oil Pressure SW
P 2 Pressure SW

R 1 Radiator Fan Motor

S 1 Starter
S 2 Starter

T 1 Throttle Control Motor
T 2 Throttle Position Sensor
T 3 Turbine Speed Sensor

V 1 VSV (ACIS)
V 2 VSV (AICV)
V 3 VSV (EGR)
V 4 VSV (EVAP)

W 1 Washer Motor
W 2 Water Temp. SW No.1
W 3 Water Temp. SW No.2

Z 1 Option Connector (Engine Hood Courtesy SW)