
Position of Parts in Engine Compartment

[RHD : 2AZ–FE, 1AZ–FE]

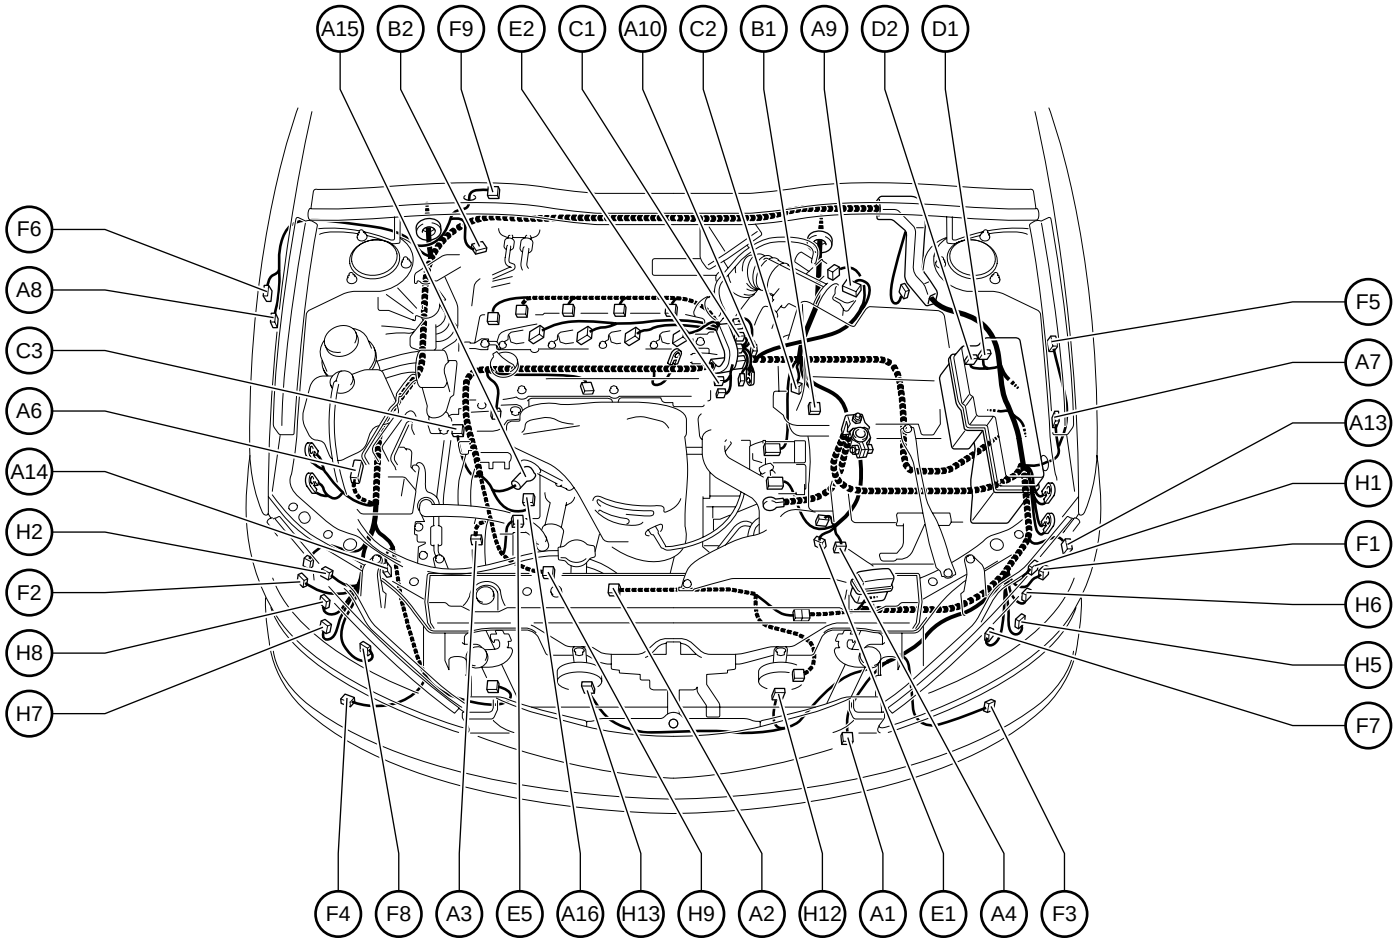

A 1 A/C Ambient Temp. Sensor
A 2 A/C Condenser Fan Motor
A 3 A/C Lock Sensor
A/C Magnetic Clutch
A 4 A/T Indicator Light SW
Back–Up Light SW
Neutral Start SW
A 6 ABS Actuator
A 7 ABS Speed Sensor Front LH
A 8 ABS Speed Sensor Front RH
A 9 Air Flow Meter
A10 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
A13 Airbag Sensor Front LH
A14 Airbag Sensor Front RH
A15 Alternator
A16 Alternator

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Counter Gear Speed Sensor
C 3 Crankshaft Position Sensor

D 1 Diode (A/C No.1)
D 2 Diode (A/C No.2)

E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 5 Engine Oil Level Sensor

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Fog Light LH
F 4 Front Fog Light RH
F 5 Front Side Turn Signal Light LH
F 6 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 5 Headlight LH (High)
H 6 Headlight LH (Low)
H 7 Headlight RH (High)
H 8 Headlight RH (Low)
H 9 Heated Oxygen Sensor (Bank 1 Sensor 2)
H12 Horn (High)
H13 Horn (Low)