
Position of Parts in Seat

[RHD : w/o Power Seat]

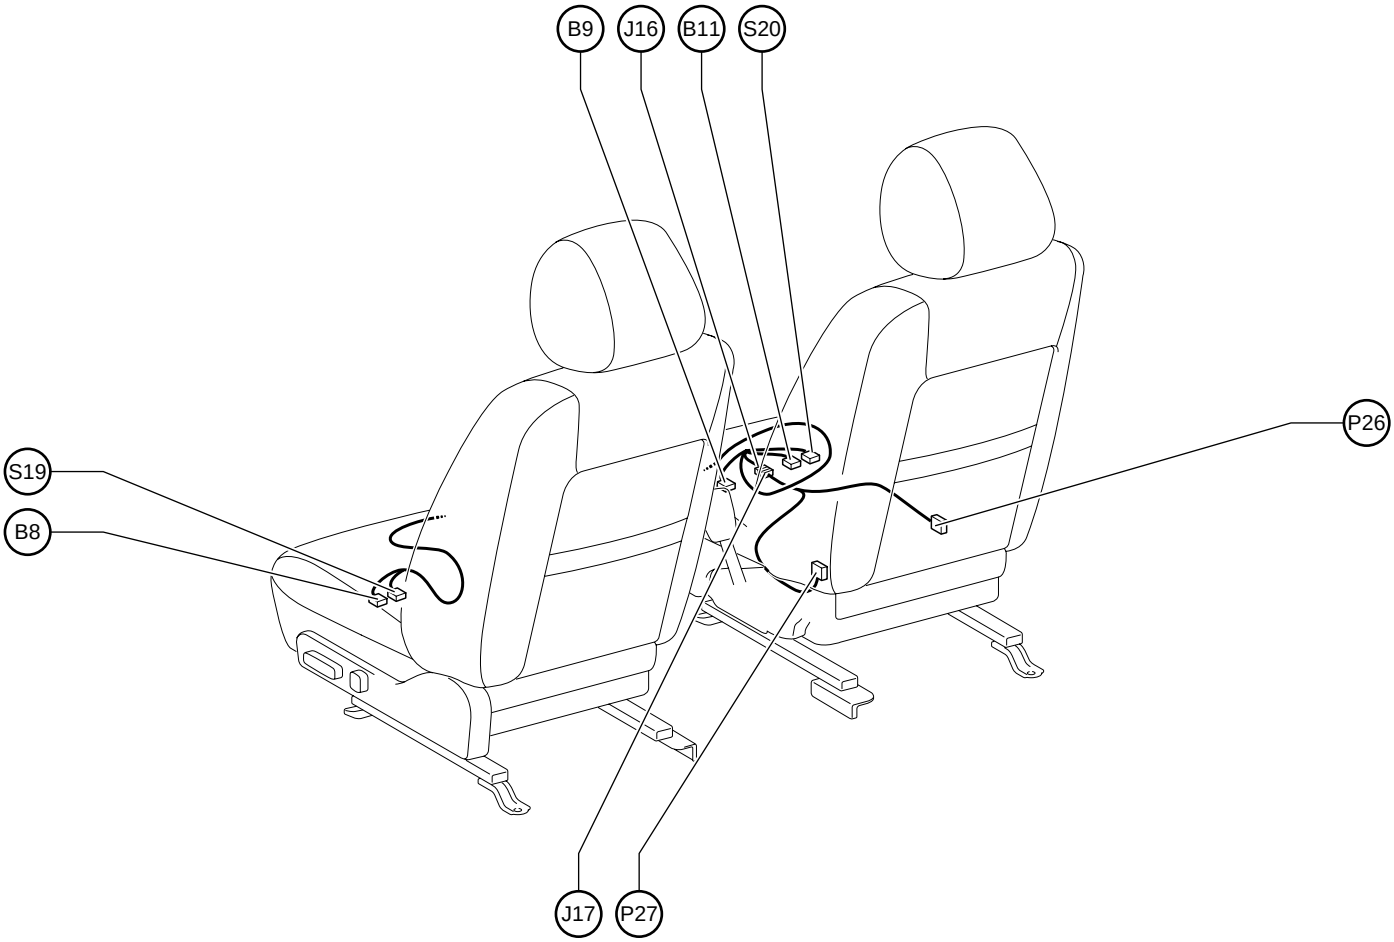

B 8 Buckle SW LH
Occupant Detection Sensor
B 9 Buckle SW RH
B 11 Buckle SW RH
Seat Position Airbag Sensor

J 16 Junction Connector
J 17 Junction Connector

P 26 Power Seat Control SW
(Driver's Seat Lumbar Support Control)
P 27 Power Seat Motor
(Driver's Seat Lumbar Support Control)

S 19 Side Airbag Squib LH
S 20 Side Airbag Squib RH